



PowerA  
B0C8RLN2Z2  
Wireless  
Controller for  
Nintendo Switch



# PowerA B0C8RLN2Z2 Wireless Controller for Nintendo Switch User Manual

[Home](#) » [PowerA](#) » PowerA B0C8RLN2Z2 Wireless Controller for Nintendo Switch User Manual 

## Contents

- 1 [PowerA B0C8RLN2Z2 Wireless Controller for Nintendo Switch](#)
- 2 [Product Information](#)
- 3 [Product Usage Instructions](#)
- 4 [INSTALL BATTERIES](#)
- 5 [UNDERSTANDING LED INDICATORS](#)
- 6 [TROUBLESHOOTING](#)
- 7 [BATTERY FIRE/EXPLOSION WARNING](#)
- 8 [FCC STATEMENT](#)
- 9 [WARRANTY](#)
- 10 [Documents / Resources](#)
  - 10.1 [References](#)
- 11 [Related Posts](#)



**PowerA B0C8RLN2Z2 Wireless Controller for Nintendo Switch**



## Product Information

- Manufacturer: AC Brands USA LLC
- Model: Wireless Controller for Nintendo Switch
- Power Source: (2) AA Alkaline Batteries
- LED Indicators: Top, Front, Bottom

## Product Usage Instructions

### Connecting to the Internet and System Updates:

1. Connect your Nintendo Switch to the Internet.
2. System updates are typically downloaded automatically when online.
3. Select "System Settings" from the HOME menu, then scroll down to "System" to view the System Update version and check for updates.
4. For further assistance, search for system updates on the Nintendo Support website.

### Installing Batteries

1. Remove the Battery Compartment Door.
2. Install two AA Alkaline Batteries.
3. Ensure your Nintendo Switch console is powered ON.

### Wireless Controller Pairing:

1. In the HOME menu, select "Controllers," then "Change Grip and Order."
2. While viewing the next screen, press and hold the SYNC the controller to be paired for at least three seconds to complete the pairing process.

## Troubleshooting


1. If your wireless controller is not pairing, ensure you follow the wireless pairing process correctly.
2. Try removing and replacing the AA Alkaline Batteries to reset the wireless controller.

## FAQs

**Q: How do I reset the wireless controller if it's not pairing?**


A: Remove and replace the AA Alkaline Batteries to reset the wireless controller.

## WIRELESS CONTROLLER

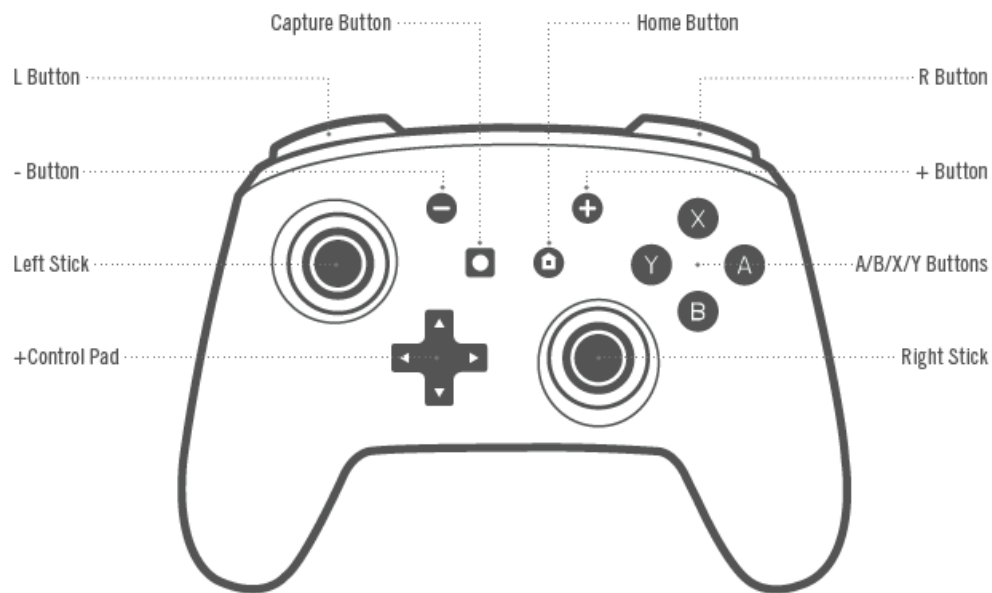

## TWO YEAR LIMITED WARRANTY

For warranty details or support with your authentic PowerA accessories, please visit [PowerA.com/Support](https://www.powera.com/support)

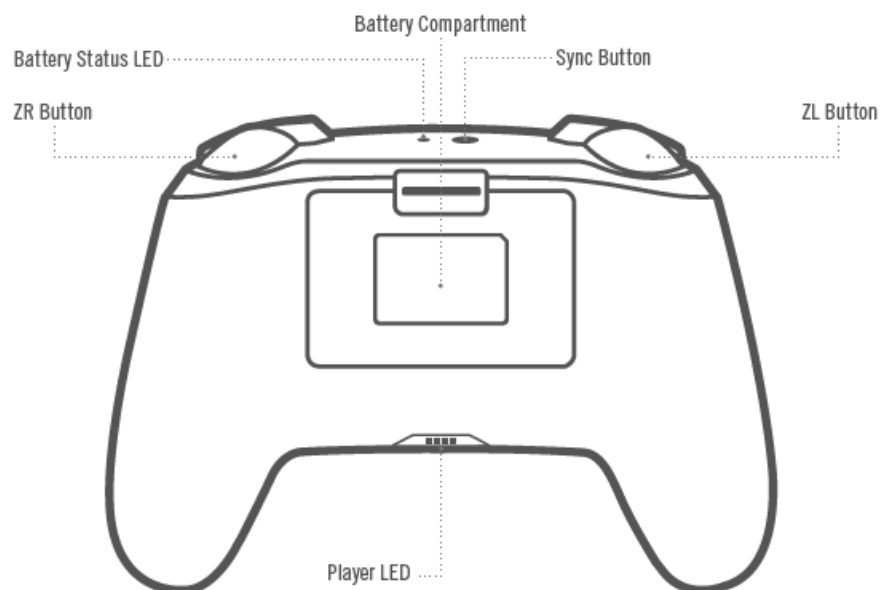

## SET UP

Please ensure your Nintendo Switch is using the most recent system update for optimal compatibility with PowerA Wireless controllers.

1. Connect your Nintendo Switch to the Internet.
2. Typically, system updates will be downloaded automatically when connected online.
3. Select 'System Settings' from HOME menu, then scroll down to 'System' to see System Update version and automatically check for system update.

For additional help, search 'System Update' from Nintendo Support website.

## INSTALL BATTERIES

1. Remove the Battery Compartment Door and install (2) AA Alkaline Batteries (included)
2. Confirm your Nintendo Switch console is powered ON.



## WIRELESS PAIRING

From the HOME Menu, select 'Controllers', then 'Change Grip/Order.' While the following screen is displayed, press and hold down the SYNC Button for at least three seconds on the controller you wish to pair.

### NOTE:

- Do not touch the Left Stick or Right Stick when pairing your controller.
- After the controller is paired with a Nintendo Switch console, it will auto-connect again when the console and controller are powered ON.
- Up to eight wireless controllers can be connected to a Nintendo Switch console at the same time. The maximum number of controllers that can be connected will vary depending on the type of controllers and features that are used.
- A maximum of two wireless controllers can be connected to a Nintendo Switch system while using Bluetooth audio. To pair additional wireless controllers disconnect the Bluetooth audio device.
- Pressing the Sync Button while connected will turn the controller off.
- This controller can be used when the Nintendo Switch is docked or undocked.
- This controller does not support HD rumble, IR camera, or amiibo™ NFC.

## UNDERSTANDING LED INDICATORS

1. The Battery Status LED will blink red when the internal battery is near depletion.
2. The four LEDs on the bottom indicate player number 1-8 and will cycle from left to right during wireless pairing.

## **TROUBLESHOOTING**

1. Q1. My Wireless Controller is not pairing.

A1. Confirm batteries are properly installed according to the polarity indicated in the battery compartment and are not drained, used or damaged.

A2. Confirm you are following the 'Wireless Pairing' process. A3. Remove and replace the Alkaline batteries to reset the Wireless controller.

2. Q2. Why don't I feel any vibration?

A1. This product does not support vibration functionality. For latest FAQs, visit [PowerA.com/Support](https://PowerA.com/Support)

## **BATTERY LEAKAGE WARNING**

- Leakage of chemicals contained within the battery pack can cause personal injury as well as damage to game controller.
- Avoid allowing battery chemicals to contact skin. If contact occurs, immediately wash thoroughly with soap and water.
- If liquid leaking from a battery pack comes into contact with your eyes, DO NOT RUB EYES! Immediately flush eyes thoroughly with clean running water and seek medical attention to prevent injury to eyes.
- Leaking batteries may make popping sounds.

### **To avoid battery leakage:**

- Do not mix used and new batteries. Replace all batteries at the same time.
- Do not mix different brands of batteries.
- Alkaline batteries recommended. Do not use Lithium ion, nickel cadmium (nicad), or carbon zinc batteries.
- Do not leave batteries in the controller for long periods of non-use.
- Do not recharge alkaline or non-rechargeable batteries.
- Do not put the batteries in backwards. Make sure that the positive (+) and negative (-) ends are facing in the correct directions. Insert the negative end first.
- When removing batteries, remove the positive end first.
- Do not use damaged, deformed or leaking batteries.
- Remove exhausted batteries from the controller.

## **BATTERY FIRE/EXPLOSION WARNING**

### **To avoid fire or explosion:**

- Do not place battery in a fire or hot oven.
- Do not crush, cut, or subject battery to impact.
- Do not leave battery in a high-temperature environment such as direct sunlight or inside of a car during hot weather.

- Do not leave battery in a low-pressure environment (e.g., in checked baggage of an airplane).
- Do not short circuit the power terminals.

### **MOTION WARNING**

Playing video games can make your muscles, joints, skin or eyes hurt. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, skin irritation or eyestrain:

Avoid excessive play. Take a 10- to 15-minute break every hour, even if you don't think you need it. Parents should monitor their children for appropriate play.

- If your hands, wrists, arms or eyes become tired or sore while playing, or if you feel symptoms such as tingling, numbness, burning or stiffness, stop and rest for several hours before playing again.
- If you continue to have any of the above symptoms or other discomfort during or after play, stop playing and see a doctor.

### **FCC STATEMENT**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

### **CAN ICES-003(B)/NMB-003(B)**

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference;
2. This device must accept any interference, including interference that may cause undesired operation of the device.

### **MANUFACTURED FOR**

## CONTACT/SUPPORT

For support with your authentic PowerA accessories, please visit [PowerA.com/Support](https://www.PowerA.com/Support)

## WARRANTY

2-Year Limited Warranty: Visit [PowerA.com/Support](https://www.PowerA.com/Support) for details.

### WARRANTY AGAINST DEFECTS, AUSTRALIA & NEW ZEALAND CUSTOMERS

This product is provided with a 2-year warranty against defects in manufacturing or materials from the date of purchase. ACCO Brands will either repair or replace a faulty or defective product subject to the conditions of this warranty. Claims under this warranty must be made to the place of purchase within the warranty period with proof of purchase by the original purchaser only. Expenses associated with a warranty claim are the responsibility of the consumer. Conditions of this warranty are on our website: [PowerA.com/warranty-ANZ](https://www.PowerA.com/warranty-ANZ)

This warranty is provided in addition to other rights or remedies available to you under the law. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss

or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

### DISTRIBUTOR CONTACT DETAILS AUSTRALIAN CUSTOMERS

ACCO Brands Australia Pty Ltd  
Locked Bag 50, Blacktown BC, NSW 2148  
Phone: 1300 278 546 | Email: [consumer.support@powera.com](mailto:consumer.support@powera.com)

### NEW ZEALAND CUSTOMERS

ACCO Brands New Zealand Limited  
PO Box 11-677, Ellerslie, Auckland 1542  
Phone: 0800 800 526 | Email: [consumer.support@powera.com](mailto:consumer.support@powera.com)

### ADDITIONAL LEGAL

© 2024 ACCO Brands. All Rights Reserved. PowerA and PowerA Logo are trademarks of ACCO Brands.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by ACCO Brands is under license. Other trademarks and trade names are those of their respective owners.

© Nintendo. Nintendo Switch is a trademark of Nintendo.

### REGIONAL COMPLIANCE SYMBOLS

More information available via web-search of each symbol name.



—Waste Electrical and Electronic Equipment (WEEE): Electrical and electronic devices and batteries contain materials and substances that can have damaging effects on human health and the environment. This symbol indicates that this device and the battery must not be treated as household waste and must be collected separately. Dispose of the device via a collection point for the recycling of waste electrical and electronic equipment within the EU, UK and in other European countries that operate separate collection systems for waste electrical and electronic equipment and batteries. By disposing of the device and the battery in the proper manner, you help to avoid possible hazards for the environment and public health that could otherwise be caused by improper treatment of waste equipment. The recycling of materials contributes to the conservation of natural resources.

Conformit Europeene aka European Conformity (CE): A declaration from the manufacturer that the product meets

applicable European Directives and Regulations for health, safety, and environmental protection.



UK Conformity Assessment (UKCA): A declaration from the manufacturer that the product meets applicable UK Regulations for health, safety, and environmental protection.



The RCM (Regulatory Compliance Mark) indicates that the product complies with the relevant Australian and New Zealand electrical safety, electromagnetic compatibility (EMC) and related requirements.

### EU/UK DECLARATION OF CONFORMITY

Hereby, ACCO Brands USA LLC declares the wireless controller is in compliance with Directive 2014/53/EU and UK Radio Equipment Regulation 2017, as well as other essential requirements and relevant provisions of EU directives and UK legislation. The full text of the declaration of conformity is available at the following internet address: [PowerA.com/compliance](https://PowerA.com/compliance)

### WIRELESS SPECIFICATIONS FOR EU & UK COMPLIANCE

Frequency Range: 2.4 – 2.4835 GHz






Max E.I.R.P.: <10 dBm

### Documents / Resources



[PowerA B0C8RLN2Z2 Wireless Controller for Nintendo Switch](#) [pdf] User Manual  
B0C8RLN2Z2 Wireless Controller for Nintendo Switch, B0C8RLN2Z2, Wireless Controller for Nintendo Switch, Controller for Nintendo Switch, Nintendo Switch

### References

-  [ACCO Brands](#)
-  [PowerA | PowerA](#)
-  [Declaration of Conformity | PowerA](#)
-  [Support | PowerA](#)
-  [Warranty-ANZ | PowerA](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.