



PowerA MOGA XP5-i Plus Bluetooth Controller for Mobile and Cloud Gaming on iOS User Manual

[Home](#) » [PowerA](#) » PowerA MOGA XP5-i Plus Bluetooth Controller for Mobile and Cloud Gaming on iOS User Manual 



Bluetooth Controller for
Mobile & Cloud Gaming on iOS



USER MANUAL

Made for
 tv | iPhone | iPad | iPod





Contents

1 SETUP

1.1 CHARGING CONTROLLER + POWER BANK

1.2 CHARGE LEVEL INDICATOR

1.3 WIRELESS MODE

1.4 POWERING OFF

1.5 GAMING CLIP

1.6 INTEGRATED POWER BANK

1.7 ASSIGNING THE ADVANCED GAMING BUTTONS

1.8 FAQs

1.9 BATTERY WARNING

1.10 MOTION WARNING

1.11 FCC STATEMENT

1.12 CAN ICES-003(B)/NMB-003(B)

1.13 RADIATION EXPOSURE STATEMENT

1.14 MANUFACTURED BY

1.15 CONTACT/SUPPORT

1.16 WARRANTY

1.17 AUSTRALIAN WARRANTY STATEMENT

1.18 AU WHOLESALE DISTRIBUTOR

1.19 ADDITIONAL LEGAL

1.20 REGIONAL COMPLIANCE SYMBOLS

1.21 DECLARATION OF CONFORMITY

1.22 WIRELESS RATING FOR EU COMPLIANCE

1.23 ELECTRICAL RATING INFORMATION

2 Documents / Resources

3 Related Posts


SETUP

For best results, fully charge controller and power bank prior to first use.



CHARGING CONTROLLER + POWER BANK

- Using a Lightning Cable, connect to the Lightning port at the top of the controller, and connect the other end to any powered USB source.
- When charging, four LEDs will display the charging level from 25-50-75-100%.

CHARGE LEVEL INDICATOR


Check battery charge level by pressing the battery status button () on the front lower left of the controller. The LEDs will indicate the current charge level from 25-100% even when the controller is off.

WIRELESS MODE

- If the controller is off, press the Home button () to turn it on (LED will illuminate).
- Press and hold the **Bluetooth** sync button () on the back of the controller for 2 seconds to enter pairing mode (LED will flash rapidly).
- Enter the **Bluetooth** settings on your device and choose the MOGA controller. The pairing LED will turn solid when connected.

NOTE: A previously paired device will automatically pair to the controller when powered on.

POWERING OFF

Hold the Home button () for 5 seconds to turn the controller off and save battery capacity.

GAMING CLIP

A detachable gaming clip is included for use with gaming on your phone. You can use USB cables with a clip attached for charging.

1. Slide Controller into Mobile Gaming Clip by tipping top edge in first.
2. Push the controller's bottom edge down into the clip until it locks into place.
3. There are two adjustable articulation dials on the Mobile Gaming Clip. Rotate dials in opposite directions to loosen and adjust position. Rotate dials back to tighten after reaching desired viewing angle.
4. To insert the phone, push the top edge of the phone against the top of the phone grip to expand upward.
5. Push the bottom of the phone down flat into place as you reach the top limit of the phone grip. Adjust phone horizontally as needed to center over the controller.
6. Remove clip by pulling front edge forward to release from the notch.

INTEGRATED POWER BANK

A Power Bank built into the controller allows you to charge your phone during gameplay or while the controller is off.

- Connect the USB-C end of a Lightning Cable to the USB-C port at the top of the controller.
- If you don't have a USB-C to Lightning cable, you can use the included USB-C to USB adapter.

- During gameplay, move the Power Bank switch below the right thumbstick to the right (on) to start charging. If you prefer to use battery power to extend controller usage time rather than charge the phone, move the switch to the left (off).
- To charge the mobile device when the controller is not in use, simply connect a cable between controller and device to begin charging (Power Bank Switch must be ON).

ASSIGNING THE ADVANCED GAMING BUTTONS

1. Press the Program Button on the bottom of the controller for 3 seconds. The LED Connection Indicator will flash, signaling the controller is in assign mode.
2. . Press 1 of the following buttons (A/B/X/Y/L1/R1/L2/R2/Left Stick Press/Right Stick Press/D- pad) to re-assign. Then press the Advanced Gaming Button (AGR or AGL) that you wish to assign. The LED connection indicator will stop flashing, signaling the Advanced Gaming Button has been set.
3. Repeat for the remaining Advanced Gaming Button.

Note: Advanced Gaming Button assignments will remain in memory even after being disconnected.


RESETTING THE ADVANCED GAMING BUTTONS

1. Hold the Program Button down for 2 seconds. The LED Connection Indicator will slowly flash, signaling the controller is in assign mode.
2. Press the previously assigned button for 5 seconds, and the function will be cleared.

FAQS

For the latest FAQs, visit PowerA.com/Support

PROBLEM: My controller will not power on?

SOLUTION: Confirm the controller is fully charged by pressing the battery status button () on the front lower left of the controller. Plug into recharge as needed.

PROBLEM: I do not see MOGA controller listed in mobile devices' Bluetooth settings?

SOLUTION: Press and hold the Bluetooth sync button () on the back of the controller for 2 seconds to enter pairing mode (LED will flash rapidly).

PROBLEM: The integrated power bank is not functioning?

SOLUTION: Confirm the controller has more than 25% charge and the Power Bank button is switched on

BATTERY WARNING

Don't attempt to replace the rechargeable battery yourself- you may damage the battery, which could cause overheating, fire, and injury. The Lithium-ion battery in your device should be serviced or recycled by PowerA or an authorized provider and must be recycled or disposed of separately from household waste. Dispose of batteries according to your local environmental laws and guidelines. Don't use or leave the product containing rechargeable batteries exposed to very high temperatures (e.g. at strong direct sunlight or in a vehicle in extremely hot weather). Otherwise, it can overheat, catch fire, or the performance will degenerate, and the service life will be shortened. Don't use the rechargeable battery item in a location where static electricity is rich, otherwise, the internal safety devices may be damaged, causing a harmful situation. In case the electrolyte gets into the eyes due to the leakage of the battery, do not rub your eyes! Rinse eyes with clean running water and seek medical attention immediately. Otherwise, it may injure the eyes or cause a loss of sight. If the battery gives off an odor, generates heat, or in any way appears abnormal during use, recharging, or storage, immediately remove it from the battery charger and place it in a contained vessel such as a metal box. Be aware discarded batteries may cause fire, do not heat the controller or throw it into the fire.

MOTION WARNING

Playing video games can make your muscles, joints, skin, or eyes hurt. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, skin irritation or eyestrain:

1. Avoid excessive play. Take a 10 to 15-minute break every hour, even if you don't think you need it. Parents should monitor their children for appropriate play.
2. If your hands, wrists, arms or eyes become tired or sore while playing, or if you feel symptoms such as tingling, numbness, burning or stiffness, stop and rest for several hours before playing again.
3. If you continue to have any of the above symptoms or other discomforts during or after play, stop playing and see a doctor.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

CAN ICES-003(B)/NMB-003(B)

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

RADIATION EXPOSURE STATEMENT

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 0cm between the radiator and your body.

MANUFACTURED BY

CONTACT/SUPPORT

For support with your authentic PowerA accessories, please visit PowerA.com/Support.

WARRANTY

2-Year Limited Warranty: Visit PowerA.com/Support for details.

AUSTRALIAN WARRANTY STATEMENT

This product comes with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If purchased within Australia or New Zealand, this product comes with a one-year warranty from the date of purchase. Defects in the product must have appeared within one year from the date of purchase, in order to claim the warranty. All warranty claims must be facilitated back through the retailer of purchase in accordance with the retailer's return policies and procedures. Any expenses incurred, as a result of returning the product to the retailer of purchase are the full responsibility of the consumer.

AU WHOLESALE DISTRIBUTOR

Level 2, 2 Darling Street South Yarra, Australia VIC 3141

bluemouth.com.au

Email: support@bluemouth.com.au

+61 (3) 9867 2666

ADDITIONAL LEGAL

© 2021 ACCO Brands USA LLC. MOGA, PowerA, MOGA by PowerA logo, and PowerA Logo are trademarks of ACCO Brands Corporation. Apple, iPhone, and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries. All other trademarks are the property of their respective owners.

REGIONAL COMPLIANCE SYMBOLS

More information is available via web-search of each symbol name.

	WEEE (Waste of electrical and electronic equipment) symbol requires disposal outside of other household waste per local regulations. Contact your city office, waste disposal service, or retailer for guidance.
	The CE (Conformité Européenne aka European Conformity) mark is a declaration from the manufacturer that the product meets applicable European Directives and Regulations for health, safety, and environmental protection.
	The UKCA (UK Conformity Assessment) mark is a declaration from the manufacturer that the product meets applicable UK Regulations for health, safety, and environmental protection.
	The Regulatory Compliance Mark is a visible indication of a product's compliance with all applicable ACMA (Australian Communications and Media Authority) regulatory arrangements, including all technical and record-keeping requirements regarding the electrical safety and/or electromagnetic compatibility (EMC).

DECLARATION OF CONFORMITY

Hereby, ACCO Brands USA LLC at 4 Corporate Way, Lake Zurich, IL 60047 USA, declares that this wireless controller is in compliance with Directive 2014/53/EU and the relevant UK statutory requirements. The full text of the EU Declaration of Conformity is available at the following internet address: PowerA.com/Compliance

WIRELESS RATING FOR EU COMPLIANCE

Frequency Range: 2402MHz – 2480MHz | **Max E.I.R.P.:** 6.16dBm

ELECTRICAL RATING INFORMATION

Battery: DC3.7V

FR, ES, DE, IT, PT
TRANSLATIONS TO FOLLOW



ACCO Brands USA LLC, 4 Corporate Way, Lake Zurich, IL 60047

ACCOBRANDS.com

POWERA.com

MADE IN CHINA



[PowerA MOGA XP5-i Plus Bluetooth Controller for Mobile and Cloud Gaming on iOS](#) [pdf]

User Manual

1509754DA, YFK-1509754DA, YFK1509754DA, MOGA, XP5-i Plus, Bluetooth Controller for Mobile and Cloud Gaming on iOS, MOGA XP5-i Plus Bluetooth Controller for Mobile and Cloud Gaming on iOS