




PowerA XB1 Spectra Enhanced Wired Controller User Manual

[Home](#) » [PowerA](#) » PowerA XB1 Spectra Enhanced Wired Controller User Manual 



**SPECTRA
ENHANCED
WIRED CONTROLLER
USER MANUAL**

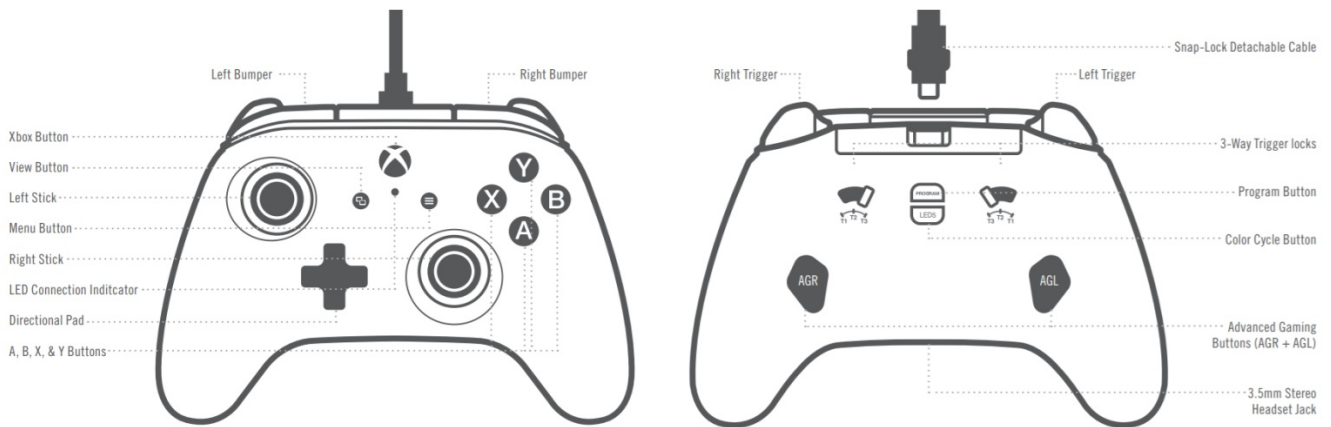

Customer Service
 Service client
PowerA.com/Support
 BDA, LLC.
 15525 Woodinville-Redmond Rd NE
 Woodinville, WA 98072

Contents

1	CONTENTS
2	SET UP
3	ILLUMINATION
4	TRIGGER LOCKS
5	ASSIGNING ADVANCED GAMING BUTTONS
6	RESETTING ADVANCED GAMING BUTTONS
7	TROUBLESHOOTING
8	MOTION WARNING
9	FCC STATEMENT
10	CAN ICES-3(B)/NMB-3(B)
11	MANUFACTURED BY
12	CONTACT/SUPPORT
13	WARRANTY
14	AUSTRALIAN WARRANTY STATEMENT
15	AU WHOLESALE DISTRIBUTOR
16	ADDITIONAL LEGAL
17	REGIONAL COMPLIANCE SYMBOLS
18	DECLARATION OF CONFORMITY
19	Documents / Resources
19.1	References
20	Related Posts

CONTENTS

- Spectra Enhanced Wired Controller for Xbox One
- Removable 9.8ft USB Cable
- User Manual

SET UP

1. With your Xbox One console powered “OFF”, connect the 9.8ft USB cable by plugging it into any available USB port on your Xbox One console. Connect the other end to the Micro USB port on your PowerA Enhanced Wired Controller. Hold down the Xbox Button until your console powers “ON”. The controller’s LED Connection Indicator will illuminate to indicate your controller is connected.
2. With your Xbox One console powered “ON”, connect the 9.8ft USB cable by plugging it into any available USB port on your Xbox One console. Connect the other end to the Micro USB port on your PowerA Enhanced Wired Controller. The controller’s LED Connection Indicator will illuminate to indicate your controller is connected.
NOTE: To remove the cable, squeeze two side buttons near the port and pull gently. USB cable also includes an inline release plug closer to the end of the cable that will disconnect when needed. For player and controller assignment reference your official Xbox One user’s manual.

ILLUMINATION

1. Press the button marked LEDs on the back of the controller to control LED colors.
2. Repeated presses will select one of seven individual LED colors, an auto-cycle of all colors, or off.
3. Press and hold the LEDs button for 3 seconds turn the LED off.

TRIGGER LOCKS

- Adjust pull-distance of the triggers by sliding lock switch on the back to the left or right
- Each trigger can be adjusted separately

ASSIGNING ADVANCED GAMING BUTTONS

1. Press and hold the program button for 2-3 seconds on the back of the controller. The program LED indicator will flash, signaling the controller is in assigned mode.
2. Press 1 of the following buttons (A/B/X/Y/RB/LB/ RT/LT/Left Stick Press/Right Stick Press/D-pad) to re-assign. Then press the Advanced Gaming Button (AGR or AGL) that you wish to assign. The Program LED indicator will stop flashing, signaling the Advanced Gaming Button has been set.
3. Repeat for the remaining Advanced Gaming Button.

NOTE: Advanced Gaming Button assignments will remain in memory even after disconnected.

RESETTING ADVANCED GAMING BUTTONS

1. Hold the program button down for 2-3 seconds. The LED Connection Indicator will slowly flash, signaling the controller is in program mode.
2. Press and hold the assigned AGR/AGL Button for 5 seconds to reset to no function.

TROUBLESHOOTING

For current FAQs, visit [PowerA.com/support](https://www.powera.com/support)

Q: Controller will not connect to Xbox One console?

A: Confirm your Xbox One console is powered "ON".

A: Confirm your TV is set to the proper Video Input and that you can see the Xbox One console interface on your TV screen.

A: Confirm cable is properly connected to your Xbox One console.

A: Confirm cable is properly connected to your PowerA Enhanced Wired Controller.

Q: Controller is connected but has no function?

A: Confirm you are using the Player #1 controller. For more troubleshooting refer to your Xbox One console User Manual.

MOTION WARNING

Playing video games can make your muscles, joints, skin or eyes hurt. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, skin irritation or eyestrain:

- Avoid excessive play. Take a 10 to 15-minute break every hour, even if you don't think you need it. Parents should monitor their children for appropriate play.
- If your hands, wrists, arms or eyes become tired or sore while playing, or if you feel symptoms such as tingling, numbness, burning, or stiffness, stop and rest for several hours before playing again.
- If you continue to have any of the above symptoms or other discomforts during or after play, stop playing and see a doctor.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

CAN ICES-3(B)/NMB-3(B)

This device contains license-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science, and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference;
2. This device must accept any interference, including interference that may cause undesired operation of the device

MANUFACTURED BY

Bensussen Deutsch & Associates, LLC. (BDA, LLC.)

15525 Woodinville-Redmond Rd. NE

Woodinville, WA 98072

BDAINC.com | POWERA.com

CONTACT/SUPPORT

For support with your authentic PowerA accessories, please visit PowerA.com/Support.

WARRANTY

2-Year Limited Warranty: Visit PowerA.com/support for details.

AUSTRALIAN WARRANTY STATEMENT

This product comes with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable

quality and the failure does not amount to a major failure. If purchased within Australia or New Zealand, this product comes with a one-year warranty from the date of purchase. Defects in the product must have appeared within one year from the date of purchase, in order to claim the warranty. All warranty claims must be facilitated back through the retailer of purchase in accordance with the retailer's return policies and procedures. Any expenses incurred, as a result of returning the product to the retailer of purchase are the full responsibility of the consumer.

AU WHOLESALE DISTRIBUTOR

Level 2, 2 Darling Street South Yarra, Australia VIC 3141
bluemouth.com.au | Email: support@bluemouth.com.au
+61 (3) 9867 2666

ADDITIONAL LEGAL

PowerA and the PowerA logo are trademarks of Bensussen Deutsch and Associates, LLC. TM and © Bensussen Deutsch and Associates, LLC.

This product is manufactured under license from Microsoft Corporation. Microsoft, Xbox, Xbox LIVE, Xbox One, and the Xbox logos are trademarks of the Microsoft group of companies.

All other trademarks are the property of their respective owners.

REGIONAL COMPLIANCE SYMBOLS

More information is available via web-search of each symbol name.



The WEEE (Waste of electrical and electronic equipment) symbol requires battery disposal outside of other household waste per local regulations. Contact your city office, waste disposal service, or retailer for guidance.



CE (Conformité Européene aka European Conformity) is a certification mark that indicates conformity with health, safety, and environmental protection standards for products sold within the European Economic Area.




The Regulatory Compliance Mark is a visible indication of a product's compliance with all applicable ACMA (Australian Communications and Media Authority) regulatory arrangements, including all technical and record-keeping requirements regarding the electrical safety and/or electromagnetic compatibility (EMC).

DECLARATION OF CONFORMITY

Hereby, Bensussen Deutsch & Associates LLC at 15525 Woodinville-Redmond Road NE, Woodinville, WA 98072 USA, declares that this wired controller is in compliance with Directive 2014/30/EU. The full text of the EU Declaration of Conformity is available at the following internet address: PowerA.com/compliance

Documents / Resources

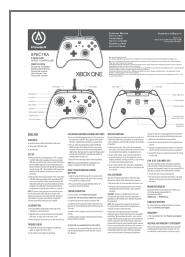

[PowerA XB1 Spectra Enhanced Wired Controller](#) [pdf] User Manual
XB1, Spectra Enhanced Wired Controller

References

- [!\[\]\(fd4127b9e2af37bd6ea0fa06afa8e6d8_img.jpg\) BDA Home](#)
- [!\[\]\(3278d6283d12f18012b5aa7d40747611_img.jpg\) bluemouth.com.au](#)
- [!\[\]\(bb96b32142ec45f72f12316beae3ef61_img.jpg\) llc.tm - This is a premium name](#)
- [!\[\]\(a75d0d7d1ac0ea815a0c027a77b137d5_img.jpg\) PowerA | PowerA](#)
- [!\[\]\(adab168ecea4e2ae40993afba3fcd26e_img.jpg\) PowerA | PowerA](#)
- [!\[\]\(e95ea1a0e297340f96c3d715d76d8c23_img.jpg\) Declaration of Conformity | PowerA](#)
- [!\[\]\(0e0cdd76cf8fb3c858658faf72d7f324_img.jpg\) Support | PowerA](#)

Manuals+.