



**XBGPOPWI Wired
Controller**



PowerA XBGPWPWI Wired Controller User Manual

[Home](#) » [PowerA](#) » PowerA XBGPWPWI Wired Controller User Manual 

Contents

- [1 PowerA XBGPWPWI Wired Controller](#)
- [2 Specifications](#)
- [3 OVERVIEW](#)
- [4 CONTENTS](#)
- [5 UP SET](#)
- [6 USING THE SHARE BUTTON](#)
- [7 TROUBLESHOOTING](#)
- [8 Frequently Asked Questions](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)




PowerA XBGPWPWI Wired Controller



Specifications

- **Model:** XBGPOPWI
- **Controller Type:** Wired
- **Cable Length:** 10 ft.
- **Connection:** USB
- **Features:** Xbox Button, View Button, Menu Button, A/B/X/Y Buttons, D-Pad, Share Button, Headset Jack

OVERVIEW

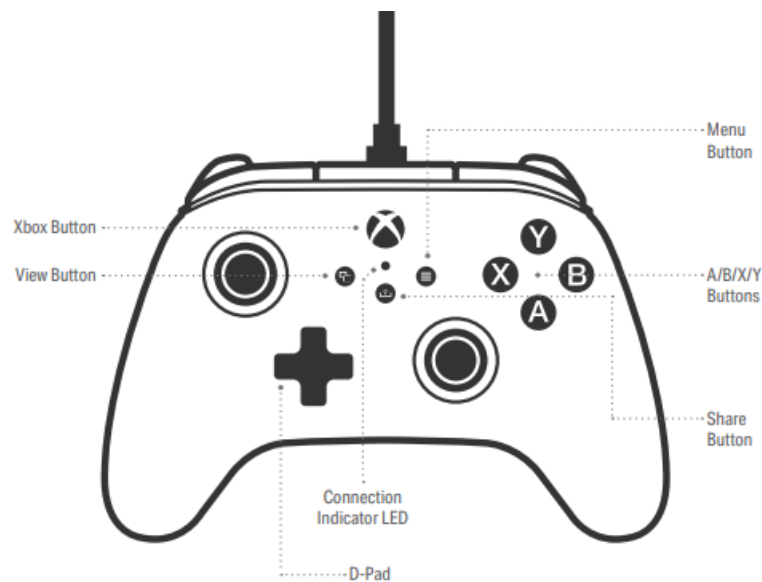

CONTENTS

- Xbox for Controller Wired PowerA•
- Cable USB .ft 10 Detachable•
- Manual User•


UP SET

1. If your Xbox is off, connect the USB cable between an available USB port on your console and the micro-USB port on your controller. Press the Xbox Button on the controller until the console powers on. The Connection Indicator LED will illuminate to indicate a successful connection.
2. If your Xbox console is already on, simply connect the USB cable into any available USB port on the console and connect the USB to your controller. The Connection Indicator LED will illuminate, indicating a successful connection.

NOTE: For player and controller assignment, reference your official Xbox user manual.

USING THE SHARE BUTTON

Refer to Xbox documentation for details on functions and features related to the Share button.

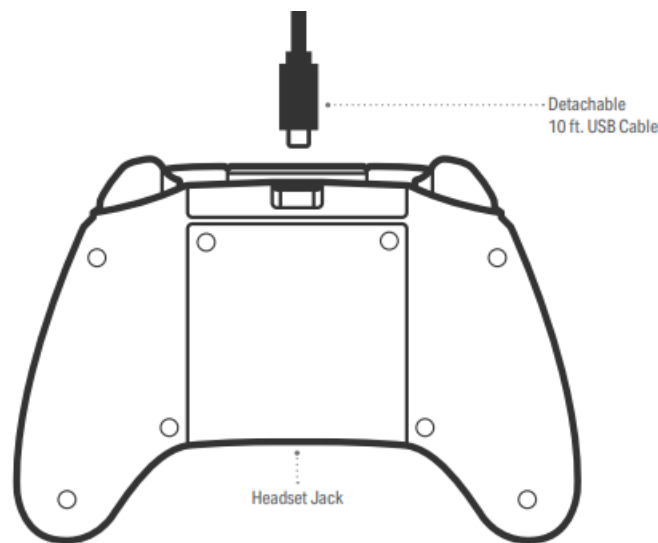

TROUBLESHOOTING

For current FAQs, visit [PowerA.com/support](https://www.powera.com/support).

Q: Controller will not connect to Xbox console?

- A: Confirm your Xbox console is powered "ON".
- A: Confirm that your TV is set to the proper video input and that you can see the Xbox console interface on your TV screen.
- A: Confirm the cable is properly connected to your Xbox console.
- A: Confirm the cable is properly connected to your PowerA Wired Controller.

Q: The Controller is connected but has no function?

- A: Confirm you are using the Player #1 controller. For more troubleshooting, refer to your Xbox console User Guide.



ACCO Brands USA LLC, 4 Corporate Drive, Lake Zurich, IL 60047 [ACCOBRANDS.COM](https://www.accobrands.com) | [POWERA.COM](https://www.powera.com) |
MADE IN CHINA

ADDITIONAL LEGAL


© 2025 ACCO Brands. All Rights Reserved. PowerA and PowerA Logo are trademarks of ACCO Brands. Microsoft, Xbox, Xbox “Sphere” Design, Xbox Series X|S, Xbox One, and Windows are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners. USB-C® is a registered trademark of USB Implementers Forum.

Frequently Asked Questions

Q: How do I connect the controller to my Xbox console?

A: Follow the setup instructions provided in the user manual to connect the controller via the USB cable.

Documents / Resources

	PowerA XBGPOPWI Wired Controller [pdf] User Manual XBGPOPWI, XBGPOPWI Wired Controller, Wired Controller, Controller
---	---

References

- [ACCO Brands](#)
- [PowerA | PowerA](#)
- [Support | PowerA](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.