



PowerA XP-ULTRA MOGA Multi-Platform Wireless Controller User Manual

[Home](#) » [PowerA](#) » PowerA XP-ULTRA MOGA Multi-Platform Wireless Controller User Manual 



XP-ULTRA
MULTI-PLATFORM
WIRELESS CONTROLLER
MULTI PLATEFORME SANS FIL MANETTE



USER MANUAL


phone and game sold separately

Contents

- [1 XP-ULTRA MOGA Multi-Platform Wireless Controller](#)
- [2 SETUP](#)
- [3 BATTERY LEAKAGE WARNING](#)
- [4 WARRANTY](#)
- [5 DISTRIBUTOR CONTACT DETAILS](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

XP-ULTRA MOGA Multi-Platform Wireless Controller



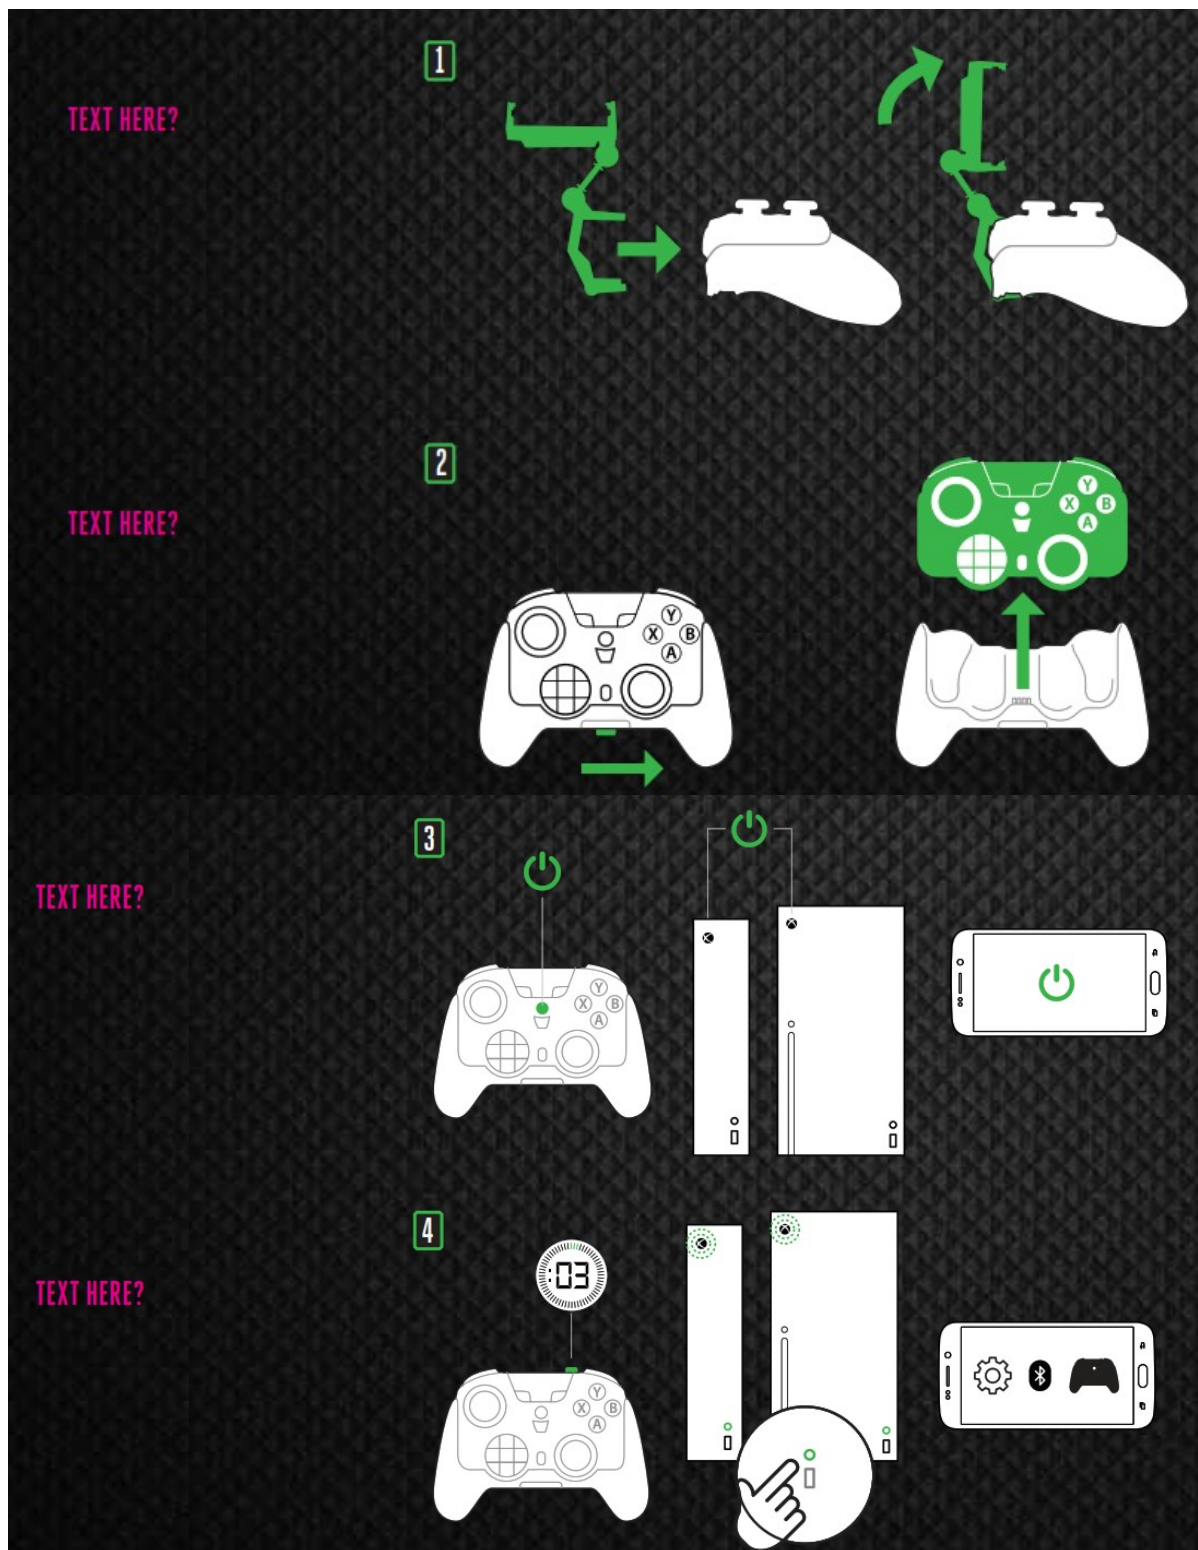


SETUP

For best results, fully charge controller prior to first use.

CHARGING CONTROLLER

- Using a USB-C Cable connect to the USB-C port at the top of the controller, and connect the other end to any powered USB source.
- When charging, four LEDs will display the charging level from 25-50-75-100%.



CHARGE LEVEL INDICATOR

Check battery charge level by pressing the Battery Status button () on the front of the controller. The LEDs will indicate the current charge level from 25-100% even when controller is off.



ATTACH AND REMOVE THE GRIP

- Slide the bottom of the controller into the top of the grip. Press firmly into the grip until the latch attaches to the controller.
- To remove the controller from the grip: slide the latch, on the bottom of the grip, to the right and pull the controller up.



WIRELESS MODE ANDROID

- If the controller is off, press the Home button () to turn it on (LED will illuminate).
- Press and hold the Pair button () on top of the controller for 2 seconds to enter pairing mode (LED will flash rapidly).
- Enter the Bluetooth settings on your device and choose the MOGA controller. The pairing LED will turn solid when connected.
- The player indicator LEDs will light up indicating which player number the controller is.

WIRELESS MODE PC BLUETOOTH

- If the controller is off, press the Home button () to turn it on (LED will illuminate).
- Press and hold the Pair button () on top of the controller for 2 seconds to enter pairing mode (LED will flash rapidly).
- Enter the Bluetooth settings on your PC and choose the MOGA controller. The pairing LED will turn solid when connected.
- The player indicator LEDs will light up indicating which player number the controller is.
- Some games may require the Microsoft Wireless Adapter to work.

WIRELESS MODE XBOX


- If the controller is off, press the Home button () to turn it on (LED will illuminate).
- Press the Pair button on the front of your Xbox Series X|S console.
- Press and hold the Pair button () on top of the controller until the LED indicator begins to flash.
- When the LED indicator stops flashing, the controller is connected to your Xbox console.
- ALTERNATIVE METHOD: Plug the controller into the Xbox console using the USB cable. The controller is now paired wirelessly to the console after unplugging the USB cable.

SWITCH FROM XBOX TO ANDROID DEVICE

- Press the Pair button (icon) twice to switch to the previously paired device.

NOTE: A previously paired device will automatically pair to the controller when powered on.

POWERING OFF

Hold the Home button () for 5 seconds to turn the controller off and save battery capacity.

GAMING CLIP

A detachable gaming clip is included for use with gaming on your phone. You can use USB cables with clip attached for charging.

1. Slide the gaming clip down on the top of the controller until it clicks into place.
2. There are two adjustable articulation dials on the Mobile Gaming Clip. Rotate dials in opposite directions to loosen and adjust position. Rotate dials back to tighten after reaching desired viewing angle.
3. To insert phone, push top edge of phone against top of phone grip to expand upward.
4. Push bottom of phone down flat into place as you reach top limit of phone grip. Adjust phone horizontally as needed to center over controller.
5. To remove the clip, press the level on the back and slide the clip off.

ASSIGNING THE ADVANCED GAMING BUTTONS

1. Press the Program Button on the bottom of the controller for 3 seconds. The LED Connection Indicator will flash, signaling the controller is in assign mode.
2. Press 1 of the following buttons (A/B/X/Y/L1/R1/L2/R2/Left Stick Press/Right Stick Press/D- pad) to re-assign. Then press the Advanced Gaming Button (AGR or AGL) that you wish to assign. The LED connection indicator will stop flashing, signaling the Advanced Gaming Button has been set.
3. Repeat for the remaining Advanced Gaming Button.

Note: Advanced Gaming Button assignments will remain in memory even after disconnected.


RESETTING THE ADVANCED GAMING BUTTONS

1. Hold the Program Button down for 2 seconds. The LED Connection Indicator will slowly flash, signaling the controller is in Assign Mode.
2. Press the previously assigned Advanced Gaming Button for 5 seconds, and the function will be cleared.

FAQS

For latest FAQs, visit [PowerA.com/Support](https://www.powera.com/support).

PROBLEM: My controller will not power on.

SOLUTION: Confirm the controller is fully charged by pressing the battery status button () on front lower left of controller. Plug in to recharge as needed.

PROBLEM: I do not see MOGA controller listed in mobile devices Bluetooth settings.

SOLUTION: Press and hold the Bluetooth sync button () on back of controller for 2 seconds to enter pairing mode (LED will flash rapidly).

PROBLEM: The integrated power bank is not functioning.

SOLUTION: Confirm the controller has more than 25% charge and Power Bank button is switched on.

BATTERY WARNING

- Do not attempt to repair the Li-ion battery yourself—you may damage the battery, which could cause overheating, fire, and injury.
- The Lithium-ion battery in your device should be serviced or recycled by PowerA or an authorized provider and

must be recycled or disposed of separately from household waste. Dispose of batteries according to your local environmental laws and guidelines.

- Do not use or leave a device containing Li-Ion batteries in a high-temperature environment (e.g., in strong direct sunlight, or in a vehicle in hot weather). High temperatures may cause batteries to overheat or catch fire, and the battery performance or longevity may be negatively affected.
- Do not use a device containing Li-Ion batteries in an environment with high levels of static electricity. Excessive static electricity can impair the batteries' internal safety measures, increasing the risk of overheating or fire.
- If the battery gives off an odor, generates heat, or in any way appears abnormal during use, recharging or storage, immediately remove it from any charging device and place it in a sealed fireproof container such as a metal box, or in a safe location away from people and flammable items.
- Discarded batteries may cause fire. Do not heat the controller or battery, or place either in or near fire.

BATTERY LEAKAGE WARNING

- Leakage of chemicals contained within the battery pack can cause personal injury as well as damage to game controller.
- Avoid allowing battery chemicals to contact skin. If contact occurs, immediately wash thoroughly with soap and water.
- If liquid leaking from a battery pack comes into contact with your eyes, DO NOT RUB EYES! Immediately flush eyes thoroughly with clean running water and seek medical attention to prevent injury to eyes.

MOTION WARNING

Playing video games can make your muscles, joints, skin or eyes hurt. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, skin irritation or eyestrain:

- Avoid excessive play. Take a 10- to 15-minute break every hour, even if you don't think you need it. Parents should monitor their children for appropriate play.
- If your hands, wrists, arms or eyes become tired or sore while playing, or if you feel symptoms such as tingling, numbness, burning or stiffness, stop and rest for several hours before playing again.
- If you continue to have any of the above symptoms or other discomfort during or after play, stop playing and see a doctor.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

CAN ICES-003(B)/NMB-003(B)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

RF EXPOSURE COMPLIANCE

This equipment complies with FCC/ISED radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. The portable device is designed to meet the requirements for exposure to radio waves established by the FCC/ISED. These requirements set a SAR limit of 4.0 W/kg averaged over 10 gram of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the Extremity.

MANUFACTURED FOR

ACCO Brands USA LLC, 4 Corporate Drive, Lake Zurich, IL 60047
ACCOBRANDS.com | POWERA.com | MADE IN CHINA

CONTACT/SUPPORT

For support with your authentic PowerA accessories, please visit PowerA.com/Support.

WARRANTY

2-Year Limited Warranty: Visit PowerA.com/Support for details.

WARRANTY AGAINST DEFECTS, AUSTRALIA & NEW ZEALAND CUSTOMERS

This product is provided with a 2-year warranty against defects in manufacturing or materials from the date of purchase. ACCO Brands will either repair or replace a faulty or defective product subject to the conditions of this warranty. Claims under this warranty must be made to the place of purchase within the warranty period with proof of purchase by the original purchaser only. Expenses associated with a warranty claim are the responsibility of the consumer. Conditions of this warranty are on our website:

PowerA.com/warranty-ANZ

This warranty is provided in addition to other rights or remedies available to you under the law. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

DISTRIBUTOR CONTACT DETAILS

AUSTRALIAN CUSTOMERS

ACCO Brands Australia Pty Ltd
Locked Bag 50, Blacktown BC, NSW 2148
Phone: 1300 278 546
Email: consumer.support@powera.com

NEW ZEALAND CUSTOMERS

ADDITIONAL LEGAL

© 2023 ACCO Brands. All Rights Reserved. PowerA and PowerA Logo are trademarks of ACCO Brands. Apple, iPhone, and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries. All other trademarks are the property of their respective owners.

REGIONAL COMPLIANCE SYMBOLS

More information available via web-search of each symbol name.



Waste Electrical and Electronic Equipment (WEEE): Electrical and electronic devices and batteries contain materials and substances that can have damaging effects on human health and the environment. This symbol indicates that this device and the battery must not be treated as household waste and must be collected separately.

Dispose of the device via a collection point for the recycling of waste electrical and electronic equipment within the EU, UK and in other European countries that operate separate collection systems for waste electrical and electronic equipment and batteries.

By disposing of the device and the battery in the proper manner, you help to avoid possible hazards for the environment and public health that could otherwise be caused by improper treatment of waste equipment. The recycling of materials contributes to the conservation of natural resources.



The CE (Conformité Européene aka European Conformity) mark is a declaration from the manufacturer that the product meets applicable European Directives and Regulations for health, safety, and environmental protection.



The UKCA (UK Conformity Assessment) mark is a declaration from the manufacturer that the product meets applicable UK Regulations for health, safety, and environmental protection




The Regulatory Compliance Mark is a visible indication of a product's compliance with all applicable ACMA (Australian Communications and Media Authority) regulatory arrangements, including all technical and record-keeping requirements regarding the electrical safety and/ or electromagnetic compatibility (EMC).

DECLARATION OF CONFORMITY

Hereby, ACCO Brands USA LLC declares the is in compliance with Directive 2014/53/EU and UK Radio Equipment Regulation 2017. The full text of the declaration of conformity is available at the following internet address: PowerA.com/Compliance

WIRELESS SPECIFICATIONS FOR EU & UK CONFORMITY

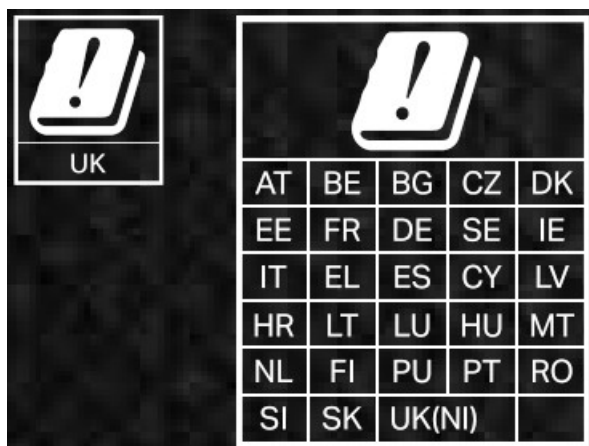

2.4G FREQUENCY RANGE: 5 2412MHz – 2472MHz; OUTPUT POWER: 9.83 dBm m	5G WI-FI FREQUENCY RANGE: 5180 – 5240MHz; 5260 – 5320MHz; 25500 – 5700MHz; 5745 – 5825MHz; OUTPUT POWER: 11.48 dBm	BLE FREQUENCY RANGE: 2.4 – 2.4835GHz; OUTPUT POWER: 5.83dBm
---	--	---

The band 5150-5350 MHz for this device are restricted to indoor use only









ACCO Brands, 4 Corporate Drive, Lake Zurich, IL 60047 | [ACCOBRANDS.com](https://www.accobrands.com) | [POWERA.com](https://www.powera.com) | MADE IN CHINA

Documents / Resources

	PowerA XP-ULTRA MOGA Multi-Platform Wireless Controller [pdf] User Manual 1526788DA, YFK-1526788DA, YFK1526788DA, XP-ULTRA, MOGA Multi-Platform Wireless Co ntroller, XP-ULTRA MOGA Multi-Platform Wireless Controller, Multi-Platform Wireless Controller , Wireless Controller, Controller
---	---

References

-  [ACCO Brands](#)
-  [PowerA](#) | [PowerA](#)
-  [Declaration of Conformity](#) | [PowerA](#)
-  [Support](#) | [PowerA](#)
-  [Warranty-ANZ](#) | [PowerA](#)
-  [gesetzeim-internet.de](#)