



## PowerA XP7.X+ Bluetooth Controller for Mobile & Cloud Gaming User Manual

[Home](#) » [PowerA](#) » PowerA XP7.X+ Bluetooth Controller for Mobile & Cloud Gaming User Manual 

PowerA XP7.X+ Bluetooth Controller for Mobile & Cloud Gaming User Manual



## Contents

- 1 Product Overview
- 2 PLAYING IN STANDARD MODE
- 3 USING THE GAMING STAND
- 4 CONTENTS
- 5 SETUP
- 6 CHARGING CONTROLLER + POWER BANK
- 7 CHARGE LEVEL INDICATOR
- 8 WIRELESS MODE
- 9 POWERING OFF
- 10 WIRED MODE
- 11 STANDARD MODE
- 12 GAMING STAND
- 13 WIRELESS INTEGRATED POWER BANK
- 14 ASSIGNING THE ADVANCED GAMING  
BUTTONS
- 15 RESETTING THE ADVANCED GAMING  
BUTTONS
- 16 FAQs
- 17 BATTERY WARNING – CAUTION
- 18 MOTION WARNING
- 19 WARRANTY
- 20 AUSTRALIAN WARRANTY STATEMENT
- 21 FCC STATEMENT
- 22 CAN ICES-3(B)/NMB-3(B)
- 23 MANUFACTURED BY
- 24 CONTACT/SUPPORT
- 25 AU WHOLESALE DISTRIBUTOR
- 26 ADDITIONAL LEGAL
- 27 REGIONAL COMPLIANCE SYMBOLS
- 28 DECLARATION OF CONFORMITY
- 29 PRODUCT DETAILS
- 30 Documents / Resources
  - 30.1 References
- 31 Related Posts

## Product Overview



## PLAYING IN STANDARD MODE



## USING THE GAMING STAND



## CONTENTS

- MOGA XP7-X+ controller
- Detachable gaming stand
- One 6.6 ft. (2m) micro USB to standard USB
- One 11.8 in. (30 cm) micro USB to USB type-c/micro USB
- User manual

## SETUP

For best results, fully charge controller and power bank prior to first use.


## CHARGING CONTROLLER + POWER BANK

- Using the included 6.6ft (2m) USB Cable, connect the Micro-USB end to the port at the top of the controller,

and connect the Standard USB end to any powered USB source.



- When charging, four LEDs will display the charging level from 25-50-75-100%.

## CHARGE LEVEL INDICATOR

Check battery charge level by pressing the battery status button (  ) on front lower left of controller. The LEDs will indicate the current charge level from 25-100% even when controller is off.


## WIRELESS MODE

Move Wireless/Wired switch on front center of controller to BT (  ) which indicates wireless mode.

1. If controller is off, press the Xbox button (  ) to turn on (LED will illuminate).
2. Press and hold the Bluetooth sync button (  ) on back of controller for 5 seconds to enter pairing mode (LED will flash rapidly).
3. Enter the Bluetooth settings on your device and choose the MOGA controller. The pairing LED will turn solid when connected.

**NOTE:** A previously paired device will automatically pair to the controller when powered on.

## POWERING OFF

Hold the Xbox button (  ) for 5 seconds to turn controller off and save battery capacity.

## WIRED MODE

Move Wireless/Wired switch on front center of controller to USB (  ) which indicates wired mode.

- Connect Micro-USB end of the 11.8" (30 cm) or 6.6ft (2 m) cable to the port at top of the controller, and connect other end to your gaming device.
- Gaming device input ports (Standard USB, Micro-USB, USB-C) will determine whether you use shorter or longer micro-USB cable for wired gaming.
- This MOGA controller supports Direct Input by default, but also supports X Input mode. If initial wired connection is unsuccessful, switch modes by pressing Menu + View for three seconds. Three LED flashes indicate mode was changed and retained in memory. Repeat process to switch back.

## STANDARD MODE

The XP7-X+ allows you to insert your phone into the middle of the controller, allowing for a convenient way to game on the go.

1. Remove the detachable gaming stand from the middle of the controller by sliding it up.
2. Pull the two grips on the controller away from each other to extend the middle of the controller.

3. Place your phone between the extended grips so that it rests on the ledge of the middle part.
4. Slowly release the grips until they press against the phone, holding it tightly in place.
5. Slide the Lock switches on the back of each side to the “lock” position.
6. To remove your phone follow these steps in reverse, starting with “unlocking”.

## **GAMING STAND**

A detachable mobile gaming stand is included for use with gaming on your phone.

1. Remove the gaming stand from the middle of the controller by sliding it up.
2. Rotate the top of the stand to your preferred viewing angle, the stand rotation clicks through several different positions.
3. Place the stand down on a sturdy surface.
4. Place your device in the grooves on the bottom of the stand and rest it against the back of the stand.

## **WIRELESS INTEGRATED POWER BANK**

A Qi Wireless Power Bank built into the controller allows you to charge your phone during gameplay or while controller is off.

- Make sure you are using a phone that has Qi wireless charging capability while in standard mode.
- During gameplay, move the Power Bank switch, located on the top left of the controller, to the right (on) to start charging.
- Your mobile device will display charge status once connected. If charging does not begin, the power bank battery may be too low: recharge controller.
- The amount of charge available for your phone depends on how much battery capacity remains on the controller when charging begins.

## **ASSIGNING THE ADVANCED GAMING BUTTONS**

1. Press the Green Program Button on the bottom of the controller for 2 seconds. The LED Connection Indicator will flash, signaling the controller is in Assign Mode.
2. Press 1 of the following buttons (A/B/X/Y/LB/RB/LT/RT/Left Stick Press/Right Stick Press/D pad) to re-assign. Then press the Advanced Gaming Button (Right or Left) that you wish to assign. The LED connection indicator will stop flashing, signaling the Advanced Gaming Button has been set.
3. Repeat for the remaining Advanced Gaming Button.

**NOTE:** Advanced Gaming Button assignments will remain in memory even after disconnected.

## **RESETTING THE ADVANCED GAMING BUTTONS**

1. Hold the Program Button down for 2 seconds. The LED Connection Indicator will slowly flash, signaling the controller is in Assign Mode.
2. Press the previously assigned button for 5 seconds, and the function will be cleared.

## **FAQS**

- **PROBLEM: My controller will not power on.**

**SOLUTION:** Confirm the controller is fully charged by pressing the battery status button ( ) front lower left of controller. Plug in to recharge as needed.

- **PROBLEM: I don't see my MOGA controller listed in mobile devices Bluetooth settings.**

**SOLUTION:** Press and hold the Bluetooth sync button ( ) on back of controller for 2 seconds to enter pairing mode (LED will flash rapidly).

- **PROBLEM: The integrated power bank is not functioning.**

**SOLUTION:** Confirm the controller has more than 25% charge and the Power Bank button is switched on.

## **BATTERY WARNING – CAUTION**

- Don't attempt to replace the rechargeable battery yourself. There is a serious risk of explosion if the battery is incorrectly replaced.
- The lithium-ion battery in your device should be serviced or recycled by Power A, or an authorized provider and must be recycled or disposed of separately from household waste. Dispose of batteries according to your local environment laws and guidelines.
- Disposal of a battery or a controller that contains batteries into a fire, or mechanically crushing or cutting of a battery, can result in an explosion.
- Leaving a battery or a controller that contains batteries in extremely high-temperature environment can result in an explosion or leakage of flammable liquid or gas.
- A battery or controller that contains batteries that is subjected to extremely low air pressure may result in an explosion or leakage of flammable liquid or gas.
- Don't use the rechargeable battery in a location where there is a lot of static electricity, as the internal safety functions may be damaged, causing a dangerous situation.
- In case any electrolytes get into the eyes due to battery leakage, do not rub your eyes! Instead, immediately rinse your eyes with clean running water and seek medical attention right away.
- If the battery gives off an odor, generates heat, or in any way appears abnormal during use, recharging or storage, immediately remove the controller from the battery charger and place it in a secure container such as a metal box.

## **MOTION WARNING**

- Playing video games can make your muscles, joints, skin or eyes hurt. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, skin irritation or eyestrain:
- Avoid excessive play. Take a 10 to 15 minute break every hour, even if you don't think you need it. Parents should monitor their children for appropriate play.
- If your hands, wrists, arms or eyes become tired or sore while playing, or if you feel symptoms such as tingling, numbness, burning or stiffness, stop and rest for several hours before playing again.
- If you continue to have any of the above symptoms or other discomfort during or after play, stop playing and see a doctor.

## **WARRANTY**

2-Year Limited Warranty: Visit [PowerA.com/support](http://PowerA.com/support) for details.

## AUSTRALIAN WARRANTY STATEMENT

This product comes with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If purchased within Australia or New Zealand, this product comes with a One-year warranty from date of purchase. Defects in the product must have appeared within One year from date of purchase, in order to claim the warranty. All warranty claims must be facilitated back through the retailer of purchase in accordance with the retailer's return policies and procedures. Any expenses incurred, as a result of returning the product to the retailer of purchase are the full responsibility of the consumer.

## FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

## CAN ICES-3(B)/NMB-3(B)

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference;
2. This device must accept any interference, including interference that may cause undesired operation of the device

## MANUFACTURED BY

Bensussen Deutsch & Associates, LLC. (BDA, LLC.)  
15525 Woodinville-Redmond Rd. NE Woodinville, WA 98072

[BDAINC.com](http://BDAINC.com)  
[POWERA.com](http://POWERA.com)

## CONTACT/SUPPORT

For support with your authentic PowerA accessories, please visit [PowerA.com/support](http://PowerA.com/support).

## AU WHOLESALE DISTRIBUTOR

Level 2, 2 Darling Street South Yarra, Australia VIC 3141

[bluemouth.com.au](http://bluemouth.com.au)

Email: [support@bluemouth.com.au](mailto:support@bluemouth.com.au)

+61 (3) 9867 2666

## ADDITIONAL LEGAL

PowerA, and the PowerA logo are trademarks of Bensussen Deutsch and Associates, LLC. TM and © Bensussen Deutsch and Associates, LLC. Microsoft, Xbox, Xbox Series X|S, Xbox One, Xbox One Elite, Xbox One Elite Series 2, and Windows are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners.

## REGIONAL COMPLIANCE SYMBOLS

More information available via web-search of each symbol name.



The **WEEE** (Waste of electrical and electronic equipment) symbol requires battery disposal outside of other household waste per local regulations. Contact your city office, waste disposal service, or retailer for guidance.



**CE** (Conformity European aka European Conformity) is a certification mark that indicates conformity with health, safety, and environmental protection standards for products sold within the European Economic Area.



The **Regulatory Compliance Mark** is a visible indication of a product's compliance with all applicable ACMA (Australian Communications and Media Authority) regulatory arrangements, including all technical and record-keeping requirements regarding the electrical safety and/ or electromagnetic compatibility (EMC).

## DECLARATION OF CONFORMITY

**TRADE NAME:** Power A

**MODEL NO.:** 1510706-01

**US COMPANY NAME:** Bensussen Deutsch & Associates, LLC.

**ADDRESS:** 15525 Woodinville-Redmond Road, NE Woodinville, Washington 98072-6977 United States

## INTERNET CONTACT INFORMATION:

[BDAINC.com](http://BDAINC.com)  
[POWERA.com](http://POWERA.com)



Hereby, Bensussen Deutsch & Associates LLC at 15525 Woodinville-Redmond Road NE, Woodinville, WA 98072 USA, declares that this wireless controller is in compliance with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following internet address: [PowerA.com/compliance](https://PowerA.com/compliance)

## PRODUCT DETAILS

**BLUETOOTH:** 2402-2480 MHz

**MAX E.I.R.P.:** < 10dBm (for EU compliance)

**WIRELESS CHARGER:** 110.417- 145.513 kHz

**MAX POWERTRANSMITTED:** 3.88 dBuA/m @10m distance


**INPUT:** 5v, 500 mA

**OUTPUT:** 5V, 1000 mA

**OPERATIONAL**

**TEMPERATURE:** 50-113°F (10-45° C)

## Documents / Resources

	<a href="#">PowerA XP7.X+ Bluetooth Controller for Mobile &amp; Cloud Gaming</a> [pdf] User Manual 1510706DA, YFK-1510706DA, YFK1510706DA, XP7.X, Bluetooth Controller for Mobile Cloud Gaming
---	---

## References

- [BDA Home](#)
- [bluemouth.com.au](#)
- [llc.tm - This is a premium name](#)
- [PowerA | PowerA](#)
- [PowerA | PowerA](#)
- [Declaration of Conformity | PowerA](#)
- [Support | PowerA](#)