



## PowerBox-Systems PBS-V60 PBS Series of Sensors Instructions

[Home](#) » [PowerBox-Systems](#) » PowerBox-Systems PBS-V60 PBS Series of Sensors Instructions 

PowerBox-Systems PBS-V60 PBS Series of Sensors Instructions



## Contents

- [1 PRODUCT DESCRIPTION](#)
- [2 CONNECTIONS](#)
- [3 SETTING UP THE TELEMETRY SYSTEM](#)
- [4 TECHNICAL SPECIFICATIONS](#)
- [5 DIMENSIONS](#)
- [6 LIABILITY EXCLUSION](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

## PRODUCT DESCRIPTION

The PBS series of sensors from PowerBox-Systems comprises a number of ultraprecise units which have been developed to work with the **PowerBox CORE**. However, they are also suitable for use with other radio control systems. At the development stage of these telemetry sensors we took particular care to keep them as compact and robust as possible. Super-accurate sensors combined with sophisticated filter technology are the key to maximum possible precision!

If required, all the sensors can be configured directly from the CORE transmitter. If you are using a different make of radio control system, then this task can be carried out using the **USB Interface Adapter** or the **BlueCom Adapter**. The alarm settings can be entered either at the sensor or the transmitter, depending on the radio control system.

## CONNECTIONS

This applies to all sensors: connect the three-core Uni-lead to the Telemetry input on the receiver.

### PBS-V60

The BEC lead supplied in the set should either be soldered directly to the highcurrent connector, or connected to the balancer plug using a suitable adapter.

The 60V battery input is protected against reversed polarity.

### PBS-P16

Cut through the air line (4 mm Festo) in the model at a suitable point, and fit the

PBS-P16 between the cut ends. Ideally the sensor should be installed between the air reservoir and the valves. If you are not using 4 mm air lines, it is possible to replace the Festo connector with a different type, since the hole in the P16's aluminium case features a standard internal M5 thread.

### PBS-T250

The standard set contains two temperature sensors, but additional sensors can be purchased separately. The temperature sensors are designed to be attached to the cylinder head using a screw-lug. Drill a 3.5 mm Ø hole in one of the cooling fins, then fix the temperature sensor in place securely using a suitable self-tapping screw or M4 machine screw. A small quantity of heat-conductive paste under the sensor improves the temperature measurement. Ideally the sensor mounting point should be located away from the propeller airstream, as the flow of air could falsify the cylinder head temperature.

## SETTING UP THE TELEMETRY SYSTEM

### PowerBox CORE

All PBS sensors are factory-adjusted to suit the CORE telemetry system, i.e. all you have to do is plug them into the receiver's P<sup>2</sup>BUS socket. If you connect the sensor when the system is operating, you will need to carry out a Rescan. Otherwise the sensor will be detected automatically when you switch the system on, and you can then select it from the Sensor List in the usual way.

### Jeti, Graupner, Multiplex, Futaba


The PBS sensors can be configured to suit your preferred telemetry system using a suitable USB lead (Power Box or Jeti) and the Power Box Terminal program (available for downloading from our website). Graupner and Multiplex systems also allow the alarm thresholds to be adjusted in this way, whereas setting up is carried out at the transmitter with Jeti and Futaba systems. There are a few special points to note when binding sensors to Futaba systems, because Futaba is unable to display

all physical units. For example, the PBS-P16 appears as a "Temperature sensor". More details, including slot assignment, are provided in full in our Support Forum.

## TECHNICAL SPECIFICATIONS

	<b>PBS-V60</b>	<b>PBS-T250</b>	<b>PBS-P16</b>	<b>PBS-Vario</b>
Sensor type	voltage	temperature	pressure	climb rate/ altitude
Measuring range	0-60V	25-250°C	0-16 Bar	–
Resolution	0.1V	1°C	0.1 Bar	0.1 m/s
Dimension	40x10x4 mm	32x18x10 mm	42x17x12 mm	33x10x4 mm
Weight	6g	7g	14g	6g
Telemetry systems	CORE, Jeti, M-Link, Hott Futaba	CORE, Jeti, M-Link, Futaba	CORE, Jeti, M-Link, Hott Futaba	CORE, Jeti, M-Link, Futaba

## DIMENSIONS

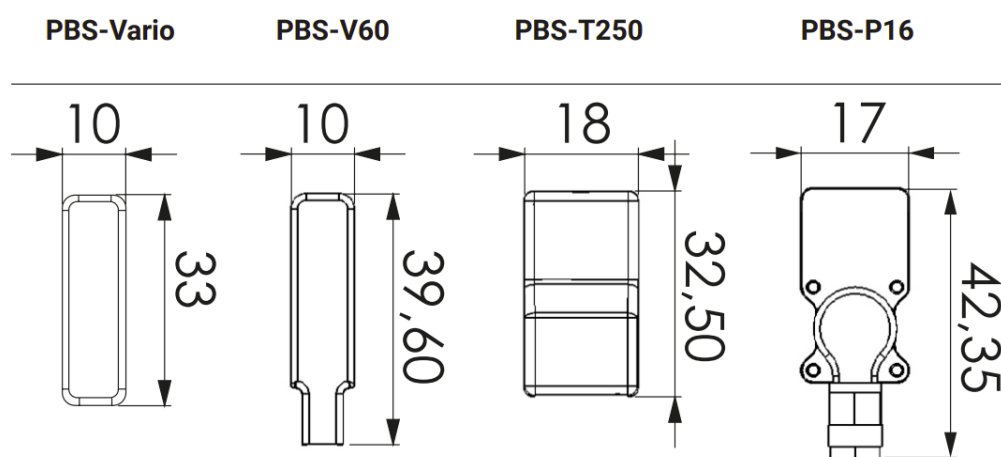

### SERVICE NOTE

We make every effort to provide a good service to our customers, and have established a Support Forum which covers all queries relating to our products. Please use the Support Forum before you telephone us.

You can find the forum at the following address:

[www.forum.powerbox-systems.com](http://www.forum.powerbox-systems.com)



### **GUARANTEE CONDITIONS**

That is why we are able to grant a **24 month guarantee** on our **Power Box PBS sensors** from the initial date of purchase. The guarantee covers proven material faults, which will be corrected by us at no charge to you. The guarantee does not cover damage caused by incorrect usage, e.g. reverse polarity, excessive vibration, excessive voltage, damp, fuel, and short-circuits. The same applies to defects due to severe wear.

### **LIABILITY EXCLUSION**

We are not in a position to ensure that you observe our instructions regarding installation of the **Power Box PBS sensors**, fulfil the recommended conditions when using the unit, or maintain the entire radio control system competently.

For this reason we deny liability for loss, damage or costs which arise due to the use or operation of the **Power Box PBS sensors**, or which are connected with such use in any way. Regardless of the legal arguments employed, our obligation to pay damages is limited to the invoice total of our products which were involved in the event, insofar as this is deemed legally permissible.

We wish you every success using your new **Power Box PBS sensors**!

Donauwoerth, August 2021

**Power Box-Systems GmbH**

Ludwig-Auer-Straße 5  
D-86609 Donauwörth

**Germany**



+49-906-99 99 9-200




+49-906-99 99 9-209

[www.powerbox-systems.com](http://www.powerbox-systems.com)



## Documents / Resources

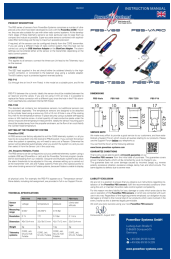

[PowerBox-Systems PBS-V60 PBS Series of Sensors](#) [pdf] Instructions  
PBS-V60, PBS-VArio, PBS-P16, PBS-T250, PBS-V60 PBS Series of Sensors, PBS-V60, PBS  
Series of Sensors, Series of Sensors, of Sensors, Sensors

Manuals+.