



POWERCOME MWRA37V Remote Control User Manual

[Home](#) » [POWERCOME](#) » POWERCOME MWRA37V Remote Control User Manual 

POWERCOME MWRA37V Remote Control



Contents

1 INCOMPLETE POST KHALID

1.1 Remote control
specification

1.2 FCC Statement

1.3 Documents / Resources

1.3.1 References

INCOMPLETE POST KHALID

Remote control specification

1. Outline structure drawing



2. Key and light display

3. Instructions for use

1. Pairing method

Press the power button for 10S, LED1 and LED2 blink at 1HZ, press any key of the remote control for pairing within 30S, LED1 and LED2 will be extinguished after pairing, and exit automatically after 30S without pairing

2. When you press H/M/L gear respectively with the remote control button, the corresponding LED gear lights up. 30S, the load is not connected, and the LED light goes out

3. Code clearing method

Press the power button for 10S, LED1 and LED2 perform 1HZ flash mode for 10 times, the code is cleared successfully, and the LED lamp will automatically turn off.

4. Transmission distance

Transmission distance between the remote control and the power supply: ≥ 10 M

FCC Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference

in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The device has evaluated to meet general RF exposure requirement. The device can be used be in portable exposure without restriction.

IC Statement

This device complies with Industry Canada license exempt RSS standard (s). Operation is subject to the following two conditions:

1. this device may not cause interference, and
2. this device must accept any interference, including interference that may cause

undesired operation of the device.

The device has evaluated to meet general RF exposure requirement. The device can be used be in portable exposure without restriction.



Documents / Resources

| | |
|---|--|
|  | <p>POWERCOME MWRA37V Remote Control [pdf] User Manual MWRA37V Remote Control, MWRA37V, Remote Control, Control</p> |
|---|--|

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.