

 


## powermesh Multi Dimmer Switch 2 and 4 Button Instruction Manual

[Home](#) » [powermesh](#) » powermesh Multi Dimmer Switch 2 and 4 Button Instruction Manual 



Let's get connected.  
Multi Dimmer Switch  
2 and 4 button

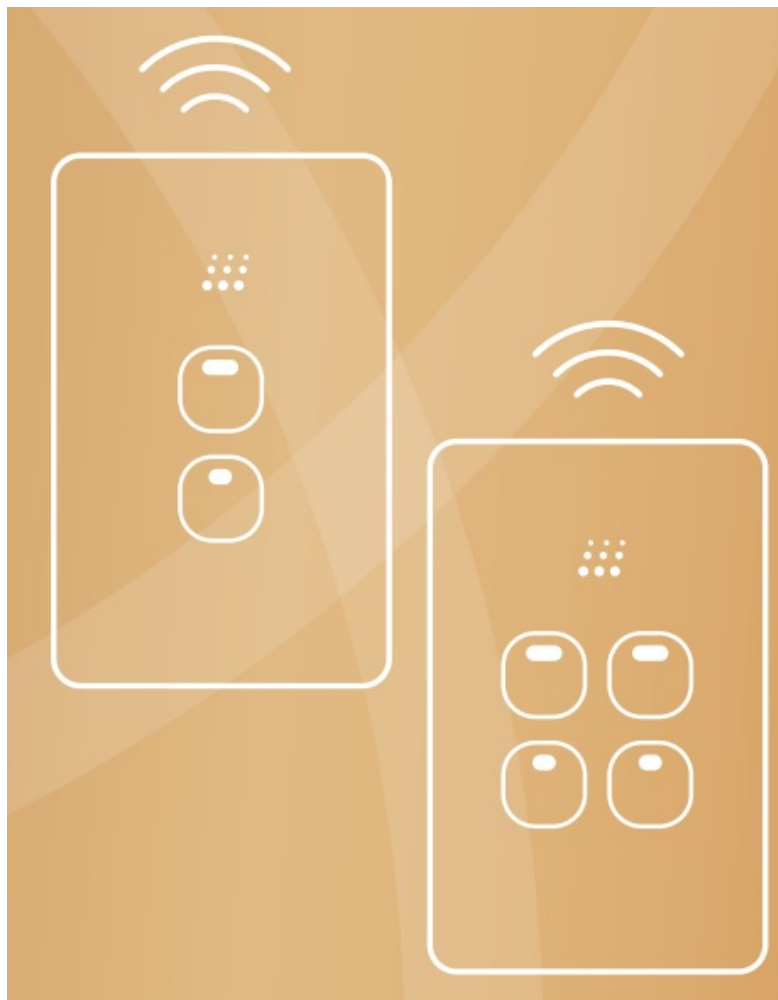

## Contents

- [1 Important – Read before installing.](#)
- [2 Using the Multi Dimmer Switch.](#)
- [3 identifying the Dimmers and Switches.](#)
- [4 Compatible Load & Types](#)
- [5 Connect the wiring.](#)
- [6 Pair and setup with Zimi.](#)
- [7 Multi-way Switching with Behaviour Link.](#)
- [8 Want to learn more or need help?](#)
- [9 Status Indicator.](#)
- [10 Manufacturer's Warranty](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)

## Important – Read before installing.



Must only be installed by a LICENSED ELECTRICIAN to local wiring regulations.

Powermesh devices must only be connected with the Active and Neutral from the same RCD.

Surge protection is recommended at the main switchboard. Products damaged by power surges are not covered by warranty.

Set device Min & Max dimming levels in the Zimi App 'Settings' for low and high brightness.

 


Failure to follow these instructions can result in serious injury or death.

Megger testing may lead to low readings due to electronic components so disconnect all electronic devices before taking a reading. Install the included warning sticker with circuit detail in the main electrical switchboard.

**AVOID THE RISK OF ELECTRIC SHOCK** Once the product has been fastened to the wall, ensure the screw caps are inserted firmly into place over the screw mounting hole locations as shown below.


## Using the Multi Dimmer Switch.

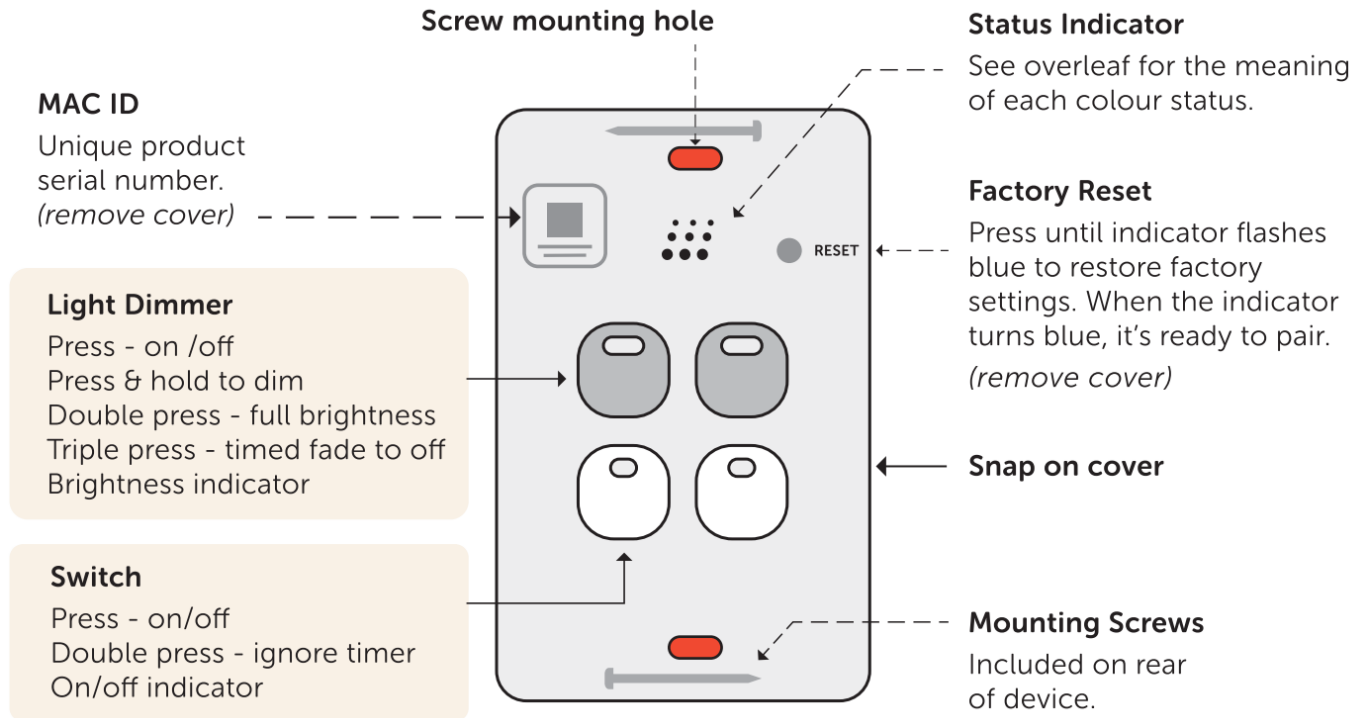

identifying the Dimmers and Switches.


2 Button

 PMMDS2 / PMMDS2BK

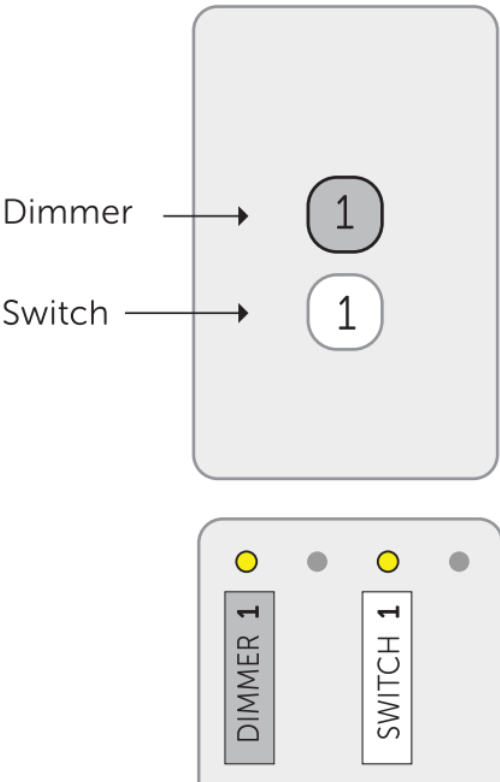

4 Button

 PMMDS4 / PMMDS4BK

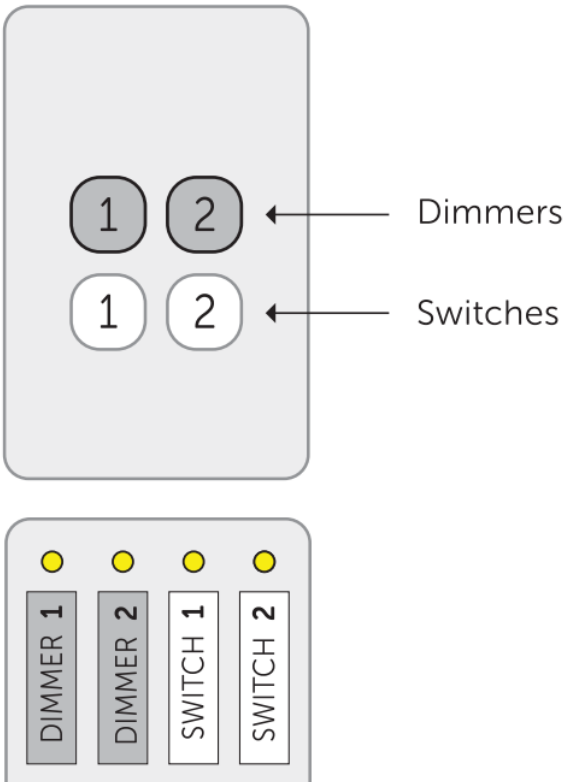

Compatible Load & Types

2 Button




PMMP2S2  
PMMP2S2BK

DIMMER	SWITCH	COMPATIBLE LOADS	
250W	250W	LED	
100W	5A	INCANDESCENT	
X	2AX	FLUORESCENT	
X	2A	ELECTRONIC TRANS.	
X	2A	IRON CORE TRANS.	
X	M.20	SMALL MOTOR	

230V~ 50Hz

 4 Button

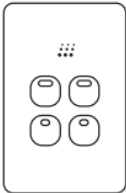

PMMP4S4  
PMMP4S4BK

2CHANNEL DIMMER	2CHANNEL SWITCH	COMPATIBLE LOADS	
250W	250W	LED	
100W	5A	INCANDESCENT	
X	2AX	FLUORESCENT	
X	2A	ELECTRONIC TRANS.	
X	2A	IRON CORE TRANS.	
X	M.20	SMALL MOTOR	


MAX 10A TOTAL. 230V~ 50Hz

Connect the wiring.




Do not connect non-dimmable loads to the dimmer channels.

### 2 Button

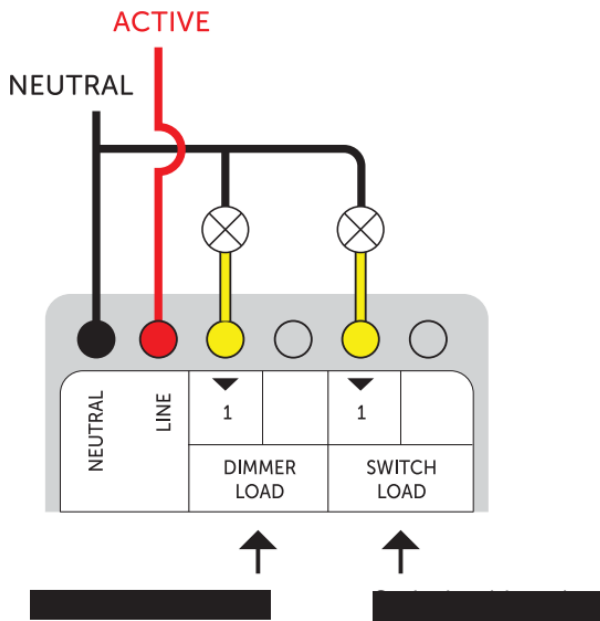 


### 4 Button

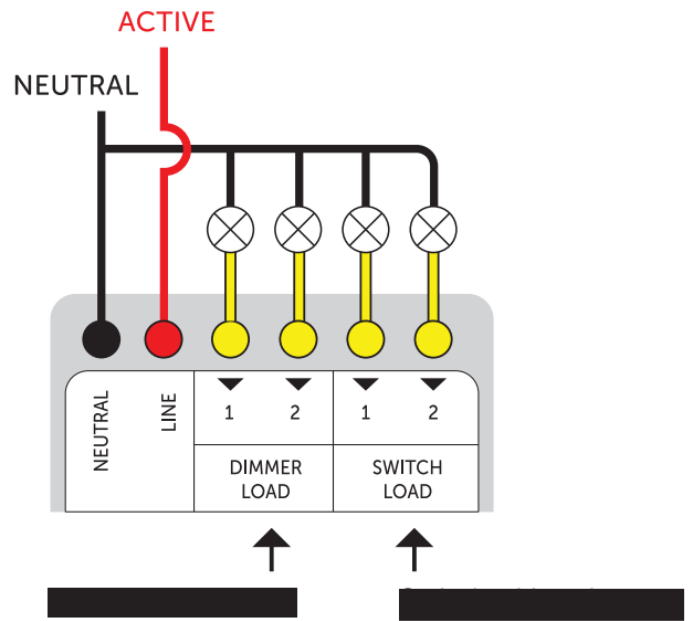 

Pair and setup with Zimi.

# zimi

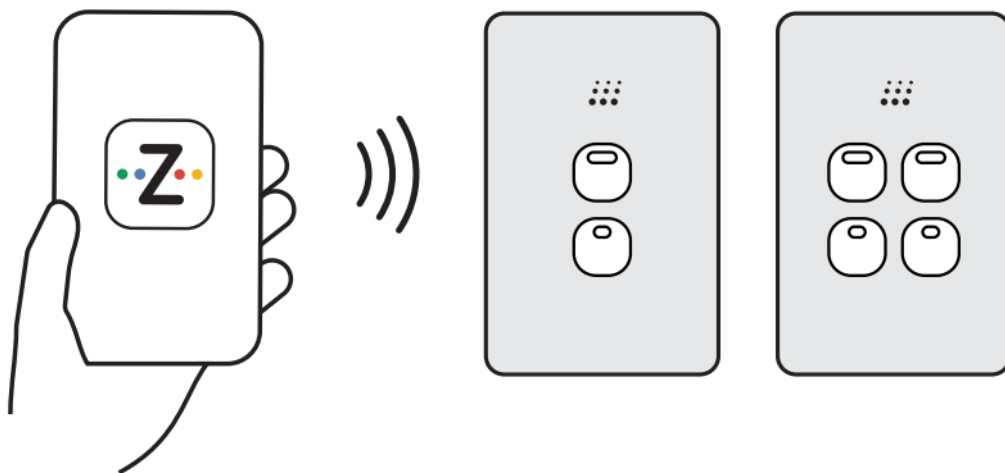 

- Download the Zimi App.
- Choose 'Add Device'
- Follow the on-screen instructions.

#### Download Zimi App.

Point your phone camera at the QR code to open the app store.

 


<http://onelink.to/arrs92>

## Multi-way Switching with Behaviour Link.



The 'Behaviour Link' feature makes multi-way switching easy.  
Any button without a load can be linked to a button with a load.  
Use the Zimi app to create a new 'Behaviour Link' or change the link later.

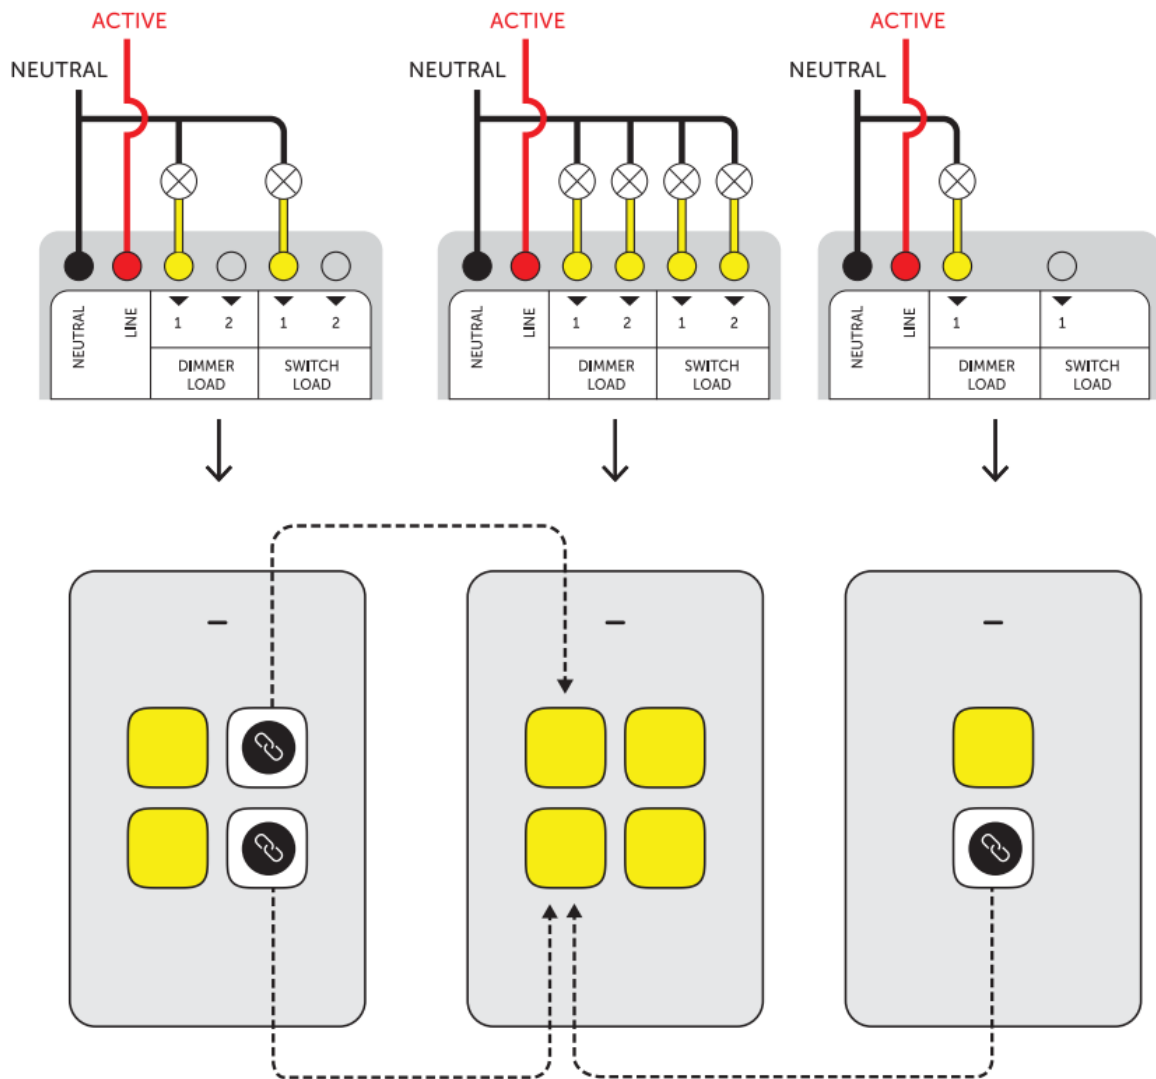




### Multi-way switching.

The power-mesh Multi-Purpose Switch SHOULD NOT be wired with any other type of switch.

### Zimi Cloud Connect.

Enjoy the full experience with all your Zimi devices.




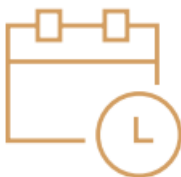 


	Remote access anywhere.
	Voice control is hands-free.
	Sunrise & Sunset schedules.

**Internet connection required,**



 

 

### Want to learn more or need help?

Enjoy all the features to make your life easier.  
Visit our website for tips, tricks, and help.

[support.zimi.life](https://support.zimi.life)

			
<b>Behaviour Link</b> Control a switch from another switch.	<b>Schedules</b> Turn it on and off any day or time.	<b>Energy Use</b> Monitor the power usage and cost.	<b>Auto Off Timer</b> Turn it off automatically.

### Status Indicator.

	Blue	Ready to pair. 'Add device' in Zimi to pair and complete setup.
	White	The setup is complete. This device has been paired and setup completed.
	White pulsing	Action in progress. This lets you know an automatic function is being activated.
	Blue & White pulsing	Identify device. This shows the device when updating its settings.
	Red	Device problem. Please refer to support to resolve the problem.
	Off	The indicator is off. The status indicator can be turned off and on in settings.

### Manufacturer's Warranty



This product has been manufactured to the highest quality standards. This product is warranted to the original purchaser and is not transferable. The product is guaranteed to be free from defects in workmanship and parts for a period of 1 Year from the date of purchase. Defects that occur within this warranty period, under normal use and care will be repaired, replaced or refunded. The benefits conferred by this warranty are in addition to all other rights and remedies of the consumer under Commonwealth, State and Territory laws in relation to the goods or services to which this warranty relates and Australian Consumer Law. Risk in regard to the product to be repaired shall at all times remain with the Purchaser. The warranty is given on the condition that the product to which it applies is used for the purpose and in the manner intended by its construction and for no other purposes whatsoever. Zimi Ltd shall not be responsible for damage of any kind, caused by accidents, power surges, electrical storm damage, incorrect power current, infestation (vermin or insect), incorrect installation, incorrect electricity or plumbing installation, improper use of controls or failure to use the unit in accordance with the operating instructions, general misuse or abuse or from normal wear and tear. Any attempt by an unauthorized person to repair or tamper with the equipment shall render the warranty null and void. Goods presented for repair under this warranty may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods. Zimi Ltd's liability under this warranty is limited to the replacement and/or repair of the defective parts within the warranty period and does not extend to the installation or removal of the product. Acceptance of liability by Zimi Ltd contained herein is to the exclusion of any other remedy whatsoever and howsoever arising in respect of any equipment to which it applies.

**Proof of Purchase** Please keep your purchase docket or receipt as proof of purchase and as proof of the date on which the purchase was made. The purchase docket or receipt must be presented with the warranty when making a claim under this warranty. Failure to produce documentary proof of the date of original acquisition by the original Purchaser will result in a charge being levied for work done, labor and parts supplied. Likewise, a charge will be made for any calls following the warranty claim where no fault is found with the unit.

**Service during the warranty period** The first point of contact for product issues is the place of purchase. The product must be returned to the original place of purchase for product repair, replacement or refund. Please ensure the product is properly packaged so as to ensure that no damage occurs to the product during transit and make sure that you have included an explanation of the problem. In the event of goods requiring repair under the manufacturer's warranty, the owner is responsible for the cost of transportation. Should the goods be found to be in sound working order the owner might be charged a fee. This warranty is given by Zimi Ltd, 14 Millennium Circuit, Helensvale, QLD 4212.

 
**Safety Warnings** Read all instructions and safety information. All electrical work must only be undertaken after disconnection of the power by removing fuses or turning off the circuit breaker, to ensure all pole disconnection from the electrical supply. All electrical work must be carried out by a licensed and qualified electrician and in accordance to AS/NZS 3000 Wiring Rules and applicable local authority regulations. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the product by a person responsible for their safety. Young children should be supervised to ensure that they do not play with the unit. Do not cut or notch joists, beams, and rafters to install the unit. Do not damage hidden electrical wiring or utilities when cutting. The product must be installed so that switches and other controls cannot be touched by a person in the bath or shower. Do not install the product in a location where water will splash onto it. Check and confirm that all connections are proper and secure to prevent causing property damage or injury. Do not install it outdoors where it could be exposed to water or moisture (indoor use only).

**Trademarks** Zimi and Powermesh and their respective logos are registered trademarks of Zimi Ltd. Google and Google Play are trademarks of Google LLC. Amazon, Alexa, and all related logos are trademarks of Amazon.com, Inc. or its affiliates. Apple, the Apple logo, Apple Watch, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc., registered in the U.S. and other countries.

Copyright © 2022 Zimi Ltd. All rights reserved.



## Documents / Resources

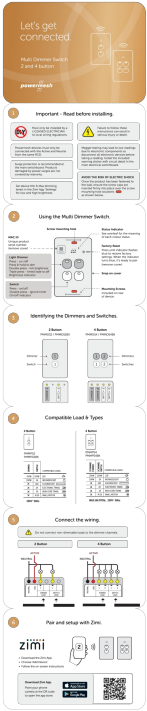

[powermesh Multi Dimmer Switch 2 and 4 Button](#) [pdf] Instruction Manual  
Multi Dimmer Switch 2 and 4 Button, Multi Dimmer, Switch 2 and 4 Button, Switch 2 Button, Switch 4 Button