



PowerPac PPBL775 4in1 Multi-Functional Food Processor Instruction Manual

[Home](#) » [PowerPac](#) » PowerPac PPBL775 4in1 Multi-Functional Food Processor Instruction Manual 



PPBL775 4in1 Multi-Functional Food Processor
Instruction Manual



Singapore
Prestige
Brand Award
2020/21 winner.
SPBA – Established Brcrxfs
Model No.: PPBL775

Contents


- [1 Parts & Description](#)
- [2 Warnings](#)
- [3 How to use](#)
- [4 How to clean](#)
- [5 PROBLEM SOLVING](#)
- [6 ENVIRONMENTAL TIP](#)
- [7 SPECIFICATION](#)
- [8 WARRANTY](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

Parts & Description

LIST OF COMPONENTS



1. Push Rod	7. Motor unit
2. Processing Bowl Cover	8. ON/OFF & Speed Rotary Knob
3. Chopping Blade Unit	9. Grating Blade
4. Drive Shaft Cover	10. Slicing Blade
5. Processing Bowl	11. Shredding Blade
6. Drive Shaft	12. Disc Holder

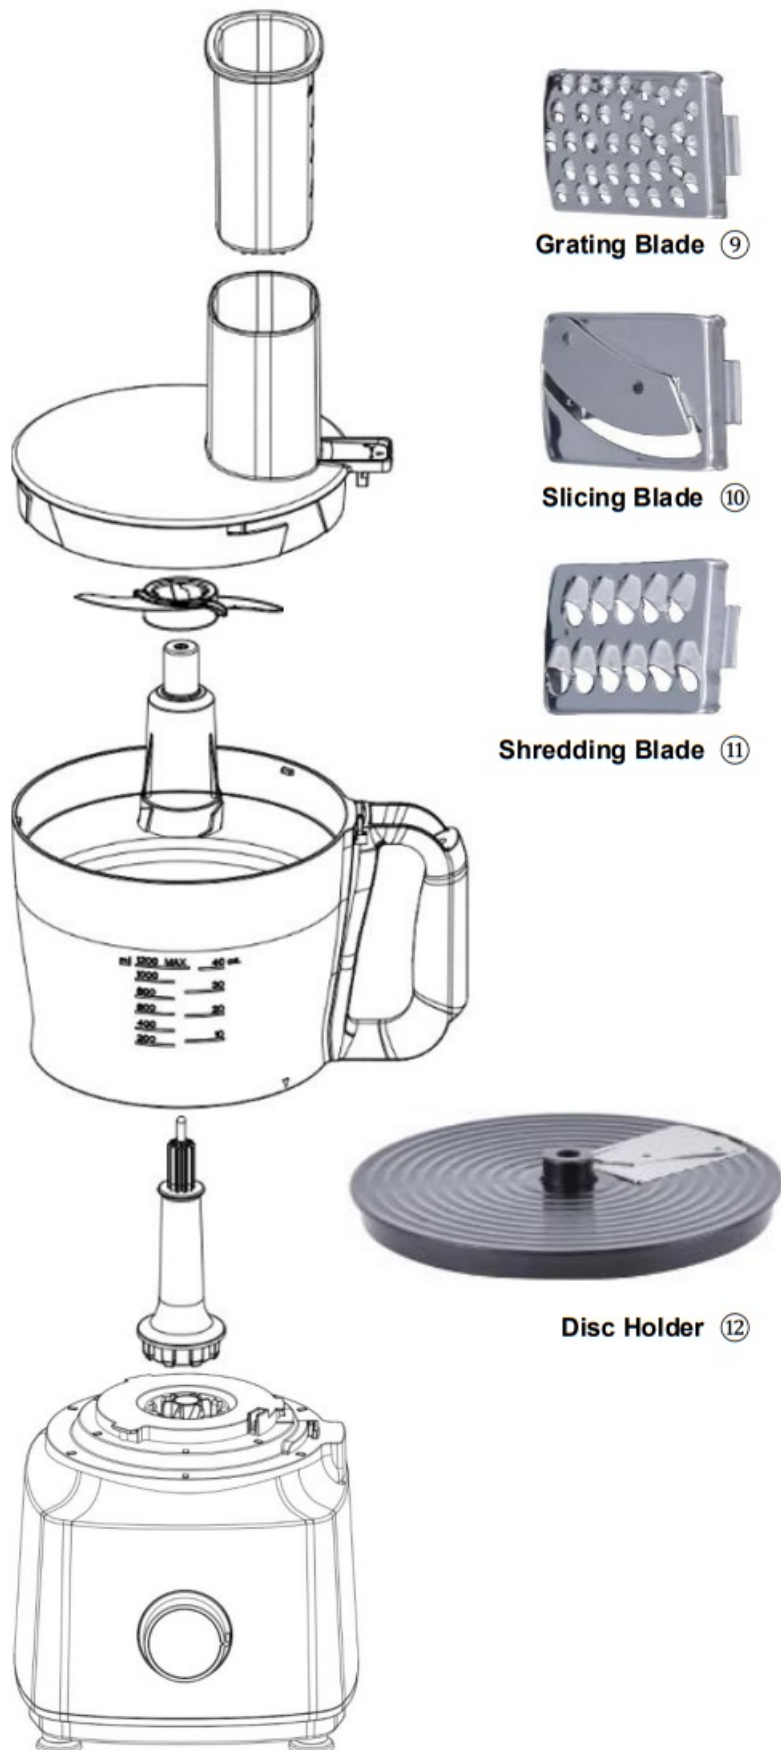

1. Push Rod
2. Processing Bowl Cover
3. Chopping Blade unit
4. Drive Shaft Cover
5. Processing Bowl (1.2L)

6. Drive Shaft
7. Motor unit
8. ON/OFF & Speed Rotary Knob

Warnings

ATTENTION:

Read this booklet carefully as it contains important instructions for a safe installation, use and maintenance. Important instructions to be kept for future reference.

The following basic precautions should always be followed when using electrical appliances:

1. Read all instructions before using the appliance.

The Appliance

2. This food processor must be used only for the purpose it was expressly designed, which is for chopping, grating, slicing and shredding food only. It can also blend fruits and vegetables. Any use NOT complying with the instructions contained in the manual is considered inappropriate and dangerous. The manufacturer is NOT responsible for possible damages caused by the inappropriate and/or unreasonable use.
3. The installation/assembly of the appliance will be made in accordance with the indications of the manufacturer. A wrong procedure may cause damages to persons, animals or objects, for which the manufacturer cannot be considered responsible.
4. Before use, check the integrity of the appliance and power cable. DO NOT operate the appliance at all when the Motor unit is damaged. If the Motor unit is not damaged, but an accessory (Push Rod, Grating / Slicing / Shredding Blades, Disc Holder, Chopping Blade unit, Drive Shaft & Cover, Processing Bowl & Cover, etc.) is damaged, DO NOT operate the Motor unit in conjunction with that accessory. In case you are not sure, contact a qualified person. If the power cable is damaged, it must be replaced by the manufacturer / service agent or a qualified technician in order to avoid a shock hazard.
5. Before powering the appliance make sure the rating (voltage and frequency) corresponding to the grid and the socket is suitable for the plug of the appliance, and that the wall socket is properly grounded.
6. Avoid the use of adapters and/or extension cables; if their use is absolutely necessary, use only materials in compliance with the current safety regulations and according to the electrical parameters of the adapters.
7. The appliance must NOT be switched on using external timers and/or other remote control appliances which are not specified in this manual.
8. Only use original components & accessories provided by the manufacturer. Any non-original components & accessories (including, but not limited to, Push Rod, Grating / Slicing / Shredding Blades, Disc Holder, Chopping Blade unit, Drive Shaft & Cover, Processing Bowl & Cover, etc.) made by other manufacturers or by the same manufacturer but for other models of the same capacity or otherwise, may cause injuries to persons or damage to the appliance. Doing so will void the warranty and may cause serious injury.
9. The packing materials (plastic bags, expanded polystyrene, etc.) must be kept out of the reach of children or disabled persons since they represent potential sources of danger.

Location

10. This appliance is NOT suitable to be used or stored near heat sources (open flame, ovens, heaters, stoves, etc.) and/or in an explosive environment (in the presence of flammable substances such as gas, vapour, mist or dust, in atmospheric conditions when, after ignition, the combustion is spread in the air). Items containing these substances should never be placed in the appliance, and never be used to clean the appliance in order

to avert the risk of fire or explosion.

11. Place the appliance at a proper distance from the objects or surrounding walls making sure that its functioning will not cause accidental damages. The appliance should NOT be placed on a surface, or in the vicinity of objects, which can be damaged by heat such as carpets or plastics. Never use the appliance near curtains or textiles. If the appliance is operated on wooden furniture, use a protective pad to prevent damage to delicate finishes.
12. Avoid placing the power cable on abrasive or sharp surfaces or in positions where it can be damaged easily. Avoid placing heavy objects on the cable. The cable must NOT be placed under carpets, or covered with throw rugs, runners or similar.
Arrange the cable away from the high traffic area, and where it will NOT be tripped over. DO NOT pull or carry the appliance by the cable.
13. DO NOT use or store the appliance outdoors. Store and use the appliance only indoors, or in any case, protected from weathering such as rain, direct radiation of the sun and dust.

Operation

14. If you are using the appliance for the first time, you should:
 - a. Clean the exterior of the Motor unit with a damp cloth. The Motor unit may NOT be immersed in water. Wash the accessories: Push Rod, Grating / Slicing / Shredding Blades, Disc Holder, Chopping Blade unit, Drive Shaft & Cover, Processing Bowl & Cover and utensils you wish to use with water & detergent with a non- abrasive sponge. DO NOT use metal scouring pads nor use solvents like paint thinners or acetone. Dry the accessories thoroughly.
 - b. Place the Motor unit on a flat, dry surface. Assemble the Push Rod, Grating /Slicing / Shredding Blades, Disc Holder, Chopping Blade unit, Drive Shaft & Cover, Processing Bowl & Cover to the Motor unit according to the instructions listed in the section (How to Use) below. Check that these accessories are locked into the Motor unit before you start using the appliance.
 - c. Before adding ingredients, make sure the Chopping Blade unit or Disc Holder containing one of the three types of blades (Grating Blade, Slicing Blade or Shredding Blade) is in place and running smoothly.
 - d. Make sure to remove any label or protective sheet which may prevent its proper functioning.

DO NOT:

- cover the appliance during functioning;
- insert objects or body parts inside the protection cover of the appliance;
- use the appliance without putting any food item in the Processing Bowl;
- overload the Processing Bowl by overfilling it. This is generally below 1000 ml as during blending, liquids will churn and may spill out of the container. The jug should contain cut fruits and vegetables NO larger than that which can enter the opening of the Processing Bowl and must NOT contain dry food (food with insufficient amount of water, very hard ingredients (such as coffee beans, soybeans, rice, ice cubes or frozen foods), or foods or liquids with a temperature greater than 82 °C (180 °F);
- allow hands, hair, clothing, curtains, spatulas and any other objects to come into contact with the appliance's motor and accessories to avoid personal injury or damage to the machine when the appliance is in operation;
- use the appliance if blades are bent, chipped, cracked, broken or in any way damaged;
- attempt to sharpen or touch the blades as they are VERY SHARP! Hold the plastic centre of the Chopping Blade Unit or Disc Holder while installing, removing or cleaning;
- place the appliance in the microwave oven or refrigerator, so as to avoid damaging it;

- operate the appliance for more than 30 seconds without interruption. Let the appliance rest 2 minutes between processing cycles. After 3 processing cycles, allow an interval of 10 minutes to let the appliance cool down before the next use so as to prolong its service life. DO NOT allow the appliance to idle while in operation;
- operate the appliance with any of its parts unassembled. The entire assembled unit works as a single appliance. The appliance must only operate in the upright position. Any other position will be hazardous;
- detach the Processing Bowl while the appliance is in operation; Safety feature – the appliance will immediately stop working as the power is disconnected

Safety Protection

If the appliance overheats, the thermal switch will be activated, leading to the motor being shut off. Turn the ON/OFF & Speed Rotary Knob to '0' (OFF). Switch the appliance off and unplug the power cable from the wall socket. Allow the appliance to cool for at least 15 minutes before using the appliance.

How to use

1. Clean the Motor unit and accessories before using. Refer to the section "How to clean and maintain" immediately following this section.
2. Place the Base of the Motor unit on a flat, dry and heat-resistant surface.
3. Ensure that the ON/OFF & Speed Rotary Knob is at the '0' (OFF) position.
4. Lock the Drive Shaft onto the top of the Motor unit.
5. Place the Processing Bowl onto the Motor unit.
6. Attach the Drive Shaft Cover onto the raised center of the Processing Bowl.
7. Either:
 - Insert one of the three types of blades (Grating Blade, Slicing Blade or Shredding Blade) into the Disc Holder; place the Disc Holder onto the Drive Shaft Cover.
 - Place the Chopping Blade unit directly onto the Drive Shaft Cover.
 Ensure that the Disc holder or the Chopping Blade unit is in place and running smoothly.
8. Place the Processing Bowl Cover onto the Processing Bowl and lock them together.
9. Plug the power cable into the wall socket and switch the wall switch ON.
10. Turn the ON/OFF & Speed Rotary Knob to '1', '2' or 'P' (Pulse) and operate until the desired consistency is achieved.
11. Drop the food item/s into the opening of the Processing Bowl Cover a little at a time and use the Push Rod to push the food item/s downwards. DO NOT overload the Processing Bowl Cover, otherwise the blades may not rotate.
12. Place one hand on top of the Lid when blending to stabilise the appliance.

Operate the appliance for more than 30 seconds without interruption. Let the appliance rest 2 minutes between processing cycles. After 3 processing cycles, allow an interval of 10 minutes to let the appliance cool down before the next use so as to prolong its service life. DO NOT allow the appliance to idle while in operation
13. When the task of chopping, blending, grating, slicing or shredding food has completed, turn the ON/OFF & Speed Rotary Knob to the '0' (OFF) position, switch the wall switch OFF and unplug the power cable.
14. Wait for the blades to stop turning.
15. Detach the Processing Bowl Cover and rotate the Processing Bowl carefully before lifting the Processing Bowl from the Motor unit.
16. Detach the Chopping Blade unit or Disc Holder and remove the food from the Processing Bowl.

17. To continue using the same ingredients, repeat steps 5 to 13. To continue using other ingredients, rinse the Processing Bowl Cover, Processing Bowl, Chopping Blade Unit or Disc Holder & attached blades and Drive Shaft Cover first and then repeat steps 5 to 13.

only if a Jam occurs: DO NOT continue operating if the Chopping Blade Unit or Disc Holder & attached blades is jammed.

Turn the ON/OFF & Speed Rotary Knob to '0'. Switch off the wall switch and unplug the power cable.

Wait for the blades to stop turning. Remove the Processing Bowl Cove from the Processing Cover and clear the jam.

Perform steps 8 – 17 again.

How to clean

1. Turn the ON/OFF & Speed Rotary Knob to '0' (OFF). Switch the wall switch OFF and unplug the power cable.
2. Before cleaning, please make sure the blades have stopped running.
3. Clean the Motor unit with a damp cloth. DO NOT immerse the Motor unit in water or other liquids, and avoid spraying water, in order to avoid damage or leakage.
4. Wash the Push Rod, Grating / Slicing / Shredding Blades, Disc Holder, Chopping Blade unit, Drive Shaft & Cover, Processing Bowl & Cover and utensils with water & detergent with a non-abrasive sponge immediately after using the appliance to avoid build-up of bacteria. Blades are sharp! You may clean the above-mentioned accessories in the dishwasher. Dry the components with a soft, dry cloth.

DO NOT use a steel wire sponge, abrasive cleaners or corrosive liquids such as gasoline or acetone to clean this appliance.

Never attempt to sterilise any part of this appliance with hot water or steam by utilising a steamer, frying pan, oven, microwave oven, kettle, etc.

5. Ensure that the appliance & accessories are clean, dry, and placed in dry and wellventilated storage. Avoid direct sunlight.
6. Reassemble the Drive Shaft onto the top of the Motor unit, the Processing Bowl onto the Motor unit and attach the Drive Shaft Cover onto the raised center of the Processing Bowl. Place the Disc Holder and the Chopping Blade unit directly onto the Drive Shaft Cover and lock the Processing Bowl Cover onto the Processing Bowl.

Auto Clean

1. Fill the Processing Bowl with warm water.
2. Turn the ON/OFF & Speed Rotary Knob to 'P' (Pulse) for a few seconds to clean the Processing Bowl and Chopping Blade unit very quickly and safely.

PROBLEM SOLVING

Fault symptom	Cause analysis	Troubleshooting
After assembly, the appliance does not work after pressing the switch	The Processing Bowl and the Motor unit are not connected correctly	Reconnect the Processing Bowl and the Motor unit
	The motor is damaged or stuck	Turn the motor shaft or Drive Shaft. If it still does not work, please send to the nearest service centre for inspection
	Check if the power cable is loose.	If the appliance still does not work, replace with a new power cable
When using the appliance for the first few times, the motor gives off an unpleasant smell	It is a normal phenomenon when a new motor is initially used	No action needed
The blades get stuck	The blades are entangled or stuck by ingredients	Follow steps 5 — 13 in “How to Use”, cut the ingredients into smaller pieces or put less ingredients into the Processing Bowl before re-starting
The appliance stops working after a few processing cycles	The motor was not given enough time to cool down between processing cycles / the motor was allowed to idle while in operation	Wait half an hour before using the appliance. If it still does not work, please send to the nearest service centre for inspection. This is NOT covered by Warranty

ENVIRONMENTAL TIP

This appliance, along with all other electronic appliances, should, when it is no longer capable of functioning, be disposed with the least possible environmental damage according to the local regulations in your area. In most cases you can discard the appliance at your local recycling centre.

DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.



SPECIFICATION

MODEL	VOLTAGE	POWER
PPBL775	220-240V ~50-60HZ	500W

WARRANTY

Warranty Conditions

1. This warranty provides against defective materials and manufacturing faults throughout for two years from the date of purchase of the appliance. The warranty on the Compressor is 10 years subject to the same conditions as above.
2. This warranty also does not cover normal wear and tear, replacement of consumable materials and accessories, and the cost of maintenance of the appliance.
3. This warranty does not cover the repair or replacement of part/s damaged by misuse, accidents, negligence, alterations, or modifications in any way, or repairs done by any repair organisation without the prior consent of PowerPac Electrical Pte Ltd.
4. Repair and service are to be performed at: 5 Changi South Lane #03-01 Singapore 486045. A transport fee will be charged for personal doorstep service.
5. The original purchaser of the appliance must furnish proof of purchase to our Service Centre with the email or number as registered during submission of warranty when this appliance is sent for repair/service. Failure to do so may delay the receipt of said repair/service by the customer.


6. Under no circumstances whatsoever shall the serial number be erased, defaced or altered by the customer and/or his representatives, or the dealer and/or his agents. Failure to ensure this shall invalidate the warranty.
7. This warranty is deemed to be void if the defect is caused by the attack of household pests, fire, lightning, natural disasters, pollution, abnormal voltage or the usage of generators.
8. This warranty is valid in Singapore only.
9. This warranty will be honoured subject to the customer's registration of the warranty inclusive of original invoice or valid purchase receipt. Failure to present these documents will result in denial of service. However, if the customer still requests that the defective appliance be repaired, PowerPac Electrical Pte Ltd may, at its discretion, repair the appliance but impose a labour charge, as well as the costs of the replacement parts, to be borne solely by the customer.
10. Please refer to the attached picture for the location of one of our appliance's serial number, as an example.



Please complete the on-line registration warranty form available on our website. There is no further requirement to send us any hard copy as part of our efforts to save the environment.

In accordance with the terms and conditions of this limited warranty as stated above, PowerPac Electrical Pte Ltd, at its expense shall provide free services for the appliance within the warranty period from its date of purchase from our Authorised dealers.

Documents / Resources

	<p>PowerPac PPBL775 4in1 Multi-Functional Food Processor [pdf] Instruction Manual PPBL775 4in1 Multi-Functional Food Processor, PPBL775, 4in1 Multi-Functional Food Processor, Multi-Functional Food Processor, Functional Food Processor, Food Processor, Processor</p>
---	---