



POWERTECH USB Type-C Laptop Charger MP3344 User Manual

[Home](#) » [POWERTECH](#) » POWERTECH USB Type-C Laptop Charger MP3344 User Manual 

*POWERTECH USB Type-C Laptop Charger
MP3344 User Manual*

POWERTECH

MP3344

USB Type-C Laptop Charger



Instruction Manual

Note:

Please read this manual and its instructions carefully before use. We are not responsible for any damage caused by incorrect or reckless operation.

Contents

[1 Important Safety](#)

[Information:](#)

[2 PRODUCT DIAGRAM:](#)

[3 OPERATING INSTRUCTIONS:](#)

[4 PRODUCT FEATURES:](#)

[5 PRODUCT SPECIFICATIONS:](#)

[6 PACKAGE CONTENT:](#)

[7 Documents / Resources](#)


[8 Related Posts](#)

Important Safety Information:

This safety guideline is to help you operate your Laptop charger safely, to ensure your personal safety and reduce the risk of fire, electric shock or injury.


- 1.** Do not apply external force on the cord.
- 2.** Do not unplug by pulling the cord.
- 3.** Do not connect a binded cord to the power supply.
- 4.** Do not place the cord or device near heating elements.
- 5.** Do not bend the blade or pins of the plug.
- 6.** If there is any strange sound, smoke or odor, pull of the cable immediately.
- 7.** Do not disassemble (It may cause fire or electric shock)
- 8.** Do not put any sharp objects into the venting hole of the product (It may cause fire or electric shock)
- 9.** Ensure to plug the product firmly.
- 10.** Ensure not to use a damaged cable. (It may cause fire or electric shock)
- 11.** Do not place the product on a bed, bag or inside a closet that is not good for ventilation.
- 12.** Always wipe off the product with soft fabric, not water mop.(water may cause electric shock)
- 13.** Keep clean the power plug and the outlet (Dirt may cause a short circuit and fire)
- 14.** Keep the product out of reach of children.
- 15.** Don't unplug the power cord with a wet hand. (It may cause electric shock)
- 16.** Unplug the power cord if you don't use the product for a long time. (It may cause heat, fire and electric shock)the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.

PRODUCT DIAGRAM:

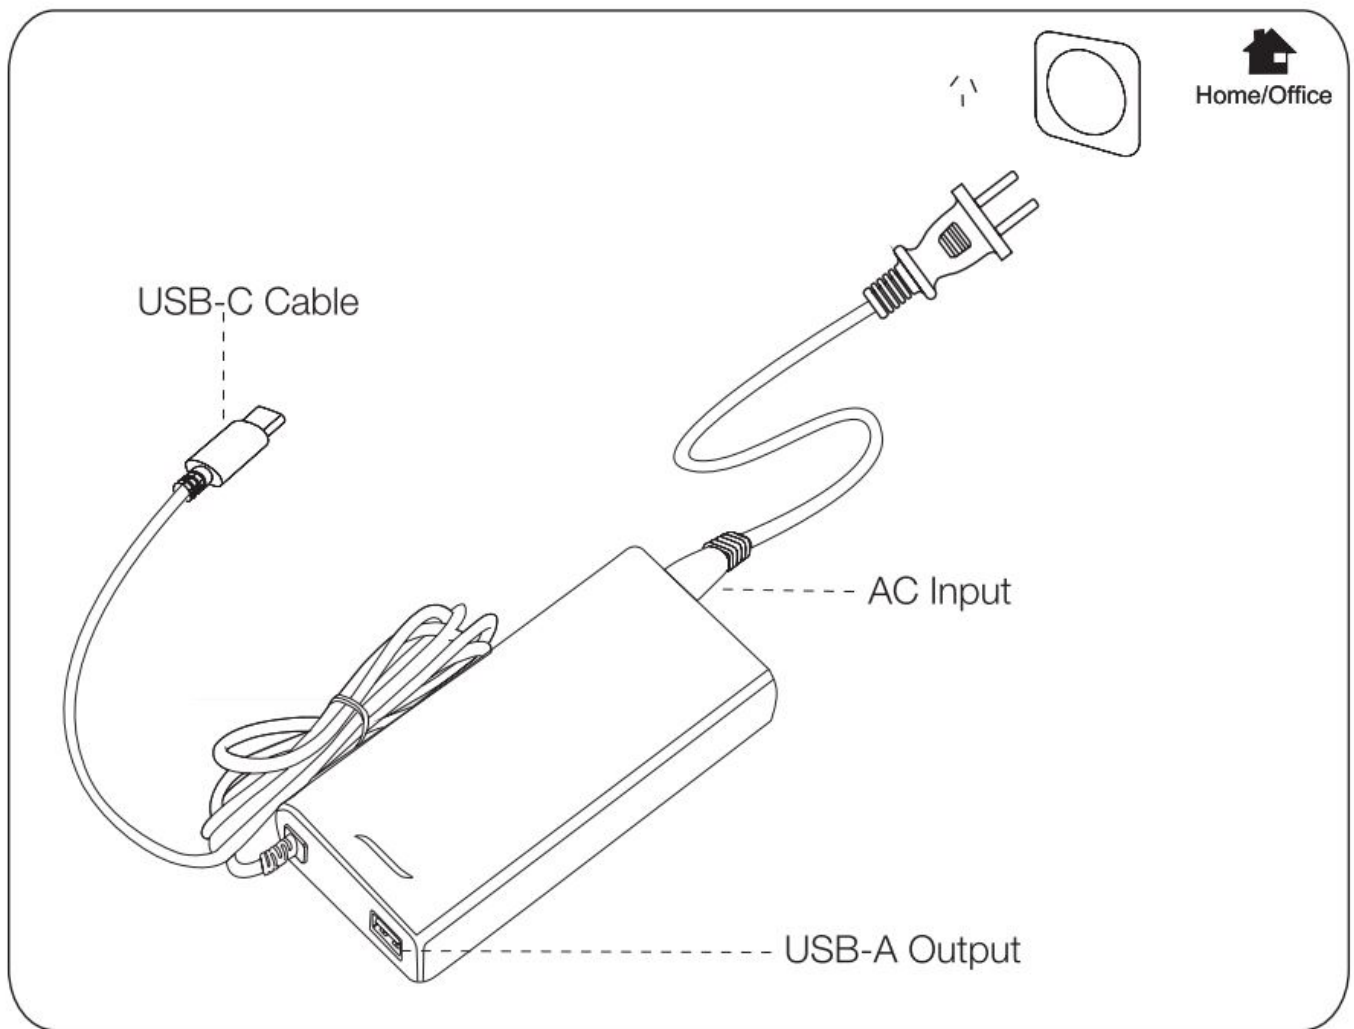

OPERATING INSTRUCTIONS:

1. Connect the AC power cord into the AC input port of your charger.
2. Insert the other end of the AC power cord into a wall ac outlet.
3. Insert the USB-C connector into the power port of your laptop.
4. When the charger is properly connected and powered, your laptop could be well charged.

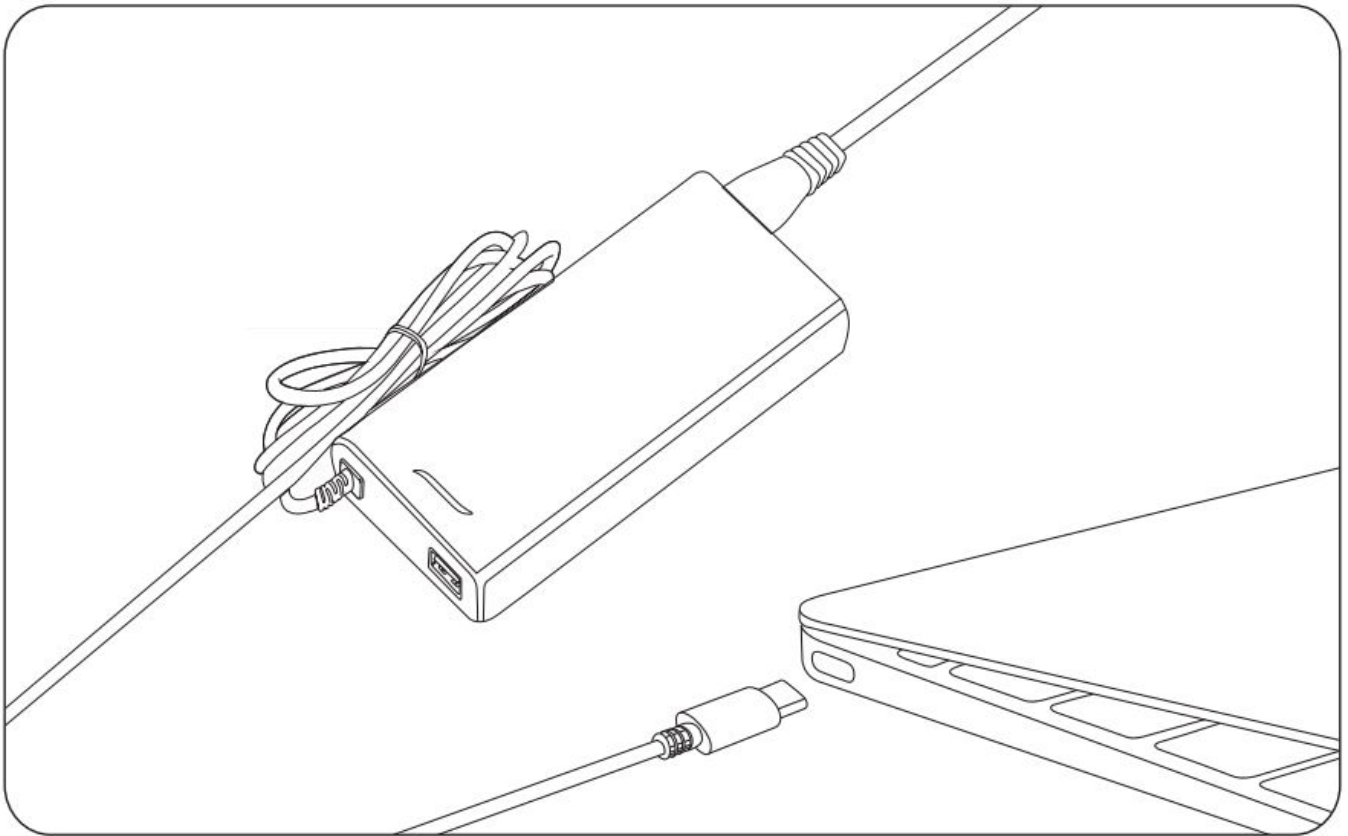

PRODUCT FEATURES:

- 1.** The USB Type-C Laptop Charger adopting USB PD3.0 agreements offers fast, efficient charging at home, in the office or on the go.
- 2.** Supports PD fast charging with maximum power up to 100W, fast charge your MacBook Pro 15",16", MacBook Air in about 2 hours.
- 3.** Perfected to work with both PD & QC charging from laptops to smart phones and tablets such as MacBook Pro/Air and Dell XPS 13, iPhones, iPad Pro, and other compatible US-C devices.
- 4.** The USB-A port with smart IC could charge iPad, iPhone, iPod, all the Android smartphones, digital cameras, bluetooth headset, GPS, etc.
- 5.** AC input 100-240V, worldwide compatible.
- 6.** Intelligent multiple safety protection function, over current protection, over voltage protection, short circuit protection, over temperature protection.

PRODUCT SPECIFICATIONS:

Model:	MP3344
Input:	AC 100-240V 2.3A 50/60Hz
Output 1:	USB-C port DC 5-20V 5A(MAX)
Output 2:	USB-A port DC 5V 2.4A
Power:	112W (MAX)
Dimensions:	142(L) x 63(W) x 33(D)mm
Net Weight:	430g

PACKAGE CONTENT:

1. USB Type-C Laptop Charger main unit
2. AC power cord
3. User manual


Distributed by:

Electus Distribution Pty. Ltd. 320 Victoria Rd, Rydal mere NSW 2116 Australia

www.electusdistribution.com.au

Made in China

Documents / Resources

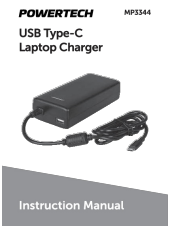 <p>POWERTECH MP3344 USB Type-C Laptop Charger</p> <p>Instruction Manual</p>	<p>POWERTECH USB Type-C Laptop Charger MP3344 [pdf] User Manual POWERTECH, USB Type-C Laptop Charger, MP3344</p>
---	--