

PowerUC PSTT036 Split Core Current Transformer Installation Guide

Home » Poweruc » Poweruc PSTT036 Split Core Current Transformer Installation Guide 🖫



PSTT036

Contents

- 1 PSTT036 Split Core Current
- **Transformer**
- 2 Installation diagram
- 3 Documents / Resources

PSTT036 Split Core Current Transformer

Φ36mm Aperture Split core current transformer With electricity, temperature measurement function.





Product features

- Opening and closing structure
- simple installation
- Puncture of their
- Temperature monitoring

Product application


- Electric instrument and meter
- Electronic multifunction meter
- · Check instrument

Product advantage

- Economic and practical
- Improve efficiency
- High cost performance

Installation diagram

One pass threading method

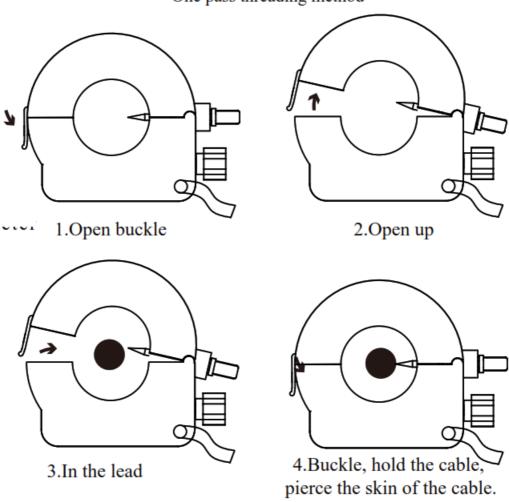


Typical technical index

- Material of core—Nanocrystalline
- Work voltage——Phase voltage≤720V
- Operating temperature——-30°C +75°C
- Storage temperature——-40°C +85°C
- Work frequency——20Hz 20KHz
- Delectric strength——Output/shell AC 3.5KV/1min 5mA 50Hz
- weight---- g

Electrical parameters: The following parameters are typical values and actual values will be subject to product testing Remarks:

Rated input41C100A		200A	300A	-100A	500A	600A	
Rated output	0. IA	O. IA	O. IA	O. IA	0. IA	0. IA	Can be made according to
Turns ratio _j 1:1000		1:2000	1:3000	1:4000	1:5000	1:600 0	user requirements parameter s
Accuracy	0. 5%						
Sampling resistance	100 Q 10K Q ± 1% (25°C)						
Temperature sensor parameters							B25'C'/50t: 3,950K ±1% (B v alue)
Fetch parameter	110V/22 OV/38 OV						
Current output line	Black: I-	- Yellow: I	F				Take electricity can only be u sed as a measure the voltage punctu re, cannot be used to take to, otherwise accident may occur
Take the output line	Red: Voltage U						
Temperature output li	Blue : temperature Oran2e: temperatureT T						

Schematic Diagram

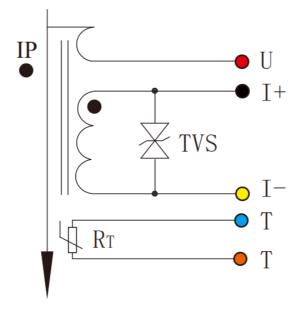



Diameter 6mm

Pressure 2KV/0.5mA/1min

Temperature -30°C~+80°C

Leading wire specification Five core shielding wire color of lead wire Red Black Yellow Blue Orange

Red-0.2mm²


Black-0.1mm²

Yellow-0.1mm²


Blue-0.1mm²

Orange-0.1 mm²

Dimensions(in mm±0.5

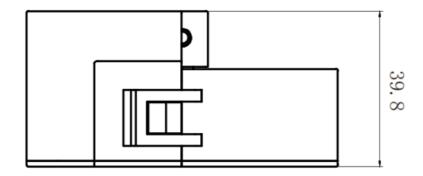

Color	Define
Red	voltage U
Black	current I+
Yellow	current I-
Blue	Temperature T
Orange	Temperature T

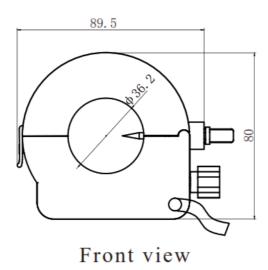

60cm

Lead set of heat shrinkable tube on both ends

Instructions for use

- 1. According to the connection mode of correct connection
- 2. The direction shown by the arrow is positive
- 3. Full hole measurement, the best effect
- 4. Faulty wiring can lead to product damage and output uncertainty

Safe operation:

- Please read this specification carefully before use.
- Need to replace product, please be sure to take insulating gloves, remove all the splice of the connected with.
- If found shell, devices attached to the fixed parts, wire, or have any damaged, please immediately deal with hidden dangers.
- If there is any doubt about the safe operation of the equipment, the equipment and the corresponding accessories should be closed immediately, and the fastest time for troubleshooting.

Proclamations

As our products are constantly being improved and updated, we reserve the right to modify the content of this specification at any time without prior notice.



Documents / Resources



<u>PowerUC PSTT036 Split Core Current Transformer</u> [pdf] Installation Guide PSTT036 Split Core Current Transformer, PSTT036, Split Core Current Transformer, Core Current Transformer, Transformer

Manuals+,