



PowerWalker Basic VI 3000 STL Line-interactive UPS User Manual

[Home](#) » [PowerWalker](#) » PowerWalker Basic VI 3000 STL Line-interactive UPS User Manual 

Contents

- 1 PowerWalker Basic VI 3000 STL Line-interactive UPS
- 2 IMPORTANT SAFETY INSTRUCTIONS
- 3 INSTALLING YOUR UPS SYSTEM
- 4 BASIC OPERATION
 - 4.1 REAR PANEL DESCRIPTION
- 5 FUNCTION TEST
- 6 ROUTINE MAINTENANCE AND STORAGE
- 7 TECHNICAL SPECIFICATIONS
- 8 DEFINITIONS FOR ILLUMINATED LCD INDICATORS
- 9 ALARM DEFINITIONS
- 10 TROUBLE SHOOTING
- 11 SOFT DOWNLOAD
- 12 Documents / Resources
 - 12.1 References
- 13 Related Posts



PowerWalker Basic VI 3000 STL Line-interactive UPS



IMPORTANT SAFETY INSTRUCTIONS

(SAVE THESE INSTRUCTIONS) This manual contains important safety instructions. Please read and follow all instructions carefully during installation and operation of the unit. Read this manual thoroughly before attempting to unpack, install, or operate the UPS. Ensure the wall outlet and UPS are located near the equipment being attached for proper accessibility. To reduce risk of damage and injury, please use batteries with good quality. Provide adequate ventilation for the battery compartment. The battery enclosure should be designed to prevent accumulation and concentration of hydrogen gas at the top of the compartment. DO NOT expose the UPS to rain, snow, or liquids of any type. The UPS is designed for indoor use only. DO NOT obstruct the ventilation openings. DO NOT connect neutral of the power distribution box on the wall to the output neutral of UPS. Otherwise, the reversed polarity will damage the UPS and the connected equipment.

CAUTION! Risk of electric shock do not remove cover. No user serviceable parts inside. The battery can energize hazardous live parts inside even when the AC input power is disconnected. To avoid electrical shock, turn off the UPS and unplug it from the AC power source before servicing the battery. Servicing the battery can only be performed by trained personnel.

INSTALLING YOUR UPS SYSTEM

UNPACKING

Inspect the UPS upon receipt. The box should contain the following:

1. UPS Unit x1;
2. User Manual x1;
3. USB Cable x1(optional);

OVERVIEW

The UPS provides battery backup during power outages. The UPS ensures consistent power to your computer system and its included software will automatically save your open files and shut down your computer system during a utility power loss.

HARDWARE INSTALLATION GUIDE

Before installation, please read and understand the following instructions:

1. Placement

The UPS must be installed in a protected environment away from heat-emitting appliances such as a radiator or heat register. Do not install this product where excessive moisture is present.

2. Ventilation

The location should provide adequate air flow around the UPS with 10 cm minimum clearance on all sides for proper ventilation.

3. Connect to AC and Charge the Battery


Connect the UPS to a wall outlet. Avoid using extension cords and adapter plugs. Charging the battery for at least 8 hours is recommended to ensure that the battery is fully charged. To recharge the battery, simply leave the unit plugged into a wall outlet. To maintain optimal battery charge, leave the UPS always plugged into an AC outlet. This UPS can be charged even when UPS is not turned on.

4. Connect the Load

Connect the equipment to the UPS outlet. Please make sure that the total loads of your equipment are less than the maximum total power load of the UPS. Connect your computer, monitor, and any externally powered data storage device (Hard drive, Tape drive, etc.) into the outlets only when the UPS is off and unplugged. Do not plug a laser printer, copier, space heater, vacuum, paper shredder or other large electrical device into the UPS. The power demands of these devices will overload and possibly damage the unit.

BASIC OPERATION

FRONT PANEL DESCRIPTION

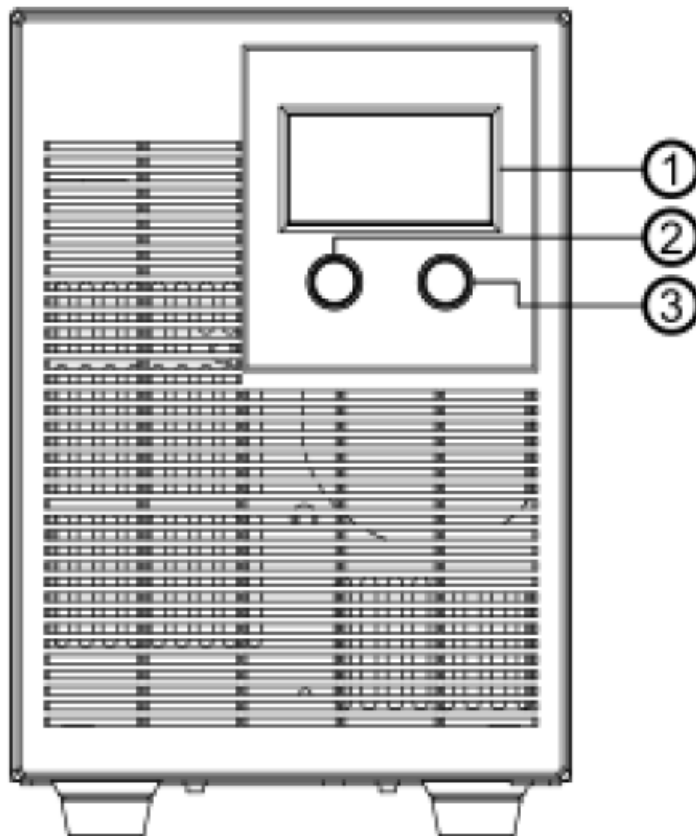

1. LCD Display

The LCD will display the UPS status including input voltage, output voltage, percentage of load and battery, etc.


2. Power On/Off Button

Press the power Button to turn the UPS ON or OFF.

3. Mute Button

The audible alarm can be turned off/on by pressing this button 3 seconds continuously and can also show page flipping by pressing this button for 1 second.

REAR PANEL DESCRIPTION

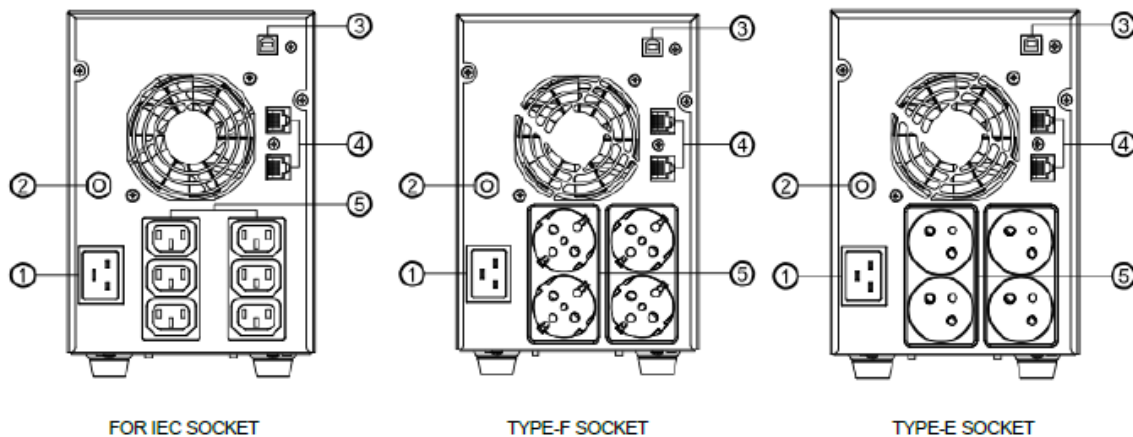

1. AC Inlet

Connect to utility power through the input power cord.

2. Input Circuit Breaker

The circuit breaker provides optional overload protection.

3. USB Port to PC

This port allows connection and communication from the USB port on the computer to the UPS unit.

4. RJ45/RJ11 Communication Protect Port

This port will protect any standard modem, fax, telephone line, or network cable.

5. AC Outlet

The UPS provides outlets for connected equipment to insure temporary uninterrupted operation during a power failure and against surges and spikes. (Different types of sockets can be customized)

FUNCTION TEST

AC Mode

The UPS delivers power to the load derived from the utility and maintains proper battery charge.

On-Battery Mode

The UPS operates on battery when the utility voltage has fallen outside the limits. Local users are alerted to this mode of operation by visual and audible indicators. The UPS provides power to the load from the battery and the output voltage of the UPS are regulated within a narrow range.

1. Button On

Press the power Button 2 seconds then the status LCD will light up.

2. Button Off

Press the power Button 2 seconds again, the status LCD will go off.

3. Cold Start / Start on Battery:

This UPS can be turned on even when AC is not present. Press the power Button 2 seconds then the status LCD will light up.

ROUTINE MAINTENANCE AND STORAGE

ROUTINE MAINTENANCE

1. Use dry soft clothes to clean the panel and plastic parts. Do not use any detergent that contains alcoholic ingredient.
2. Unplug the UPS from power inlet if the UPS will not operate for long period of time.

STORAGE

1. First turn off your UPS and disconnect its power cord from the wall outlet. Disconnect all cables connected the UPS to avoid battery drain.
2. The UPS should be stored in a cool dry location.
3. Make sure the battery is fully charged before the UPS is stored.
4. For extended storage in moderate climates, the battery should be charged for 12 hours every 3 months by plugging the power cord into the wall receptacle and turning on the main Button. Repeat it every 2 months in high temperature locations


TECHNICAL SPECIFICATIONS

Model	PowerWalker Basic VI 3000 STL
Capacity (VA)	3000
Capacity(Watts)	1800
Input	
Input Voltage Range	162 ~ 290 Vac
Frequency Range	40-70 Hz
Output	
On Battery Output Voltage	Simulated Sinewave at 230Vac +/-10%
On Battery Output Frequency	50/60Hz
Overload Protection	On Utility: breaker On Battery: Internal software Limiting
Physical	

Maximum Dimensions (WxHxD) (mm)	151 x 225 x 390
Weight (kg)	18.1
Battery	
Voltage	24Vdc
Charger Current	1.5A +/-0.2A(Normal)
Warning Diagnostics	
Indicators	AC Mode, Power On, Battery mode, Fault
Audible Alarms	Low Battery, Overload, Fault
Environmental	
Operating Temperature	+32°F to 104°F (0°C to 40°C)
Operating Relative Humidity	0 to 90% NON-CONDENSING
Management	
Auto-Charger	Yes
Auto-Restart	Yes



DEFINITIONS FOR ILLUMINATED LCD INDICATORS

LCD Indication

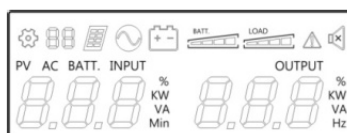

	Bat-mode		Line mode
	Fault		Sound disabled (Press the mute key 3s to disable and enable the Buzzer sound)
	Bat mode: Battery Capacity Line mode: 1. Battery charging, cycle lighting 2. Battery full charged: Lighting		Load capacity

LCD display

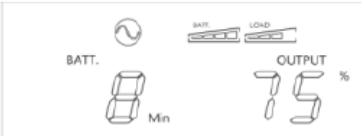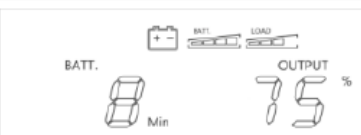Page	display
Initial	
2th	
3th	
Initial	
2th	
3th	

ALARM DEFINITIONS

Alarm	Conditions
Off	Normal
Beep 1 time In Every 30 Seconds	Utility Failure – The UPS is providing battery power to outlets.
Beep 1 time In Every 2 Seconds	Utility Failure – The UPS is providing battery power. The rapid beeps indicate the battery will run out of power shortly.
Beep 1 time In Every 0.5 Second	Overload – Occurs when connected equipment exceeds the rating of the unit. Turn the UPS off and unplug at least one piece of equipment from the UPS.

TROUBLE SHOOTING

Problem	Possible Causes	Remedy
Abnormal		
Mains normal	1. AC Input missing	1. Check AC input connection.

but not works in AC mode	2. Input Breaker is tripped	2. Unplug the power cord of the UPS, then press the circuit breaker knob.
The UPS will not turn on	The on/off Button is designed to prevent damage by rapidly turning it off and on.	Turn the UPS off. Wait 10 seconds and then turn the UPS on.
	The unit is not connected to an AC outlet.	The unit must be connected to a 220-240V 50/60Hz outlet.
	The battery is worn out.	Contact Technical Support.
	Mechanical problem.	
Outlets do not provide power to equipment	Circuit breaker is tripped due to overload	Turn the UPS off and unplug at least one piece connected equipment. Unplug the power cord of the UPS then press the circuit breaker knob.
	Batteries are discharged	Allow the unit to recharge for at least 4 hours.
	Unit has been damaged by a surge or spike .	Contact Technical Support.
Alarm		
Alarm code A56	Battery capacity is low	
Alarm code A59	Battery disconnected	
Alarm code A64	Overload occurs.	
Fault		
Fault code E06	INV soft start fail	Restart the UPS, if the fault is still, contact Technical Support
Fault code E07	INV volt high	
Fault code E08	INV Volt low	
Fault code E09	Output circuit short.	Your attached equipment may have problems, please remove them, and check again.
Fault code E11	Battery voltage is too high.	1. Shut down the UPS

Fault code E1 2	Battery voltage is too low	2. Check the counts of Battery 3. Check battery connector when use battery packages.
Fault code E1 3	Battery is overcharge	
Fault code E1 4	Overload occurs.	Shut off non-essential equipment. If this solves the overload problem, the UPS will transfer to normal operation.
Other		
Software is in active	The serial is not connected.	Connect the serial cable to the UPS unit and an open serial port on the back of the computer. You must use the cable that came with the unit.
	The unit is not providing battery power.	Shutdown your computer and turn the UPS off. Wait 10 seconds and turn the UPS back on. This should reset the unit.

If any abnormal situations occur that are not listed above, please contact service personnel.


SOFT DOWNLOAD

Power Master management software provides a user-friendly interface for your power systems. The graphic user-interface is intuitive and displays essential power information at a glance. Please follow procedure below to install the software. Installation procedure: Download Power Master from the website:

<https://powerwalker.com/software/#powermaster> Double-click the file and follow the installation steps. When your computer restarts, the Power Master software will appear as a blue icon located in the system tray.

All rights reserved. Reproduction without permission is prohibited

Documents / Resources

	PowerWalker Basic VI 3000 STL Line-interactive UPS [pdf] User Manual Basic VI 3000 STL Line-interactive UPS, Line-interactive UPS, Basic VI 3000 STL, UPS, Basic VI
---	--

References

- [Software | BlueWalker](#)