



PowerWalker SVN 3-3 Solar Inverter Instruction Manual

[Home](#) » [PowerWalker](#) » PowerWalker SVN 3-3 Solar Inverter Instruction Manual 

Contents

- [1 PowerWalker SVN 3-3 Solar Inverter](#)
- [2 Solar Inverter + Lead Battery](#)
- [3 In this case, there are two possible options](#)
- [4 Documents / Resources](#)



PowerWalker SVN 3-3 Solar Inverter



Solar Inverter + Lead Battery

For the Communication, the user has the following options:

- USB-Port (Built-in)
- W-LAN Module (10131018)

If the user wants to use an Energy Meter (10139019), they can use the Intelligent Slot. Solar Inverter + Lithium Battery:

In this case, there are two possible options


- With Energy Meter,
- Or without Energy Meter.

With Energy Meter, you require the following accessories:

- For communication: USB-Port (Built-in) or W-LAN Card (10131020)
- For BMS (necessary for the Lithium Battery Communication): ModBus Duo Box (10131019)
- For the Energy Meter: ModBus Duo Box (10131019)
- The ModBus Duo Box has both communication ports, for both the BMS and the Energy Meter.
- Without Energy Meter, you require the following accessories:

For communication: USB-Port or W-LAN Module (10131018) **For BMS (necessary for the Lithium Battery Communication):** BMS Card (10131017)

Documents / Resources

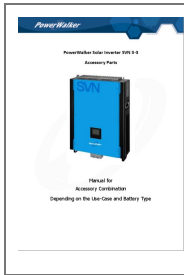

[PowerWalker SVN 3-3 Solar Inverter](#) [pdf] Instruction Manual
SVN 3-3, SVN 3-3 Solar Inverter, Solar Inverter, Inverter