



Contents [[hide](#)]

- [1 POWERWAVE 169412 Console Display Stand](#)
- [2 Specifications](#)
- [3 Setup](#)
- [4 Charging](#)
- [5 Adjusting Incline Levels](#)
- [6 Cleaning and Maintenance](#)
- [7 Product Overview](#)
- [8 Operating Instructions](#)
- [9 Product Care and Safety](#)
- [10 FAQs](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)

POWERWAVE

POWERWAVE 169412 Console Display Stand



Specifications

- Product Name: Powerwave Console Display Stand
- Compatibility: Nintendo Switch™ Console
- Adjustable Incline Levels: Three
- Features: Console Holding Ledge, Adjustable Leg

Setup

1. Unfold the adjustable leg so it rests against a ridge on the base of the display stand.
2. Fold the console holding ledge down to provide a resting spot for your console.

Charging

- Ensure the charging cable access at the bottom of the console is unobstructed when placing it on the stand to facilitate charging while in use.

Adjusting Incline Levels

- To adjust the incline level of the stand, simply move the legs to one of the three available positions to suit your viewing preference.

Cleaning and Maintenance

- Use a soft, damp cloth to clean the display stand. Avoid using harsh chemicals or

abrasive materials that may damage the surface.

Product Overview

- Secure and display your Nintendo Switch™ Console with the Powerwave Console Display Stand. The legs allow the stand to be adjusted to three different incline levels to suit your preference while allowing a charging cable access to the bottom of the console.



Operating Instructions

1. Unfold the adjustable leg so it rests against a ridge on the base of the display stand.
2. Fold the console holding ledge down to provide a resting spot for your console.e

Contents

- 1x Console Display Stand

Product Care and Safety

- Keep your user manual for future reference.
- Use this device solely for its intended purposes.
- For indoor use only.
- Keep away from hot surfaces and naked flames, and liquids.
- When not in use, store in a cool, dry environment away from direct sunlight.

- Do not apply force or put heavy objects onto the product.
- If the product is damaged, broken, or immersed in water, stop use immediately.
- Do not attempt to repair, mo, or disassemble the product.
- Clean with a soft, dry cloth to prevent dirt buildup. Do not use chemical solvents, detergents, or alcohol.
- Keep out of reach of small children.

FAQS


Q: Can I charge my Nintendo Switch while it’s on the display stand?

A: Yes, the design of the stand allows for easy access to the charging port at the bottom of the console.

Q: Can I use this stand with other gaming consoles?


A: The Powerwave Console Display Stand is specifically designed for use with the Nintendo Switch™ Console.

Documents / Resources

	<p>POWERWAVE 169412 Console Display Stand [pdf] Instructions</p> <p>169412 Console Display Stand, 169412, Console Display Stand, Display Stand, Stand</p>
---	---

References

- [User Manual](#)

 POWERWAVE

 169412, 169412 Console Display Stand, Console Display Stand, Display Stand, PowerWave, Stand

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.