



[Home](#) » [POWERWAVE](#) » **POWERWAVE Switch Deluxe Case Instructions** 

Contents [[hide](#)]

[1 POWERWAVE Switch Deluxe Case](#)

[2 Specifications](#)

[3 Layout](#)

[4 Product Care and Safety](#)

[5 Product Usage Instructions](#)

[6 Product Care and Safety](#)

[7 FAQs](#)

[8 Documents / Resources](#)

[8.1 References](#)

POWERWAVE

POWERWAVE Switch Deluxe Case



Specifications

- Product Name: Powerwave Deluxe Case
- Compatibility: Nintendo Switch™ 2
- Features: Dedicated compartments for Console, Dock, AC Adapter, and Controllers
- Material: Sturdy and durable construction
- Color: Black

Product Overview

Designed specifically for the Nintendo Switch 2, the Powerwave Deluxe Case features dedicated compartments to secure your devices in place while on the go, ensuring that everything remains well-protected in your travels. The spacious design allows for storage of all your essential devices, including Console, Dock, AC Adapter, and Controllers, all in a convenient and sturdy case.

Layout

- Game Cartridge Compartments
- Designated Compartments For Switch 2 Console and Accessories
- Extra Storage Compartments
- Carry Strap Clip



Contents

- 1x Deluxe Case
- 1 Clip-On Carry Strap

Product Care and Safety

- Keep your user manual for future reference.
- Use this device solely for its intended purposes.
- For indoor use only.
- Keep away from hot surfaces and naked flames, and liquids.
- When not in use, store in a cool, dry environment away from direct sunlight.
- Do not apply force or put heavy objects onto the product.
- If the product is damaged, broken, or immersed in water, stop use immediately.
- Do not attempt to repair, modify, or disassemble the product.
- Clean with a soft, dry cloth to prevent dirt buildup. Do not use chemical solvents, detergents, or alcohol.
- Keep out of reach of small children.

Product Usage Instructions

1. Open the deluxe case by unzipping it completely.
2. Place the Nintendo Switch™ 2 console in its designated compartment.
3. Secure the console in place to prevent movement during transport.
4. Place the Dock, AC Adapter, and Controllers in their respective compartments.
5. Utilize the extra storage compartments for additional accessories or cables.
6. Attach the Clipcarryy Strap for easy transportation.
7. Zip up the case securely to ensure all items are safely stored.

Product Care and Safety

- Ensure to clean the case regularly with a damp cloth to maintain its appearance. Avoid exposing the case to extreme temperatures or moisture to prevent damage to your devices.

FAQs


Q: Can the Powerwave Deluxe Case fit other gaming consoles?

A: The Powerwave Deluxe Case is specifically designed for the Nintendo Switch™ 2 and may not fit other gaming consoles.

Q: Is the carrying strap adjustable?

A: Yes, the CClicarryStrap included with the Deluxe Case is adjustable for personalized comfort.

Documents / Resources

	<p>POWERWAVE Switch Deluxe Case [pdf] Instructions</p> <p>Switch Deluxe Case, Deluxe Case, Case</p>
---	---

References

- [User Manual](#)

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.