

POWTREE RH-1022 Wireless Gamepad Game Controller



# POWTREE RH-1022 Wireless Gamepad Game Controller Instructions

[Home](#) » [POWTREE](#) » POWTREE RH-1022 Wireless Gamepad Game Controller Instructions 

## Contents

- 1 POWTREE RH-1022 Wireless Gamepad Game Controller
- 2 Product Usage Instructions
- 3 Instructions for use
- 4 Product Concept
- 5 Xbox consoles connection
- 6 PC wireless connection
- 7 One Click Reconnection
- 8 Xbox One 2.4G handle is in the dormant mod
- 9 TURBO Function
- 10 MACRO Programming Function
- 11 Macro function Cancel
- 12 Mute indication:
- 13 joystick calibration
- 14 Shut down the console
- 15 Packing list
- 16 Documents / Resources
  - 16.1 References
- 17 Related Posts

# POWTREE

**POWTREE RH-1022 Wireless Gamepad Game Controller**



### **Specifications:**

- Model: RH-1022
- Interface: TYPE-C
- Compatibility: Xbox consoles and PC
- Wireless Range: Up to 10 meters
- Turbo Function: Supported
- Macro Programming Function: Supported

### **Product Usage Instructions**

#### **Xbox consoles connection**

1. Turn on the Xbox Console power (xbox console indicator light starts to flash)
2. Insert the USB Dongle receiver (Dongle indicator light starts to flash slowly)
3. Press and hold the controller HOME button for 1 second (The HOME indicator light began to flash; the HOME button and the indicator light of the receiver keep on at the same time, indicating that the pairing is successful.)

#### **PC wireless connection**

1. Insert the USB Dongle into the PC (The receiver's indicator light began to flash slowly)
2. Press and hold the controller HOME button for 3 seconds (HOME indicator light flickered slowly)

3. Press and hold the controller HOME button for 1 second (The controller Home button changes from slow flash to fast flashing, the indicator light of the receiver and HOME button keep on at the same time, indicating that the pairing is successful)
4. Short press the button on the end of the receiver (The receiver's indicator light began to fast flash)

### **One Click Reconnection**

After the receiver and the handle complete the first pairing, the return mode will be entered when the connection is connected again. At this time:

- Insert the USB Dongle into the PC (LED lights flashed slowly, enter the reconnection pairing status;)

### **Xbox One 2.4G handle is in dormant mode**

HOME key on the handle LED light flashes slowly, enters the reconnection pairing state. When the receiver and the handle are connected successfully, the receiver blue LED and the handle white LED indicator is often on:

1. Long press the handle home key for 5 seconds, the handle can be turned off directly, the receiver LED flashes slowly, enter the back-connected pairing mode;
2. Unplug the receiver and shut down the handle.

### **TURBO Function**

Any connection method, in any mode, you can support the Turbo function for ABXYLRZLZRL3R3 buttons:

- Hold down the Turbo key, then press the button that needs to be operated
- To cancel the Turbo function, press the above combination key again

### **MACRO Programming Function**

To program macros:

1. Press the SET key for 3 seconds, the HOME indicator light flashes slowly, and the motor vibrates
2. Press any function key (ABXY. LBRBLRTL3R3.Left/Right stick. Cross key) and record key press and release times
3. The macro programming can record a maximum of 16 key values
4. After recording, press any key of PL/PR, the motor vibrates and the HOME indicator is always on, the button programming is successful

### **Macro function Cancel**

To cancel a macro:

1. Press the SET key for 3 seconds, the HOME indicator light flashes slowly, and the motor vibrates
2. Press PL or PR, HOME indicator is always on, the macro setting will be canceled, and the motor will vibrate

## Frequently Asked Questions (FAQ):

- Q: How far is the wireless range of the gamepad?

A: The wireless range of the gamepad is up to 10 meters.

- Q: Can I use the gamepad with Xbox consoles and PC?

A: Yes, the gamepad is compatible with both Xbox consoles and PC.

- Q: How many key values can be recorded using the macro programming function?

 
A: The macro programming function can record a maximum of 16 key values.

- Q: How do I cancel a programmed macro?

A: To cancel a programmed macro, press the SET key for 3 seconds, then press PL or PR. The macro setting will be canceled, and the motor will vibrate.




Please read the instructions carefully before use and use in strict accordance with them.

## Instructions for use

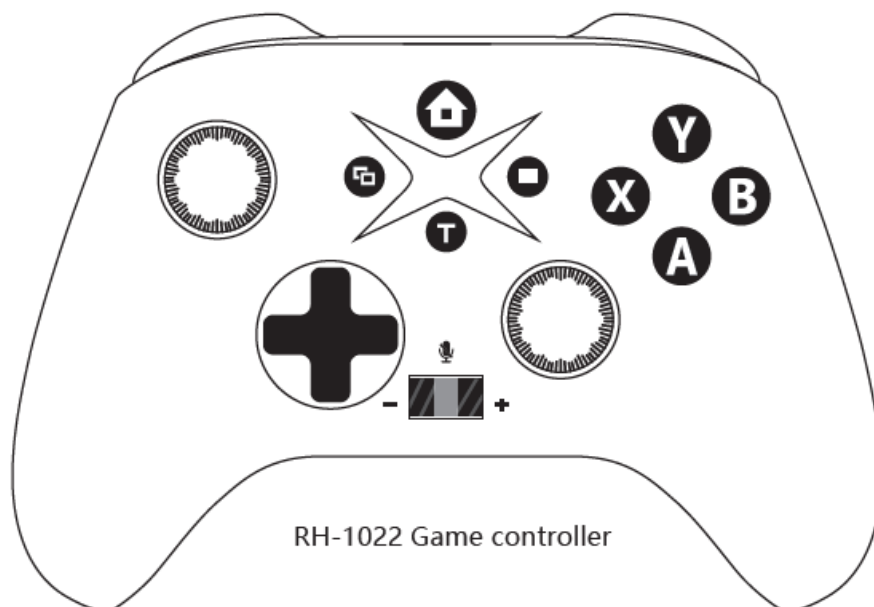


Dongle receiver

## Product Concept

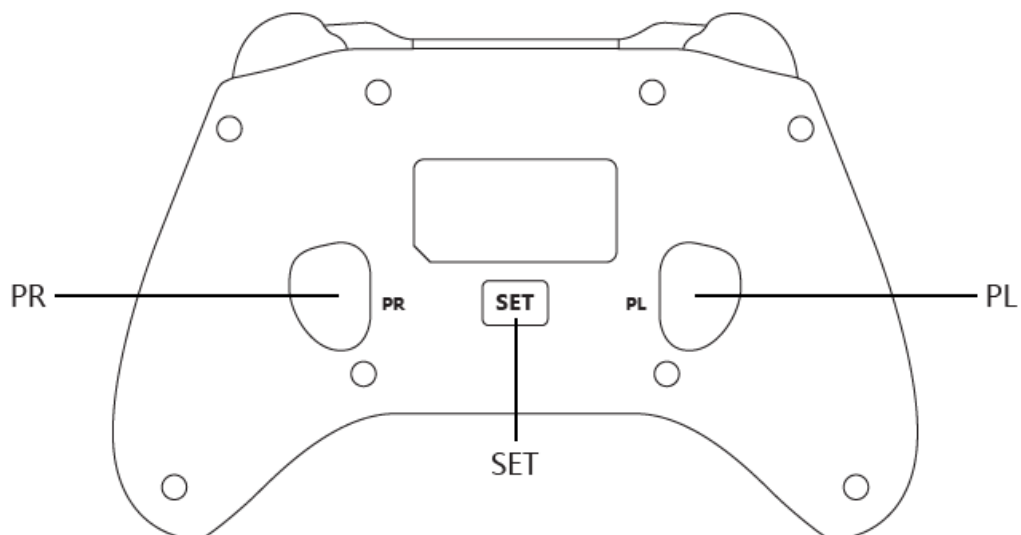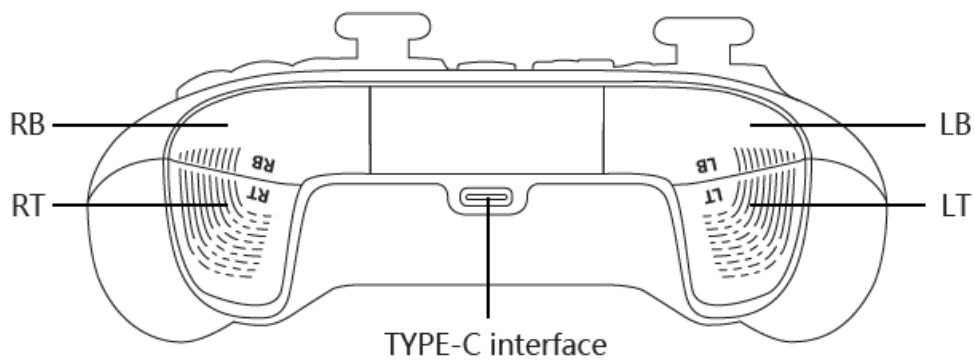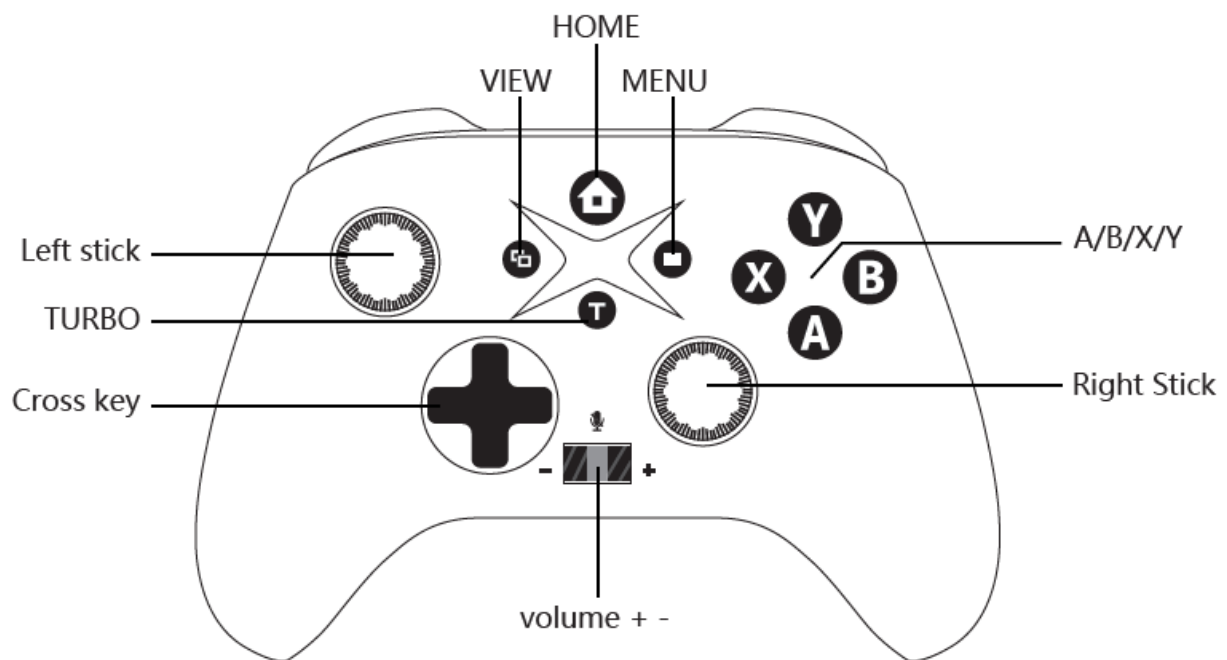   


## Xbox consoles connection

 1. Turn on the Xbox Console power (xbox console indicator light starts to flash)

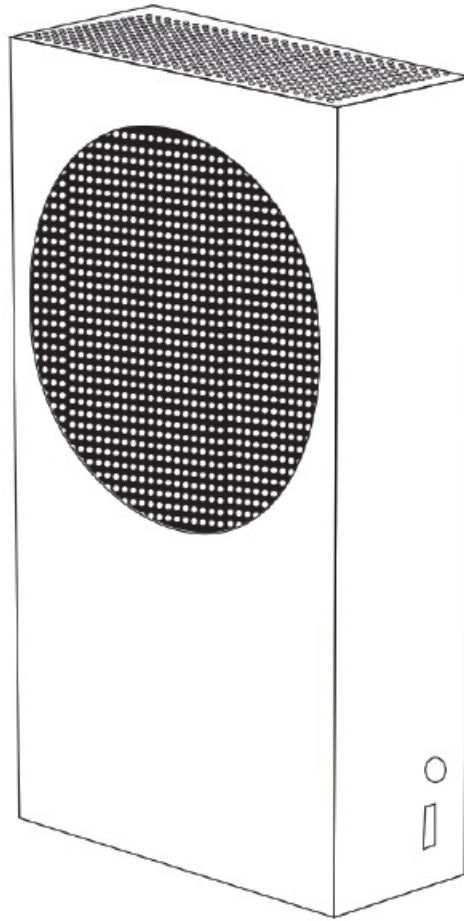

 2. Insert the USB Dongle receiver (Dongle indicator light starts to flash slowly)

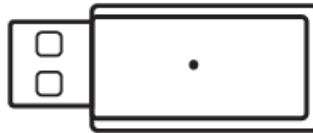


3. Press and hold the controller HOME button for 1 second (HOME indicator light began to flash; HOME button and the indicator light of the receiver keep on at the same time, indicating that the pairing is successful.)



If this method fails to connect, please refer to the PC's connection process

## PC wireless connection

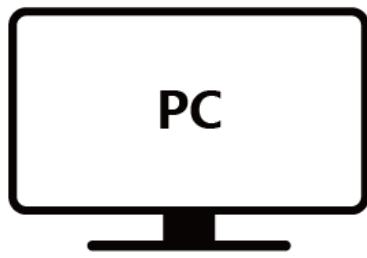 

.....

 


① Insert the USB Donagle into the PC  
(The receiver's indicator light began to flash slowly)

② Press and hold the controller HOME button for 3 second  
(HOME indicator light flickered slowly)



.....

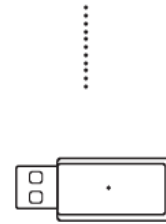


④ Press and hold the controller HOME button for 1 second  
(The controller Home button changes from slow flash to fast flashing, the indicator light of the receiver and HOME button keep on at the same time, indicating that the pairing is successful)

③ Short press the button on the end of the receiver  
(The receiver's indicator light began to fast flash)

1. Insert the USB Donagle into the PC (The receiver's indicator light began to flash slowly)
2. Press and hold the controller HOME button for 3 second (HOME indicator light flickered slowly)
3. Short press the button on the end of the receiver (The receiver's indicator light began to fast flash)
4. Press and hold the controller HOME button for 1 second  
(The controller Home button changes from slow flash to fast flashing, the indicator light of the receiver and HOME button keep on at the same time, indicating that the pairing is successful)

## One Click Reconnection

 After the receiver and the handle complete the first pairing, the return mode will be entered when the connection is connected again. At this time

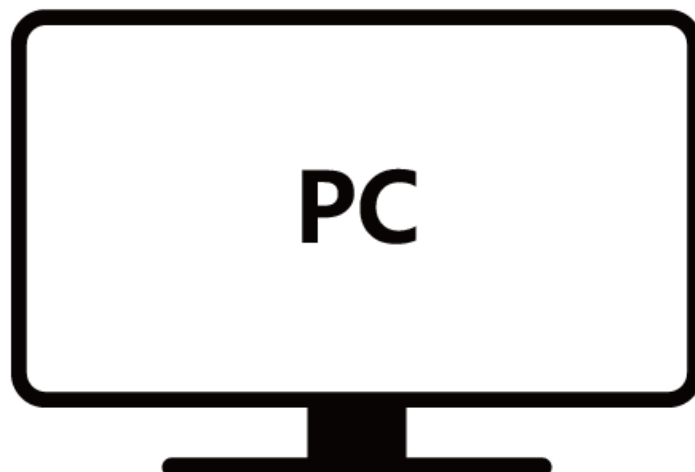

Insert the USB Dongle into the PC  
(LED lights flashed slowly, enter the reconnection pairing status;)

### **Xbox One 2.4G handle is in the dormant mod**



1. HOME key on the handle LED light flashes slowly, enter the reconnection pairing state. When the receiver and the handle are connected successfully, the receiver blue LED and the handle white LED indicator is often on
  2. After the receiver and the handle are successfully connected
- Long press the handle home key for 5 seconds, the handle can be turned off directly, the receiver LED flashes slowly, enter the back -connected pairing mode;
  - Unplug the receiver and shut down the handle.

### **TURBO Function**

1. Any connection method, in any mode, you can support the Tubro function(ABXY L\R\ZL\ZR\L3\R3)



 
2. Hold down the Tubro key, then press the button that needs to be operated (Press the above combination key again, then cancel the key Turbo function)





## MACRO Programming Function


1. Press the SET key for 3 seconds, the HOME indicator light flashes slowly, and the motor vibrates

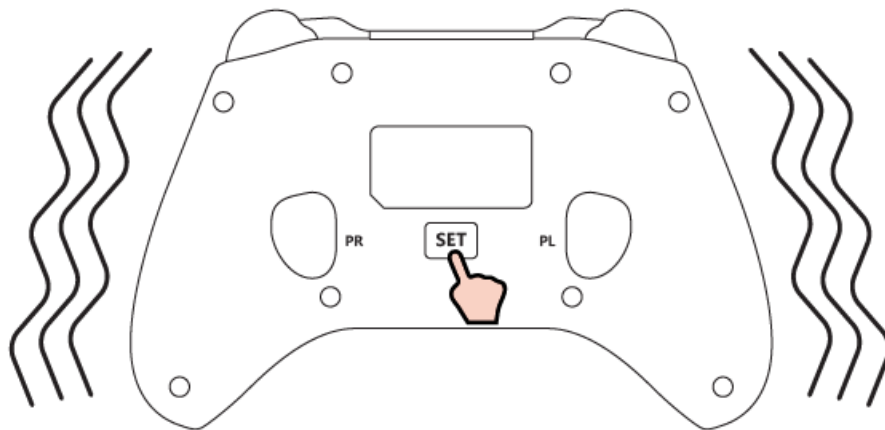

2. Press any function key (ABXY, LB\RB\L3\RT\L3\R3, Left/Right stick, Cross key) and record key press and release times ( The macro programming can record a maximum of 16 key values)




 3. After recording, press any key of PL/PR, the motor vibrates and the HOME indicator is always on, the button programming is successful

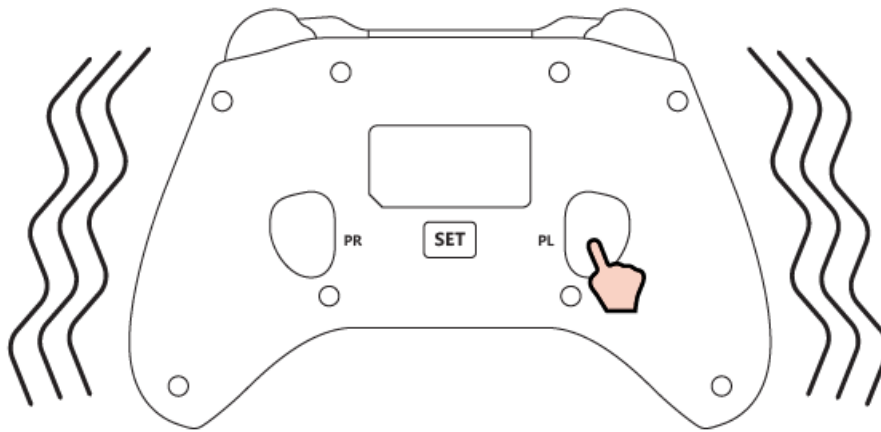


## Macro function Cancel

 1. Press the SET key for 3 seconds, the HOME indicator light flashes slowly, and the motor vibrates

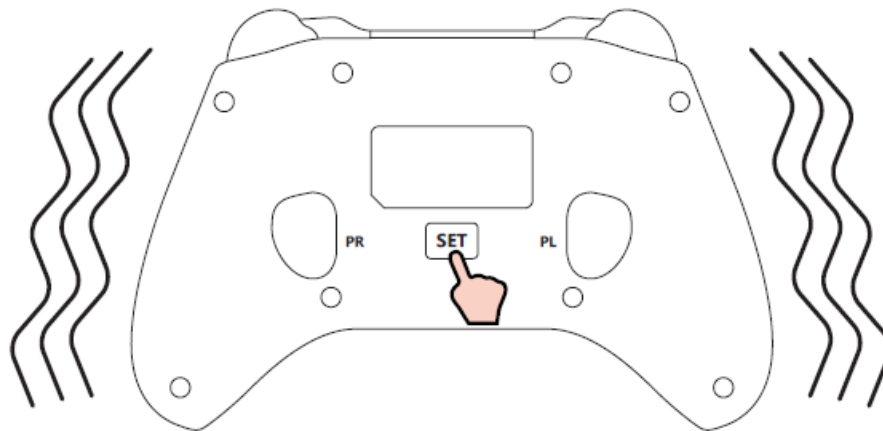

 2. Press PL or PR, the HOME indicator is always on, the macro setting will be canceled, and the motor will vibrate.

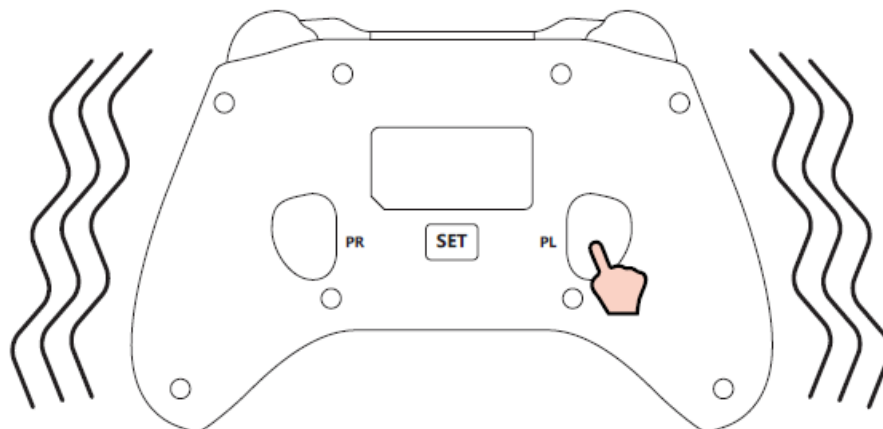

## Mute indication:

Press Vol\_, VOL+ to the Mute key, LED (red light light)

## joystick calibration

After turning on, automatically calibrate the 3D joystick (do not touch the 3D joystick when booting)

## Charge

Handle is turned off, and the LED light is not on. When the handle is inserted into the adapter, the LED light flashes slowly. After full charging, the LED goes off. the handle is connected, and the LED lights are often on. When the handle is inserted into the adapter, the LED light flashes slowly. After full charging, the LED is often on.

### **Low electric alarm**

When the battery voltage of the handle is lower than 3.5V (according to the principle of the battery characteristics), the light flashes at the corresponding channel, indicating that the handle is low and the charge is required. 3.3V low-power shutdown.

### **Shut down the console**

- When the handle is turned on, press and hold the HOME button for 5S to turn off the handle When the handle is in the reconnection state and cannot be connected after 60 seconds, it will automatically shut down
- When the handle is in the code state, it will automatically shut down when the code cannot be coded after 60 seconds
- When the handle is connected to the machine, it will automatically shut down if there is no key operation within 5 minutes

### **Connection distance**

- connection distance of the handle is 10M
- connection distance of the sound is 6M
- Great than the connection distance, automatically shut down

### **Reset function**

When the handle appears abnormal, you can use the reset key behind the handle to reset

### **Reference electrical parameter**

1. Xbox one dongle Receiver

 
### **Support Xbox One Gamepad Test TOOL test software**

**Note:** Since the PC computer is no longer updated the driver under Windows 10, the receiver cannot automatically update the driver in the system below Win10


Packing list



Wireless Gamepad ×1

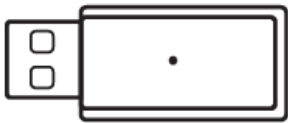

Xbox one dongle ×1

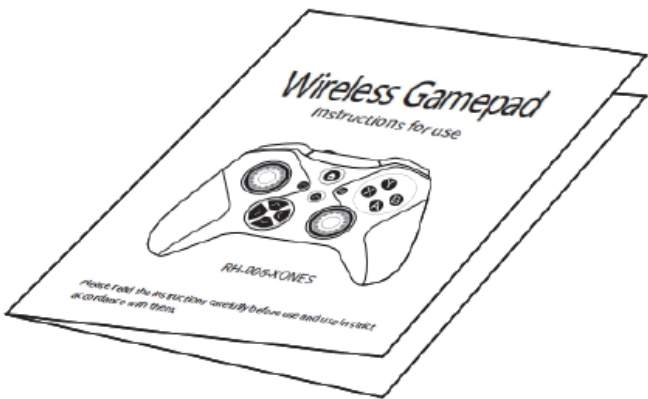 


WireInstruction Manual  
Warranty Card ×1



Type-C Cable X1

Made in China

Documents / Resources

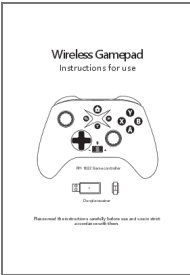	<p><a href="#">POWTREE RH-1022 Wireless Gamepad Game Controller</a> [pdf] Instructions RH-1022 Wireless Gamepad Game Controller, RH-1022, Wireless Gamepad Game Controller, Gamepad Game Controller, Game Controller</p>
---	--

References

- [User Manual](#)

## **Manuals+. Privacy Policy**

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.