

 


PrecisionPower E.7 Equalizer Owner's Manual

[Home](#) » [PrecisionPower](#) » PrecisionPower E.7 Equalizer Owner's Manual 



PrecisionPower E.7 Equalizer
Owner's Manual And Installation Guide

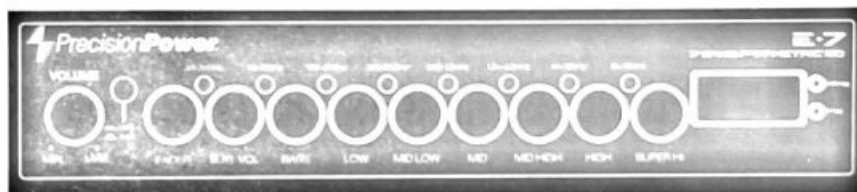

Contents

- [1 FEATURES](#)
- [2 SPECIFICATIONS](#)
- [3 FUNCTIONS](#)
- [4 MECHANICAL](#)
- [INSTALLATION](#)
- [5 WIRING DIAGAM](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

FEATURES


- Active gain Equalizer with adjustable input sensitivity.
- Master volume control with up to 7 volts RMS of output.
- Individual left and right sensitivity controls.

- Seven Band Pre — Amplifier with 12 dB Boost/Cut.
- Specific bandwidth for each band plus high-frequency shelving.
- On-board 30V bipolar switching power supply.
- Subwoofer level control.
- Subwoofer frequency is adjustable.
- Input AUX / DVD select switch.
- Night illumination design.

SPECIFICATIONS

POWER SUPPLY	11-15V DC NEG. GROUND
MAX. OUTPUT VOLTAGE	7V RMS
SUB BASS FREQUENCY	40Hz-120Hz
LOW FREQUENCY	100Hz-400Hz
MID LOW FREQUENCY	350Hz-900Hz
MID FREQUENCY	650Hz-1.5KHz
MID HI FREQUENCY	1.2KHz-4.5KHz
HIGH FREQUENCY	4KHz-12KHz
SUPER HI FREQUENCY	8KHz-18KHz
EQUALIZATION RANGE	a12dB 30 – 300Hz
SUBWOOFER FREQUENCY	15- 50Hz
SUB SONIC FREQ	15K OHMS
INPUT IMPEDANCE S/N RATIO	90dB
T.H.D	0.03%
CHANNEL SEPARATION	70dB

 FUNCTIONS

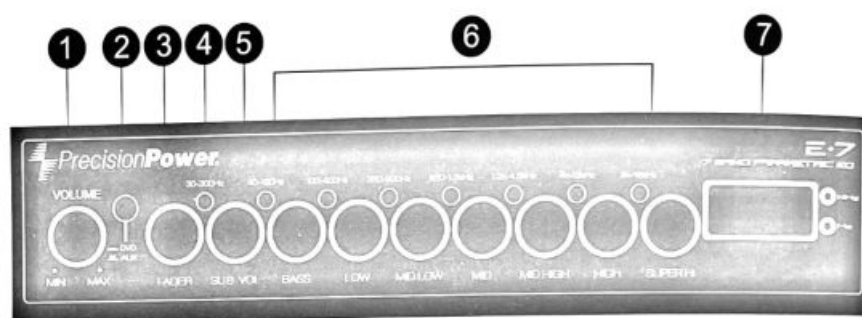

1. VOLUME CONTROL

This control adjusts the output level.

2. INPUT SELECTOR SWITCH

This switch select the AUX input or DVD input.

3. FADER CONTROL

This control adjusts the volume between the front and rear speakers in 4 speaker system.

4. SUBWOOFER FREQ.

This switch select subwoofer frequency 30Hz- 300Hz

5. SUBWOOFER VOLUME

This control adjusts output level of subwoofer.

6. PRE – AMPLIFIER CONTROLS

 
Control the frequency response of the Booster or cut, with the Seven tone controls Each Sub Bass (40Hz-120Hz), Low (100Hz-400Hz),

Mid Low (350Hz-900Hz), Mid (650Hz-1.5KHz), Mid Hi (1.2Hz-4.5KHz), Hi (4KHz-12KHz), Super Hi (8KHz-18KHz).


7. DIGITAL DISPLAY

MECHANICAL INSTALLATION

1. Select the desired location to mount under the dash
2. Drill (4) 2 mm diameter holes. Fix the mounting bracket under dash or hump with (4) 4×15 mm tapping screw. Be careful when drilling so as not to damage existing wiring under the dash board.
3. Mount unit to the mounting bracket with (4) 3×10 mm machine

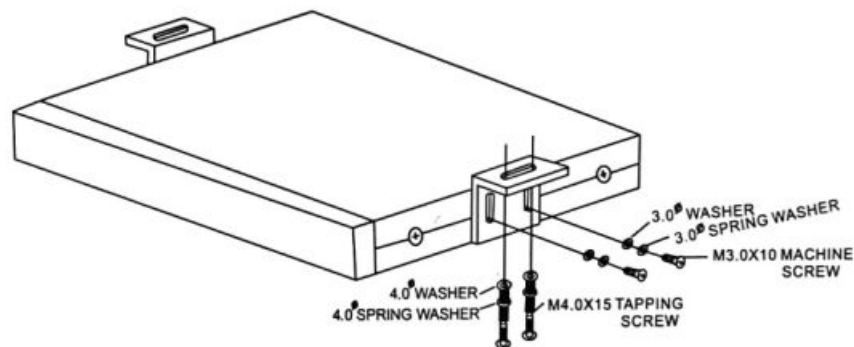

WIRING DIAGRAM

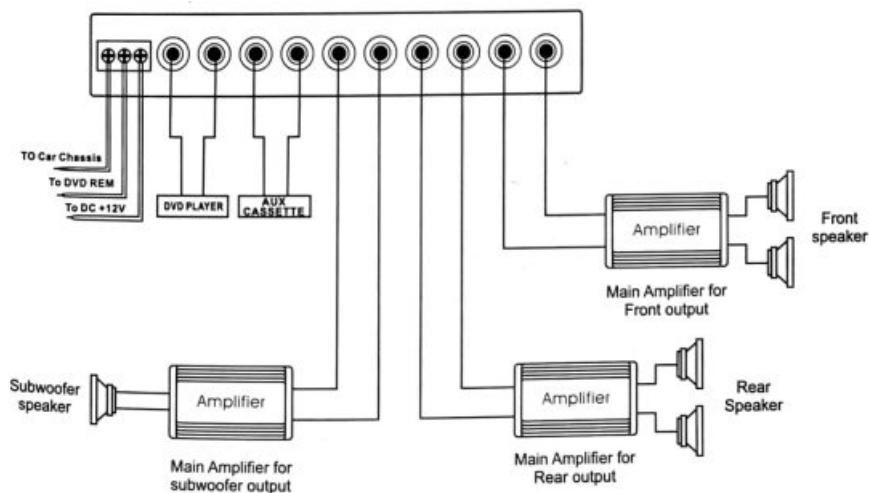 

Documents / Resources



E-7
7 BAND PARAMETRIC EQ
Owner's Manual
And Installation Guide

[PrecisionPower E.7 Equalizer](#) [pdf] Owner's Manual
E.7 Equalizer, E.7, Equalizer

Manuals+,