

PREDATOR 3500 Running Watts, 4375 MAX Starting Watts **User Guide**

Home » Predator » PREDATOR 3500 Running Watts, 4375 MAX Starting Watts User Guide 🖺



PREDATOR®

QUICK START GUIDE 3500 / 4375 59132 59207




Contents

- 1 3500 Running Watts, 4375 MAX Starting Watts
- 2 Starting Procedure
- **3 WATTAGE ESTIMATE CHART**
- 4 Documents / Resources
- **5 Related Posts**

3500 Running Watts, 4375 MAX Starting Watts

Generator Components

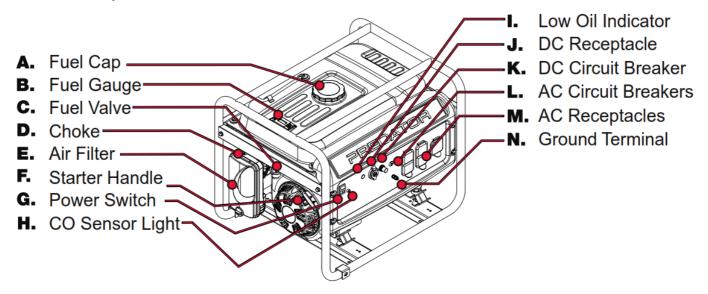



To prevent serious injury: READ MANUAL BEFORE USE.



Position generator outside and unplug all electrical loads




Using a generator indoors CAN KILL YOU IN MINUTES.


Generator exhaust contains carbon monoxide. This is a poison you cannot see or smell.




NEVER use inside a home or garage, EVEN IF doors and windows are open.

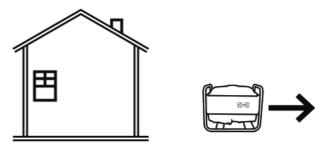

Only use OUTSIDE and far away from windows, doors, and vents.

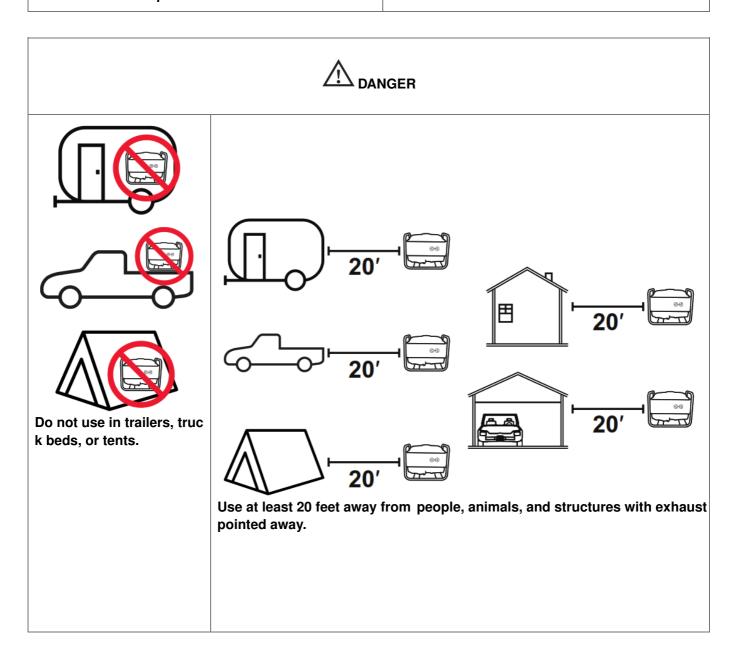


GROUND GENERATOR
TO PREVENT ELECTRIC SHOCK

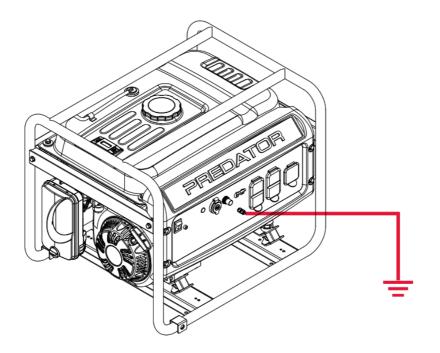

ADD FLUIDS

Check oil and fuel levels. If needed, fill in as shown below

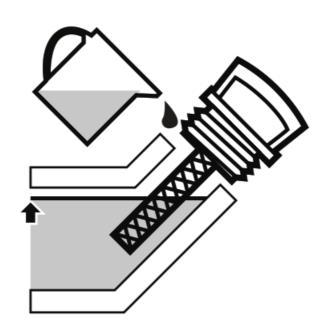

Add oil to engine crankcase
WITHOUT OIL GENERATOR WILL NOT START



Add fuel to within 1" of the rim of the tank


Note: Use regular Unleaded 87 Octane. E85 Ethanol blend will damage engine.

Starting Procedure


1. CHOKE TO START



2. OPEN FUEL VALVE

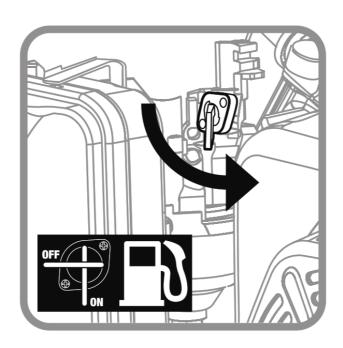

3. SWITCH ON

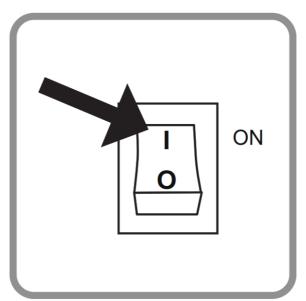


4. PULL STARTER HANDLE



5. CHOKE SLOWLY TO RUN



6. CHECK TOTAL WATTS THEN PLUG IN PRODUCTS

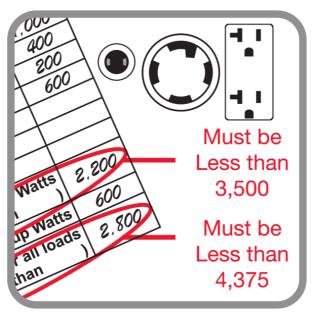

Check total Start-up watts amount before plugging in any equipment. To check the wattage amount:

- 1. Add up the Running Watts for all items you would like to use at any given time.
- 2. Make sure that this total is under the 3,500 rated wattage of the generator.
- 3. Find the single highest starting watts for the selected items and add to the total.
- 4. Make sure that this total is under the 4,375 maximum rated wattage of the generator.
- 5. Plug in and turn on products from largest wattage to smallest.

Typical Product Watts

Check your appliance for actual ratings.

WATTAGE ESTIMATE CHART

EMERGENCY		
DEVICE	RUNNING WATTS	ADDITIONAL STARTUP WATTS
Refrigerator/Freezer	700	1500
Radio	100	0

HOUSEHOLD		
DEVICE	RUNNING WATTS	ADDITIONAL STARTUP WATTS
Computer w/ Monitor	800	0
Electric Clothes Dryer	5500	500
Electric Range	2100	0
Electric Water Heater	2000	0
Light Bulb – 100 Watts	100	0
Microwave – 1000 Watts	1000	200
Sump Pump – 1/2 HP	1000	1100
Television – 27"	400	0
Washing Machine	1100	1100
Well Pump – 1/2 HP	1000	1000

DEVICE		ADDITIONAL START UP WATTS
	RUNNING WATTS	
Air Compressor – 1/2 HP	1000	1000
Table Saw – 10″	1700	1300
Belt Sander – 3"	1200	1200
Hand Drill – 1/2"	600	600
Halogen Work Light	1000	0
Reciprocating Saw	900	900

LAWN & GARDEN		
DEVICE	RUNNING WATTS	ADDITIONAL STARTUP WATTS
Hedge Trimmer	400	400
Pressure Washer	1200	1200
Lawn Mower	1200	1200
Edger	1000	1000

RECREATION		
DEVICE	RUNNING WATTS	ADDITIONAL START UP WATTS
AM/FM Radio	100	0
Electric Grill	1700	0
Inflator Pump	50	100
CD/DVD Player	100	0
Box Fan – 20"	200	200
Coffee Maker	600	0

HEATING & COOLING		
DEVICE	RUNNING WATTS	ADDITIONAL START UP WATTS
Central AC – 10,000 BTU	1500	3000
Furnace Fan – 1/2 HP	900	1400
Space Heater	1800	0
Window AC – 10,000 BTU	1200	600

Note: Wattage listed are estimates for that type of equipment only. Check nameplate wattages on all loads before connecting to generator.

IF ANY CIRCUIT BREAKERS TRIP:

- 1. Make sure that ALL circuit breakers are reset before starting the generator again.
- 2. Adjust the plugs so the loads are shared across outlet circuits.

Evenly distributed over outlets.



Documents / Resources



PREDATOR 3500 Running Watts, 4375 MAX Starting Watts [pdf] User Guide 59132, 59207, 3500 Running Watts, 4375 MAX Starting Watts, 3500, Running Watts, 4375, MAX Starting Watts

Manuals+, home privacy