

Prestel DTCP-10 Programmable Touch Screen Control Panel User Manual

Home » Prestel » Prestel DTCP-10 Programmable Touch Screen Control Panel User Manual





Prestel DTCP-10 Programmable Touch Screen Control Panel (Desktop)

Contents

- 1 DTCP-10 Programmable Touch Screen Control **Panel**
- 2 Introduction
- 3 Features
- **4 Package Contents**
- **5 Specifications**
- **6 Operation Controls and Functions**
- 7 Application Example
- 8 Documents / Resources

DTCP-10 Programmable Touch Screen Control Panel



USER MANUAL

Thank you for purchasing this product

For optimum performance and safety, please read these instructions carefully before connecting, operating or adjusting this product. Please keep this manual for future reference.

Surge protection device recommended

This product contains sensitive electrical components that may be damaged by electrical spikes, surges, electric shock, lighting strikes, etc. Use of surge protection systems is highly recommended in order to protect and extend the life of your equipment.

Introduction

The programmable touch screen control panel is designed to be utilized in the sectors of automated office system, multi-media room and smart home. With a programmable interactive user interface over configuration protocols, the integrated system provides intelligent networking service. The control panel is equipped with a capacitive touch screen with a resolution of 1280*800, and it supports one RS-485 serial port. It is used in a diverse range of installations and applications across industries including multi-media conference rooms, multi-functional halls, training centers, show room, broadcasting studios and industrial automation.

Features

- ☆ ARM Cortex-A53 architecture 1.8Ghz main frequency
- ☆ Android 9.0 system, 8GB Emmc Flash, 2GB DDR4 RAM
- ☆ 1280*800 (16:10) resolution, desktop screen design
- ☆ One machine with two modes, can be used as touch screen central control or user terminal
- \Rightarrow Support one RS-485 communication serial port, which is capable of configuring 8 baud rates in the range of 2400-115200bps
- ☆ Support access to the host system management web page with a password
- ☆ Compliant with industry standard network communication protocols (TCP/IP, Http, UDP, Web socket)
- ☆ With 1 Gigabit network port, the highest rate up to 1G/bps
- ☆ Support POE function or independent DC 24V/1A power supply
- ☆ Interface and function configuration via central control software
- ☆ Support remote control, remote O&M, online upgrade
- ☆ Support factory reset


Package Contents

- 1. 1 × Programmable Touch Screen Control Panel (Desktop)
- 2. 1 × 3pin-3.81mm Phoenix Connectors (male)
- 3. 1 × 24V 1A Multinational Power Supply (2pin-3.81mm Phoenix Connector)

Specifications

Technical				
CPU	ARM Cortex-A53 1.8GHz			
Operation System	Android 9			
RAM	2GB DDR4 RAM			
Flash Memory	8GB EMMC Flash			
Resolution	1280*800			
Touch Type	Capacitive Touch Screen			
Connection				
RS-485	1 × 3-pin Phoenix Connectors, for RS-485 serial data communication			
LAN/POE	1 standard 10M/100M/1000M Ethernet RJ45 interface, supporting POE function			
POWER	1 × 2-pin Phoenix Connectors, for power supply			
DEBUG	1 × Micro USB, system debugging port			
Mechanical				
Housing	Front Panel — Touch Screen; Rear Case — Aluminum Alloys			
Color	Front Panel — Black; Rear Case — Apple Gray			
Dimension	245.4mm (L) × 164mm (W) × 27mm (D)			
Weight	887g			
Power Supply	24V DC/1A or POE			
Power Consumption	6W			
Operation Temperature	0°C ~ 40°C / 32°F ~ 104°F			
Relative Humidity	10~90% RH (non-condensing)			


Operation Controls and Functions

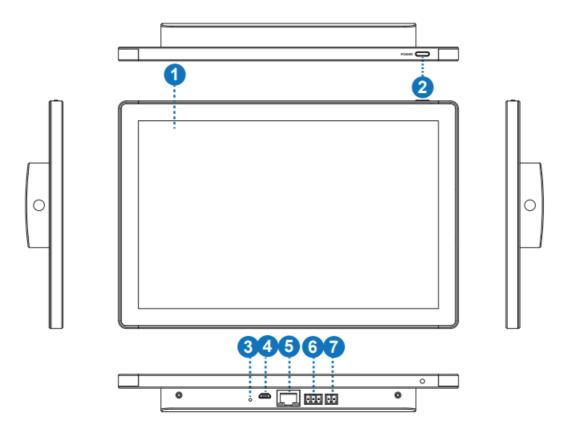

No.	Name	Function Description
1	Touch Screen	Capacitive touch screen. The user control interface can be configured through the IDE tool.
2	POWER button	Used for system power on/off, screen off or wake-up.
3	RESET button	Reboot: After the device boots up, press and hold the RESET button for more th an 1s less than 5s, then release it, the device will reboot. The device won't upload the user projects after rebooting. Reset: After the device boots up, press and hold the RESET button for more than 5s, then release it, the device will reset the user configuration information, the IP will be restored to DHCP state, the login password of the manage- ment page will be initialized to "admin", the device time will be initialized to automatic acquisition mode, but user projects won't be deleted by factory initialization.

4	DEBUG port	Micro USB port. The reserved port for system debugging.
5	LAN/POE port	Standard 10M/100M/1000M Ethernet RJ45 port with default auto-negotiated speed for device connection, projects uploading & downloading, network communication a nd debugging. The control panel boots up with DHCP enabled by default. After powering on, when the control panel connects to a network where there is no router present to assign I P addresses, the control panel will take the pre-set IP address: 192.168.0.101. If th ere is a router present on the same network, the router will assign an IP address to the control panel in three minutes and the pre-set IP address will be invalid. Note: When the control panel is DHCP enabled after power on, the router (if conne cted to the same network) will assign an IP address to the control panel. If network is disconnected at this time, the control panel won't be able to pre-set an IP address and its IP address would be 0.0.0.0. If a pre-set IP address is needed, you need to power off the control panel and then power it on again. If it is in static IP mode after power on, the control panel won't preset an IP address either. If there is no router present, you can connect your PC to the LAN port of the control panel and modify the PC's IP address in the network segment of 192.168.0.X, then the PC will pre-set an IP address to the control panel in three minutes for data communication.
6	RS-485 port	Programmable RS-485 serial port, which is a 3-pin phoenix connector (male), comp liant with RS-485 communication protocol, and capable of configuring 8 baud rates in the range of 2400-115200bps. The pin-outs of the RS-485 ports are PIN1 for A, PIN2 for B, and PIN3 for GND.
7	POWER port	The power input port (2-PIN phoenix connectors), used for connecting with external 24V DC power supply.

Application Example

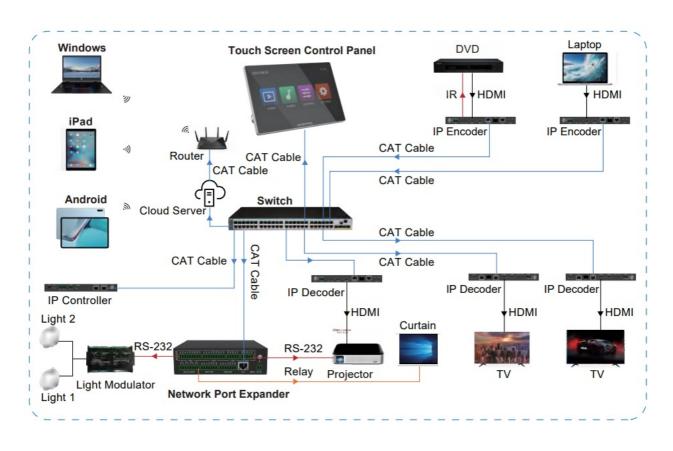

Documents / Resources



<u>Prestel DTCP-10 Programmable Touch Screen Control Panel</u> [pdf] User Manual DTCP-10 Programmable Touch Screen Control Panel, DTCP-10, Programmable Touch Screen Control Panel, Touch Screen Control Panel, Control Panel

Manuals+,