

PRESTIGE 18LCDSPTI 2-Way LCD Replacement Remote Control Transmitter User Manual

<u>Home</u> » <u>PRESTIGE</u> » PRESTIGE 18LCDSPTI 2-Way LCD Replacement Remote Control Transmitter User Manual





Contents

- 1 2-Way LCD Replacement Remote Control
- **Transmitter**
- **2 FCC Statement**
- 3 Documents / Resources
- **4 Related Posts**

2-Way LCD Replacement Remote Control Transmitter



1. Transmitter Model: 18LCDSPTI

2. Technology: SST 2-Way

3. Max Range: 1800M

4. LCD: status indication

5. Battery: CR2450

6. Button:

BUTTON	ACTION	FUNCTION
1	1x	Arm / Lock
	1.5sec	Silent arm
	3sec	Panic start/stop
2	1x	Disarm / Unlock
	1.5sec	Silent disarm
	3sec	Panic start/stop
3	2x	Remote Start
	2sec	Trunk release
4	1x	Aux CH4 output
5	1x	Aux CH5 output

FCC Statement

This device complies with FCC Rules part 15. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference that may be received, including interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modification could void the user's authority to use the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.



Documents / Resources



PRESTIGE 18LCDSPTI 2-Way LCD Replacement Remote Control Transmitter [pdf] User M anual

T30-SS2WTI, T30SS2WTI, TBQT30-SS2WTI, TBQT30SS2WTI, 18LCDSPTI 2-Way LCD Replacement Remote Control Transmitter, 18LCDSPTI, 2-Way LCD Replacement Remote Control Transmitter

Manuals+,