



Presto 4214 Electronic Big Digital Timer Operating Instructions

[Home](#) » [Support](#) » Presto 4214 Electronic Big Digital Timer Operating Instructions 

Contents

- [1 Presto 4214 Electronic Big Digital Timer](#)
- [2 Care and Maintenance](#)
- [3 safety precautions](#)
- [4 PRESTO LIMITED WARRANTY](#)
- [5 CONSUMER SERVICE INFORMATION](#)
- [6 Frequently Asked Questions](#)
- [7 References](#)
- [8 Related Posts](#)


PRESTO®

Presto 4214 Electronic Big Digital Timer



Introduction

The Presto 4214 Electronic Big Digital Timer is a versatile and user-friendly device, perfect for a wide range of timing needs. Whether in the kitchen, at the gym, or during various recreational activities, this timer offers simplicity and precision in time management. Its large digital display and easy-to-use buttons make setting countdowns and using the stopwatch function a breeze. The timer's versatility is enhanced by its multiple placement options, including an easel stand, a magnet for attaching to metal surfaces, and a lanyard opening for portability. With its large, clear display and intuitive design, the Presto 4214 is an essential tool for anyone who needs accurate timekeeping in a compact and efficient device.

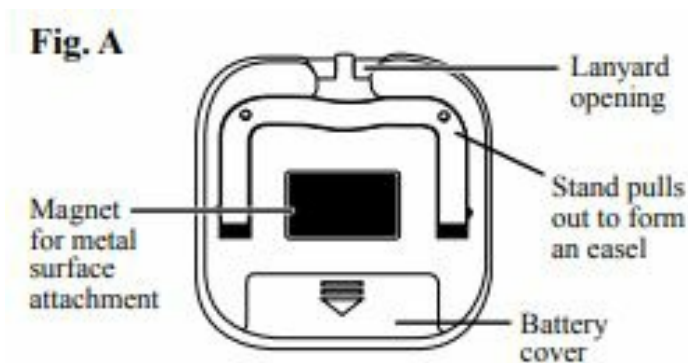

Product Specifications

- **Color:** White
- **Brand:** Presto
- **Material:** Plastic
- **Product Dimensions:** 2 x 0.5 x 3 inches

- **Item Weight:** 3.52 ounces
- **Power:** 1 AAA battery (included)
- **Voltage:** 120 Volts, 60 Hz

Box Contents

- Presto 4214 Electronic Big Digital Timer
- 1 AAA battery
- User manual

Product Features

- **Easy-to-Read Display:** A large LCD screen ensures time is clearly visible, displaying up to 99 minutes and 59 seconds.
- **Simple Operation:** Large, user-friendly buttons allow for quick setting of the countdown timer and stopwatch functions.
- **Countdown Timer:** Capable of counting down from any time up to 99 minutes and 59 seconds, suitable for a wide range of activities.
- **Stopwatch Function:** The timer also counts up, serving as a handy stopwatch for timing various activities.
- **Alarm Notification:** Features an audible alarm that signals when the set time has elapsed, ensuring you never miss a beat.
- **Memory Function:** Automatically recalls the last timer setting used for convenience; easily accessible with the press of the Start/Stop button.
- **Versatile Placement Options:** Equipped with an easel stand for placement on flat surfaces, a magnet for attachment to metal areas, and a lanyard opening for portability.
- **Dual Functionality:** Can be used in the kitchen for cooking and baking, as well as for recreational, sports, or lab activities.
- **Battery Operated:** Powered by a single AAA battery, which is included, allowing for immediate use upon purchase.

Usage Instructions

INSERT BATTERY BEFORE USING

- Remove the battery compartment cover on the back of the unit by sliding it in the direction of the arrow (Fig. A).
- Insert one AAA battery into the compartment matching the + and – symbols as indicated inside the battery compartment.
- Replace the battery cover, making sure it locks in place.

REMOVE FILM FROM TIMER DISPLAY

TO USE COUNT DOWN TIMER (UP TO 99 MIN 59 SEC)

1. Press the M (minutes) and S (seconds) buttons for the desired timing period. Press and hold the buttons for

faster setting.

2. Press the START/STOP button to begin timing. The “M” and “S” on the display will flash when the timer is in use.
3. To stop timing, press START/STOP button. To restart the timer, press START/STOP again.
4. After time elapses, the alarm beeps for 30 seconds. To stop the beeping, press either the MIN, SEC or START/STOP button.
5. To reset the timer to 00:00, press the M and S buttons simultaneously.

TO USE TIMER MEMORY RECALL

1. After the alarm stops sounding, the pre-set time will appear in the display. Press the START/STOP button to count down again using the same pre-set time.
 1. **NOTE:** If you stop the timer while it is beeping and you want to recall the pre-set time, simply press the START/STOP button and it will appear on the display. Press the START/STOP button a second time to count down again using the same pre-set time.

2. TO USE COUNT UP/STOPWATCH

3.
 1. Press the M and S buttons simultaneously to reset to 00:00.
 2. Press the START/STOP button to start counting up in seconds. The “M” and “S” on the display will flash when the count-up/stopwatch is in use.
 3. To interrupt the count, press the START/STOP button. To resume counting, press the START/STOP button again.
 4. Press the M and S buttons simultaneously to reset to 00:00.

Care and Maintenance

To ensure the longevity and optimal performance of the Presto 4214 Electronic Big Digital Timer, follow these care and maintenance guidelines:

- When the display becomes dim or unclear, replace the AAA battery promptly. Ensure the battery is installed with the correct polarity and removed if the timer will not be in use for an extended period to prevent damage from battery leakage.
- Wipe the timer with a clean, soft cloth slightly dampened with water. Avoid using any abrasive cleaners or chemicals that could damage the plastic casing or the electronic components.
- Store the timer in a dry area at room temperature. Avoid exposure to extreme temperatures, direct sunlight, or high humidity which could affect the electronic circuitry over time.
- Handle the timer with care to avoid drops or impacts that could damage the internal components or the LCD display.
- When using the magnetic back for attachment to surfaces, apply gentle force to prevent the timer from sliding down which could cause damage or scratches.
- If using the easel stand or carrying the timer with a lanyard, make sure these parts are secure to prevent the timer from falling.

By following these simple care and maintenance instructions, your Presto 4214 Electronic Big Digital Timer should provide accurate timing for your activities for a long time.

safety precautions

For safe operation and to prevent accidents while using the Presto 4214 Electronic Big Digital Timer, adhere to the following safety precautions:

- Do not immerse the timer in water or any other liquid. It is not waterproof and exposure to liquids could result in malfunction or electric shock.
- Do not expose the timer to extreme heat or cold. Extreme temperatures can damage the electronic components and affect the functionality of the timer.
- Insert the AAA battery according to the correct polarity as indicated. Always replace it with the correct battery type. Incorrect installation or use of the wrong battery type may cause leakage or explosion.
- Keep the timer and battery away from small children to prevent the risk of battery ingestion or choking.
- Do not attempt to disassemble or repair the timer yourself. No user-serviceable parts are inside, and opening the device may expose you to dangerous voltages or other risks.
- This device should be used in a manner that does not cause interference with other electronic devices. In the event of interference, relocate the timer or consult with a professional technician.
- Handle the timer with care. Dropping it can damage the internal circuitry or the exterior casing.
- When disposing of the timer, remove the battery and dispose of it according to your local environmental laws and guidelines. The timer itself should be recycled if possible.

By observing these safety precautions, you can safely enjoy the convenience and functionality of the Presto 4214 Electronic Big Digital Timer.

PRESTO LIMITED WARRANTY

(Applies Only in the United States and Canada)

This quality PRESTO appliance is designed and built to provide many years of satisfactory performance under normal household use. Presto pledges to the original owner that should there be any defects in material or workmanship during the first year after purchase, we will repair or replace it at our option. Our pledge does not apply to batteries, if any, or to damage caused by shipping. Outside the United States and Canada, this limited warranty does not apply.

To obtain service under the warranty, please call our Consumer Service Department at 1-800-877-0441. If unable to resolve the problem, you will be instructed to send your PRESTO® appliance to the Presto Factory Service Department for a quality inspection; shipping costs will be your responsibility. When returning an appliance, please include your name, address, phone number, and the date you purchased the appliance as well as a description of the problem you are encountering with the appliance.

We want you to obtain maximum enjoyment from using this PRESTO appliance and ask that you read and follow the instructions enclosed. Failure to follow instructions, damage caused by improper replacement parts, abuse, misuse, or neglect will void this pledge. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This is Presto's personal pledge to you and is being made in place of all other express warranties.

NATIONAL PRESTO INDUSTRIES, INC., EAU CLAIRE, WI 54703-3703

CONSUMER SERVICE INFORMATION

If you have any questions regarding the operation of your PRESTO® appliance, contact us by any of these methods:

1. Call 1-800-877-0441 weekdays 8:00 AM to 4:00 PM (Central Time)
2. Email us through our website at www.GoPresto.com/contact

3. Write: National Presto Ind., Inc., Consumer Service Dept., 3925 N. Hastings Way, Eau Claire, WI 54703-3703

Inquiries will be answered promptly by telephone, email, or letter. When emailing or writing, please include a phone number and a time when you can be reached during weekdays if possible.

Canton Sales and Storage Co., Presto Factory Service Dept., 555 Matthews Dr., Canton, MS 39046-3251

Frequently Asked Questions

What type of battery does the Presto 4214 Timer use, and is it included?

The timer uses 1 AAA battery, which is included with the purchase.

How do I set the timer?

To set the timer, simply use the large buttons to input your desired time up to 99 minutes and 59 seconds, and then press the Start/Stop button to begin the countdown.

Can the Presto 4214 be used as a stopwatch?

Yes, it can also function as a stopwatch. To use this feature, press the Start/Stop button without setting a specific countdown time.

Does the timer have a memory function?

Yes, it has a memory function that automatically recalls the last timer setting used. Press the Start/Stop button after the timer ends to activate this feature.

How can I attach the timer for convenient use?

The timer can be placed using its easel stand, attached to metal surfaces with its magnet, or carried using a lanyard through the provided opening.

Is the timer's alarm loud enough to hear from another room?

The timer has an audible alarm, but its volume may not be sufficient to hear from distant rooms, depending on the size of your space and ambient noise levels.

How do I clean the timer?

Clean the timer with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or immersing it in water.

Can I use the timer for activities other than cooking?

Absolutely! The timer's versatility makes it suitable for a variety of activities, including sports, study sessions,

and more.

What should I do if my timer is not working?

Check to ensure the battery is properly installed and has power. If the issue persists, replace the battery with a new one.

Is the Presto 4214 timer suitable for outdoor use?

While it can be used outdoors, it is not waterproof or weather-resistant, so it should be protected from elements like rain or extreme temperatures.

What is the maximum time I can set on the Presto 4214 Timer?

The timer can be set for any duration up to 99 minutes and 59 seconds.

Can the timer display count up as well as count down?

Yes, in addition to the countdown feature, the timer can count up, functioning as a stopwatch.

Download This PDF Link: [Presto 4214 Electronic Big Digital Timer User Manual](#)

References

- [User Manual](#)