



PRISM XR P1511 Controller Grips for Quest User Guide

[Home](#) » [PRISM XR](#) » PRISM XR P1511 Controller Grips for Quest User Guide 

Contents

- [1 PRISM XR P1511 Controller Grips for Quest](#)
- [2 What's In the Box](#)
- [3 Remove the Battery Cover from Controllers](#)
- [4 Install the PrismXR Controller Grips](#)
- [5 Charging Controllers Using the Carina Charging Dock](#)
- [6 Safety Instruction](#)
- [7 MORE INFORMATION](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)




PRISM XR P1511 Controller Grips for Quest




What's In the Box

1. Battery Cover
2. Buckle
3. Wrist Strap
4. Fastening Clip

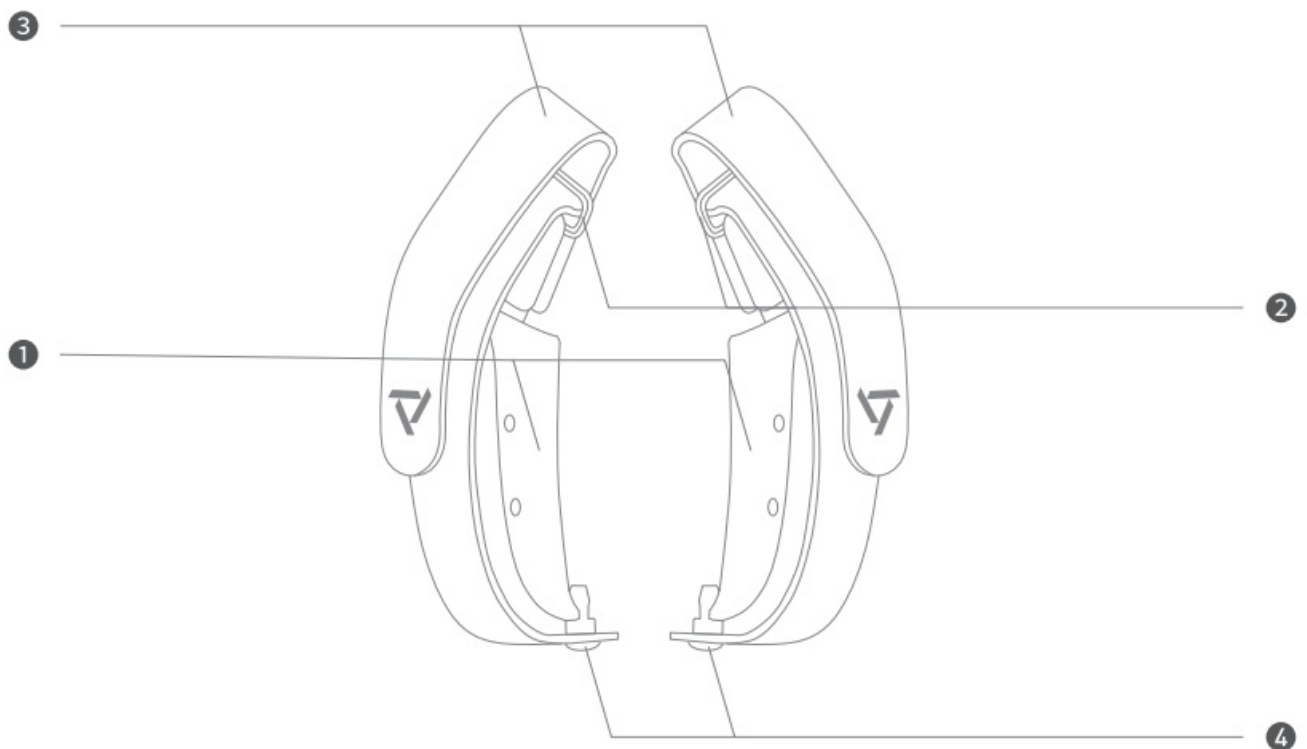

Remove the Battery Cover from Controllers


- Press the Eject button to release the battery cover and slide out.

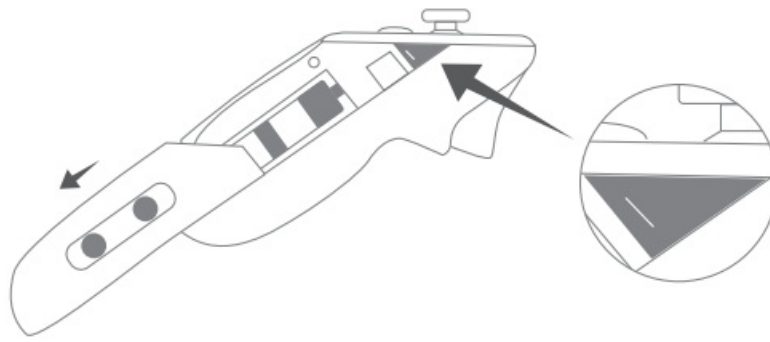


Install the PrismXR Controller Grips

Note: Please ensure that the pogo pins of the Controller Grips make contact with the silver part of the Ni-MH AA rechargeable batteries when installing them.


1. Attach the fastening clip of the right controller grip to the bottom slot of the right controller, ensuring it is securely and completely installed.

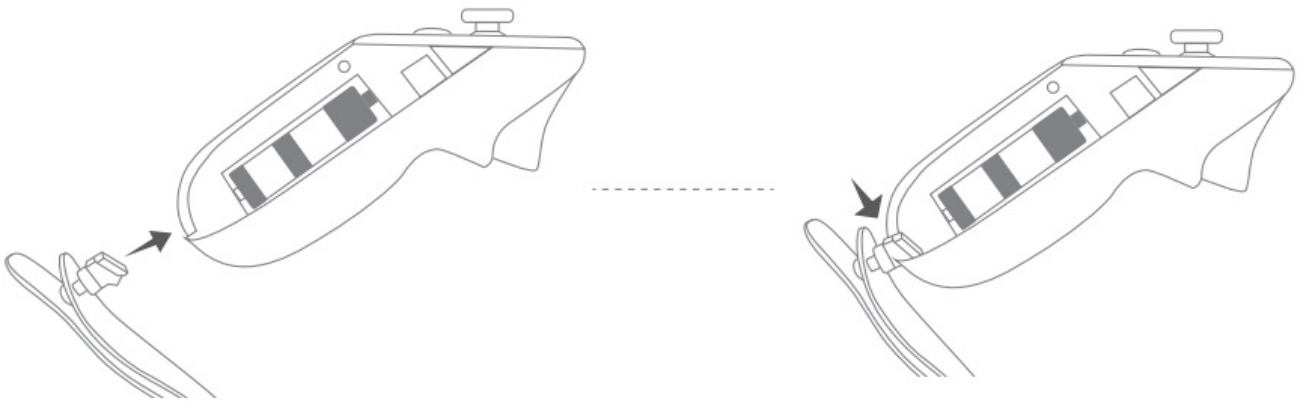


2. While holding the battery cover, rotate the wrist strap so that the logo faces upward.

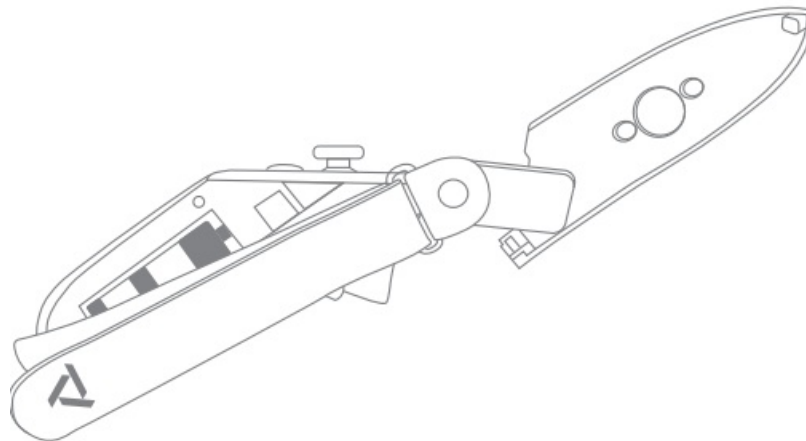


3. Flip the battery cover along the joint with the wrist strap.

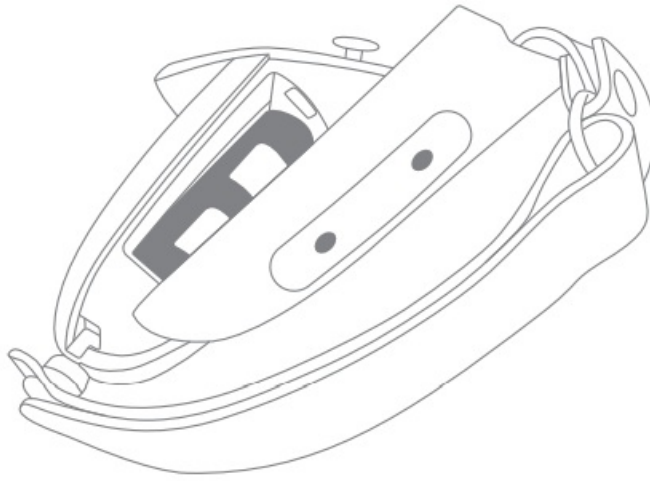

4. Install the battery cover onto the controller.

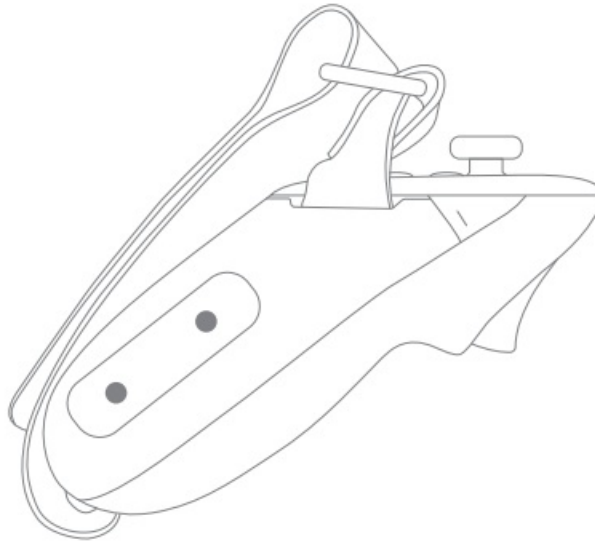

5. Wear the right controller grip on your right hand and adjust the wrist strap with the buckle for a comfortable fit.

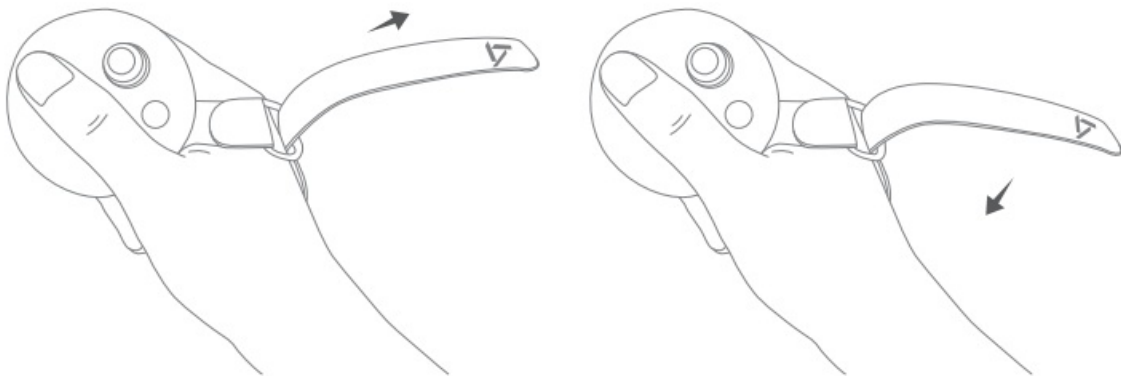


6. Repeat the above steps to install the left controller grip.


Charging Controllers Using the Carina Charging Dock

Note: The controller can only be charged when using the PrismXR Controller Grips, Ni-MH AA rechargeable batteries, and Carina Charging Dock [including Carina 01, Carina 015, and Carina 015 Lite] together.

1. Fully rotate the wrist strap of the right controller grip to the left and the left wrist strap to the right. This will expose the pogo pins on the battery cover, allowing them to make contact with the pogo pins on the dock for proper charging.

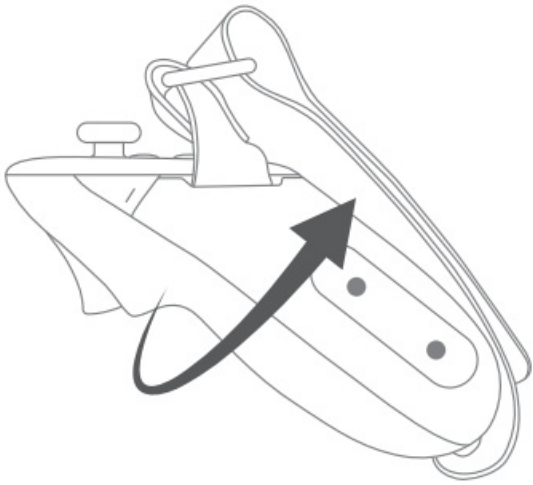


Left Controller

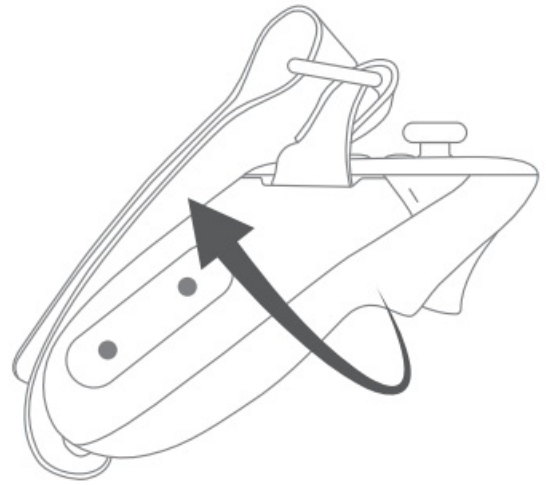



Right Controller

2. Place the controllers into the controller charging cradles.

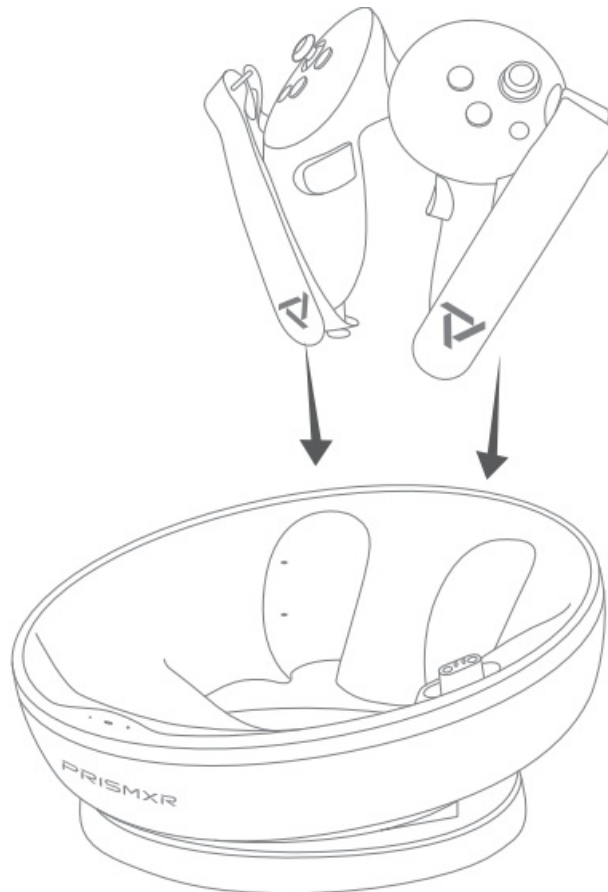

3. Place the headset into the headset charging cradles and press it down to ensure a good connection with the dock.

- **Attention:** The wrist strap of the controller may interfere with the headset cover. Press the headset manually to ensure proper charging.

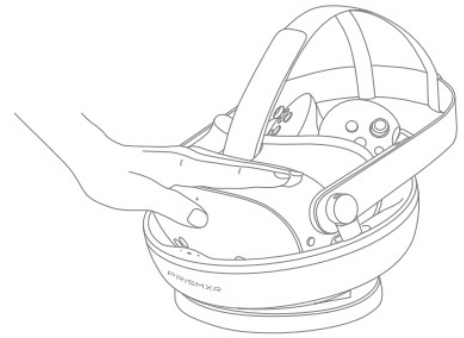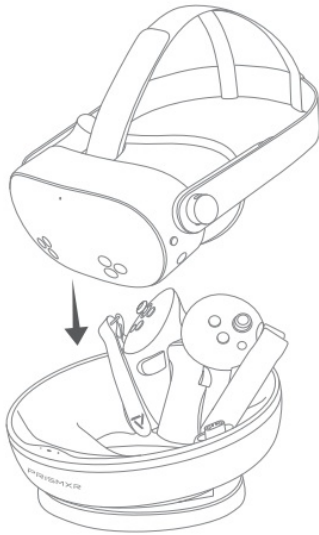

Safety Instruction


- Store the product in a cool and dry place.
- Do not store the product in a hot or humid environment.
- Do not disassemble the product.
- Do not leave or dispose of the product in both extremely low air pressure and extreme heat such as sunshine, fire, or the like.
- Do not clean the product with harmful chemicals or detergents.
- Misuse, dropping or excessive force may cause product damage.
- Do not subject the product to mechanical shock, crushing, or cutting.
- To reduce the risk of injury, close supervision is necessary when this product is used near children or keep the product out of the reach of children.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.

MORE INFORMATION

Support

- For more information, please visit www.prismxr.com/pages/support-dev
- Discover more: www.prismxr.com

Documents / Resources

	PRISMXR P1511 Controller Grips for Quest [pdf] User Guide Quest 3S, Quest 3, P1511 Controller Grips for Quest, Controller Grips for Quest, Grips for Quest
-------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.