



Pristar PS-100E Auto Cut Label Maker Machine User Guide

[Home](#) » [Pristar](#) » Pristar PS-100E Auto Cut Label Maker Machine User Guide 

Pristar PS-100E Auto Cut Label Maker Machine
















Contents













- [1 Notices](#)
- [2 Keyboard functions](#)
- [3 Display](#)
- [4 Setting up the printer](#)
- [5 Editing text](#)
- [6 Edit format](#)
- [7 Label application type](#)
- [8 Mode](#)
- [9 File](#)
- [10 Editing barcode and QR code](#)
- [11 Multiple labels](#)
- [12 Editing Frame](#)
- [13 Printing your labels](#)
- [14 Applying Your Labels](#)
- [15 Resetting the Printer](#)
- [16 Symbol Categories](#)
- [17 Maintenance](#)
- [18 Solving Problems](#)
- [19 CUSTOMER SUPPORT](#)
- [20 Documents / Resources](#)
 - [20.1 References](#)
- [21 Related Posts](#)

Notices

 
- Always use the product as instructed in the manual. Otherwise, damage or injury may occur.
- Don't overstretch or squeeze the tape.
- Do not block or insert objects into the AC adapter port or tape ejection slot.
- Don't try to print without a tape cartridge or with an empty tape cartridge to avoid damage.
- Do not touch the print head to avoid burned injury and print failure.
- Clean the printer with volatile solvents such as diluents, benzene and alcohol.
- Do not place or store the product in the following locations: outdoors or in direct sunlight; near sources of excessive heat, humidity, shocks, vibrations, or dust.
- The label in this printer should longer than 20mm.

Keyboard functions

	Turn the printer on and off, or pause the printing
	Edit format of align, space, density, cut and length.
	Select, enter or newline
	Navigate
	Print the label with options of pages, sequence number, mirror image labels, current label only or all labels
	Preview current label
	Select font, size, word width, space and style
	Select and edit frame. Or press with the  key for settings of contrast, language and auto power off time.
	Select, save or delete a label edited. Or press with the  key to add paragraph.
	Select label form (wrap, flag, face plate, table). You can edit barcode together with the  key

	Delete the character to the left of the cursor. You can clear all the text and current label settings entered together with the  key
	Cancel the last operation
	Vertical direction of printing
	Start a new label file
	Use it together with other keys
	Select English, Caps mode
	Space of full-width or half-width
	Edit symbols of punctuation, brackets, arrowheads and number
 ~ 	Numbers, characters, letters, symbols
	Long press to copy / paste

Display

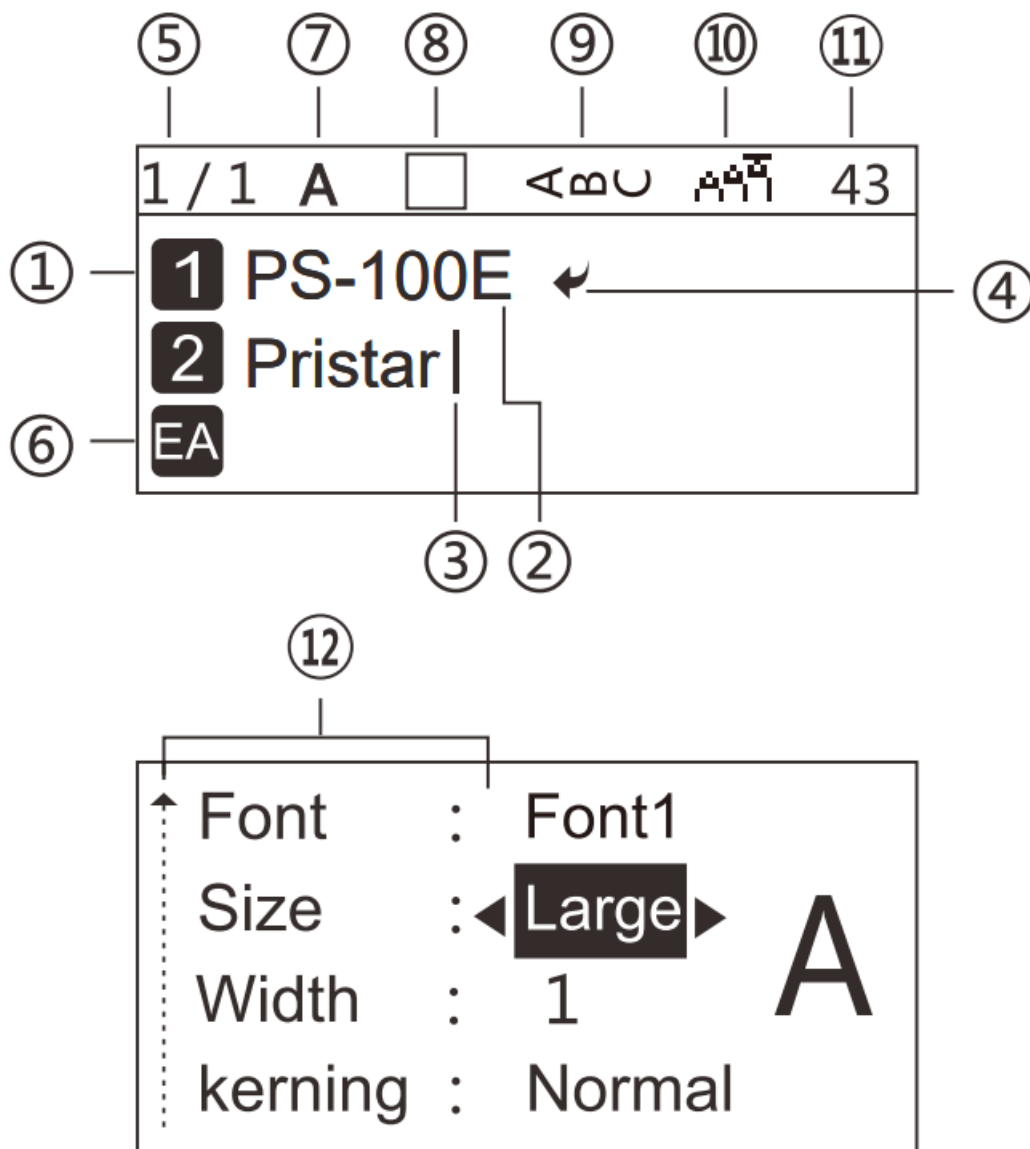

1. Line number:

1 stand for line **2** stand for line 2 and so on, no more than 4 lines

2. Content:

The content entered will be displayed here

3. Cursor:

Right to the character entered or deleted

4. Line wrap mark:

Means line wrapping

5. Number of labels:

Number of label pages/labels

6. (11) Format display

(6)Language (7)Fonts (8)Frame(9) Horizontal alignment(10) Font size The length of text entered (11)including margins (12)Options mark


Select the font, barcode, symbol and format cursor and move options with Navigate

Setting up the printer


Inserting tape cartridges

Use only tape cartridges of 6mm, 9mm and 12mm

1. Make sure the front end of the tape is not bent and it can pass through the tape guide

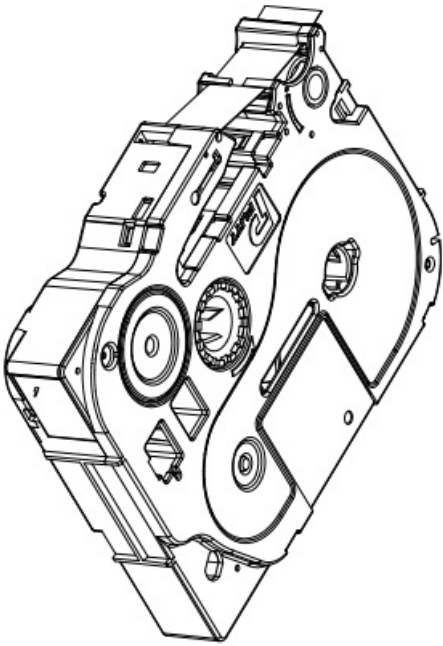


2. Open the rear cover

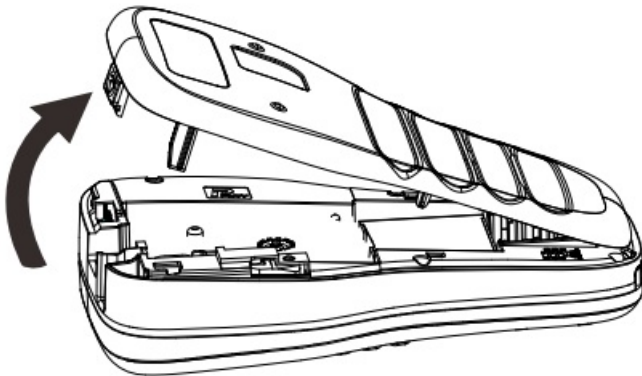


3. Check the right side and press the cartridge firmly.

Tape ejection slot

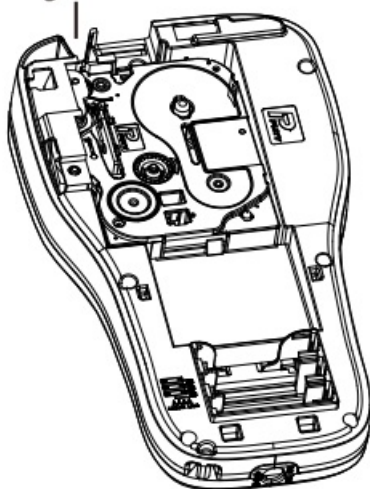


4. Close the rear cover

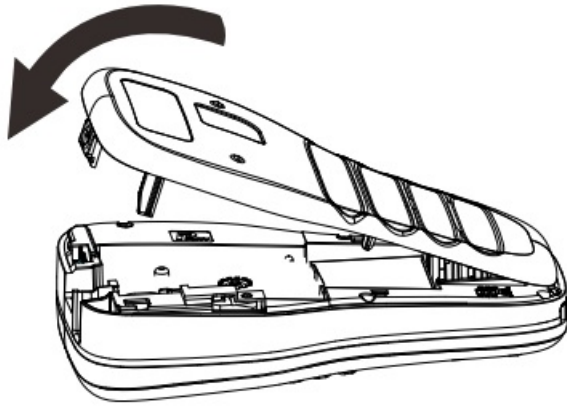

Power connecting

Connect the adapter to the printer's AC adapter port.

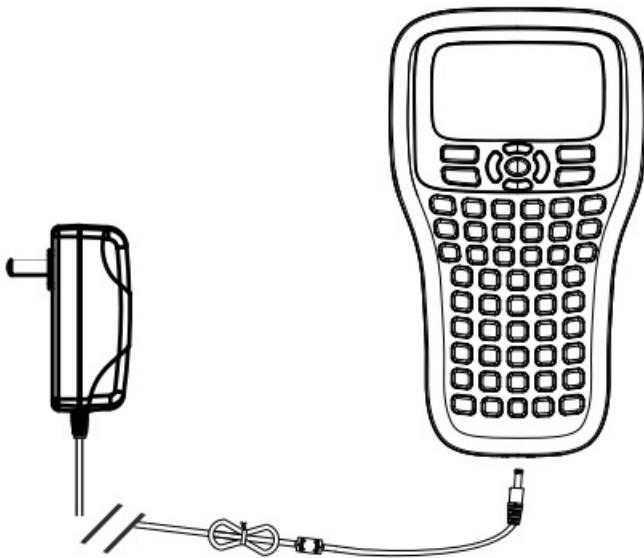

Turning the Printer On and Off

Press **ON/OFF** for 0.3 second to turn on the printer and press **ON/OFF** for 1 second to turn off the printer


- The printer turns off automatically (and saves your work) if it is not used within 5 minutes.
- If you turn off the printer in the middle of editing a label, it will be recovered when you turn on the printer again.
The character not entered will not be recovered.

Editing text


English typing

Example: China


1. Select English typing by press **A/a** when EA shown on the left bottom of the display

1 / 1	A		25
<div>1 </div> <div>EA</div>			

2. Press C

1 / 1	A		25
<div>1 C </div> <div>EA</div>			


3. Press HINA together with Shift key

1 / 1	A		45
<div>1 China </div> <div>EA</div>			

- You can alter the caps look by pressing Shift key in both case typing modes.

Number input

You can input number in any mode by press number keys.

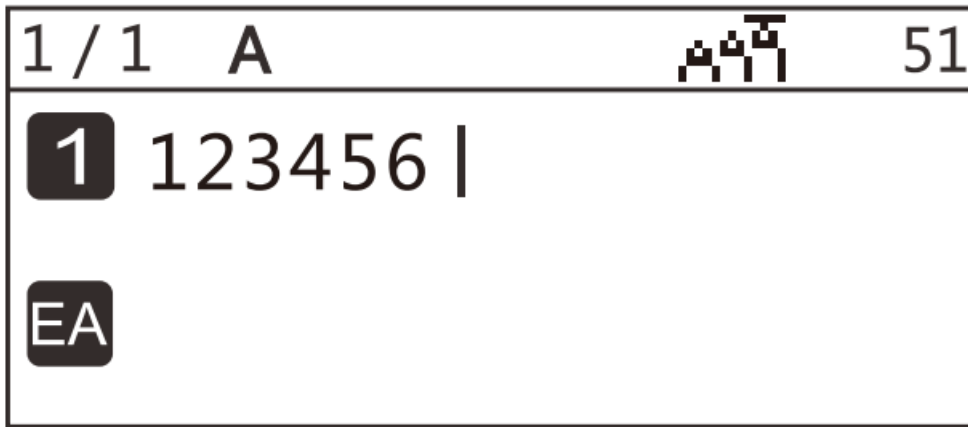


Copy and paste

Put the cursor before or by the end of text to be pasted, long press C and press ◀ ▶ to select the text, then press Enter and move the cursor to the pasting place, long press V.

Deleting text

Example: "PS-1100E" → "PS-100E"

1. Press ◀ ▶ to put the cursor behind the character to be deleted.

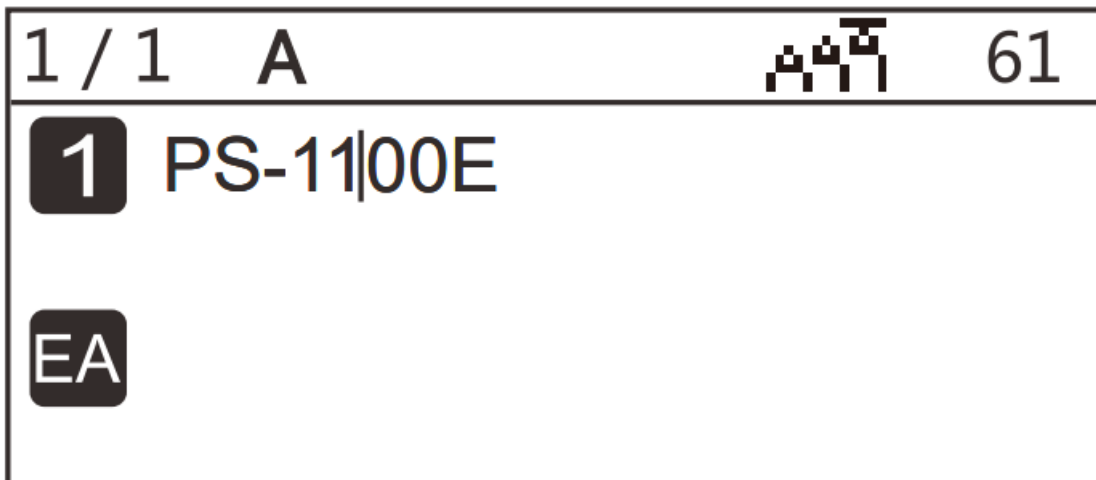

2. Press ⌫ and the character before the cursor is deleted.

1 / 1

A

51

1

PS-100E

EA

Clear all the text

There are options when clearing text including:

clear text, clear text and format, clear current label, clear all the labels, clear paragraph.

If you choose to clear text and format, all the settings will reset to default settings.

↑

Del text

Del text & format

Del current label

Del all labels

↓

Del paragraphs

Edit format

1. Font editing options

Item	Option
Font	Font1 Font2 Font4 Font5
Font size	Big , Medium, Small
Font width	1 2/3 1/2
Font spacing	Normal , Narrow, Wide
Formatting	NA , Bold, Italic, Underline

↑
Font
:
Font1

↓
Size
:
Large

width
:
1

Kerning
:
Normal

↓
Style
:
Normal

2. Layout editing

Item	Option
Layout	Left, Center , Right, Justify
Margin	Smallest, Small, Normal , Big
Thickness	-5~+8
Cut	Auto-cutting , No cutting
Length	Flexible automatically , Fix

↑
Align
:
Mid

Space
:
Least


Density
:
0

Cut
:
Auto


↓
Length
:
Auto

Label application type

- Patch panel

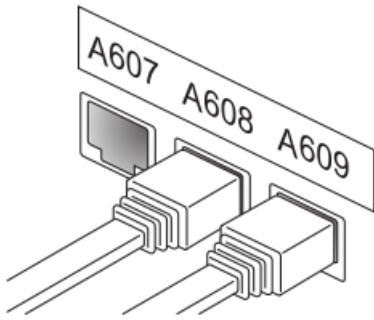


- Faceplate

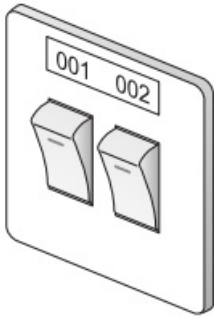 


- Barcode



 - Numbering



- Serializing

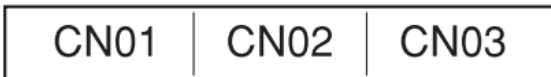

- Symbol



- Mirror image



Mode

Templates in this printer: wrap label, flag label, faceplate label, table label

↑
Winding label
F-type label
Panel label
↓
Table label


ABC

ABC

ABC

ABC


- Wrap label

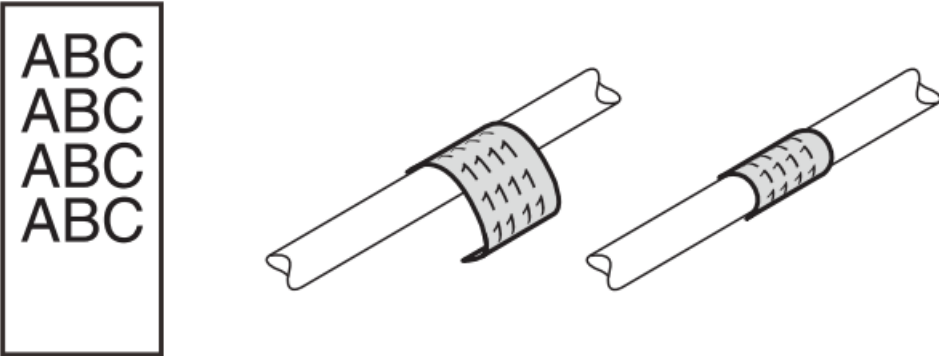

- Flag label



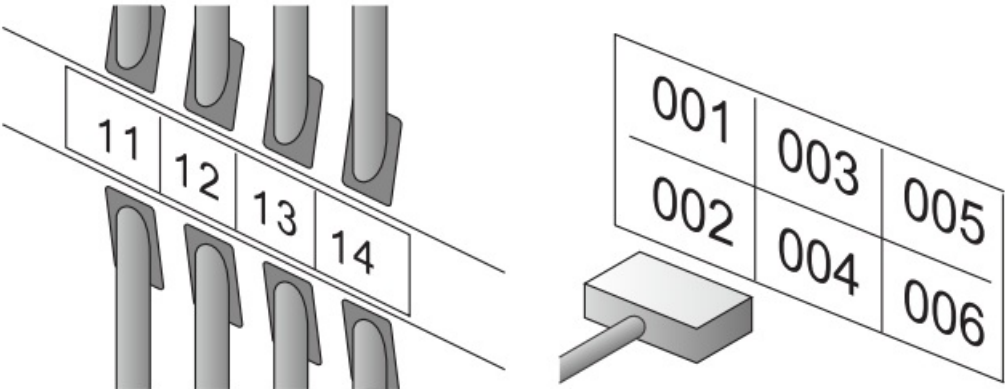

- Faceptale label



- Table label

001	003
002	004



press  + ▲ to shift back the table above. For example: after input 001, press  + ▼ to input 002.


File



You can save 100 files in this printer and 50 labels in each file, 200 characters on each label.




Editing barcode and QR code

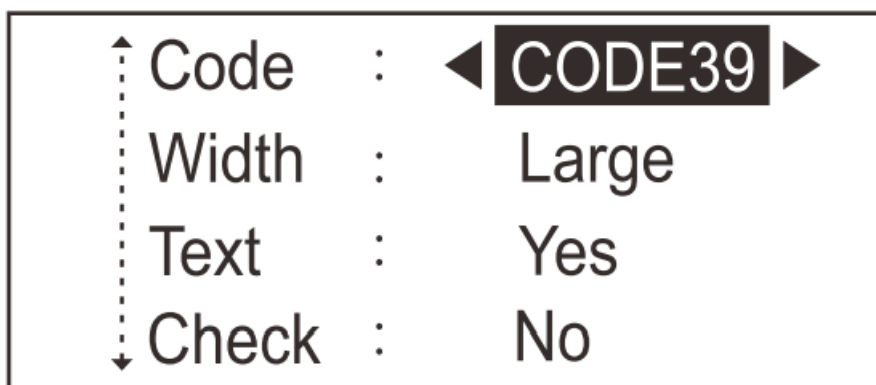
1. Press  +  to make a code
2. You can edit barcode of CODE39, CODE128, EAN-8, EAN-13, UPC-A, UPC-E and CODACAR as well a QR CODE.




3. Press ▲ ▼ to select option and press ◀ ▶ to select preference.
4. Press  to set preference or press  back to last operation.

Multiple labels

1. Press  key to add a new label

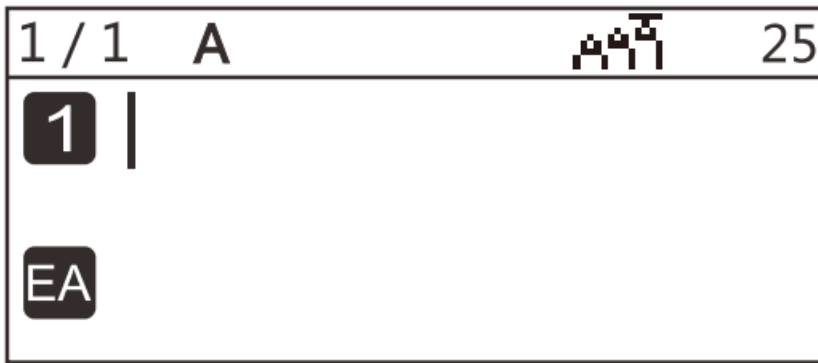


2. The numbers of current/total label pages will be added one respectively

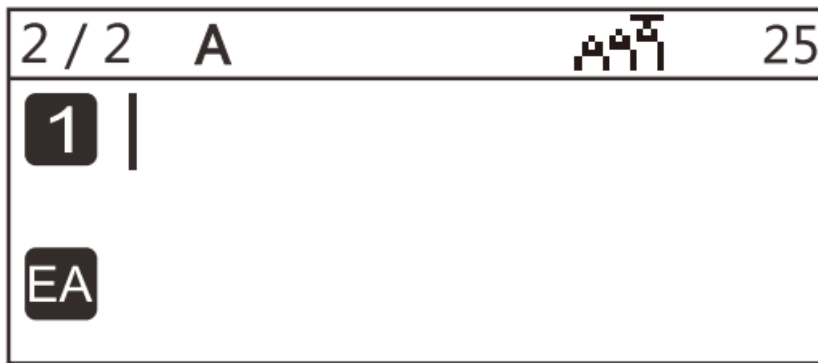

3. Press **Shift** + ▼ to move to the next label
4. Press **Shift** + ▲ to move to the last label

Editing Frame

1. Press the frame key to check frame styles.
- or delete the frame already added on the label
2. Select a frame by pressing ◀ ▶ and press **Enter** to choose one.

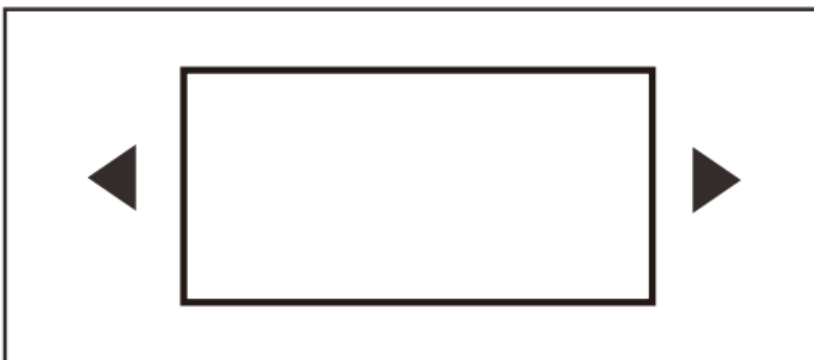

Printing your labels

1. The printing function includes: printing multiple copies of a label, printing Mirror image labels, printing sequence number, printing multiple labels.
2. Press the Print key to print a label directly and auto-cutting.
- To stop a processing printing, press the Cancel key to cancel it.

Applying Your Labels

1. Peel off the backing



2. Place the label on the desired surface and press it down firmly



* Depending on the environment and the surface to which you attach them, labels may peel off or become discolored, and the adhesive may remain on or damage the surface. PUTY is not responsible for any damage or loss due to these causes

Resetting the Printer

- If your printer does not function normally, you can reset the printer
- After the printer turned off, pressing the Shift key together with the R key and then press the ON/OFF key to turn on the printer.


*Resetting the printer will clear up all the files saved and format set. please make sure if it is OK before conduct the resetting operation.

Symbol Categories

Punctuation, Bracket, Arrow, Number, Sequence no., Math, Superscript, Subscript, Sign, Emoji, Job, Metric, Office, Electrical, Gesture, Pictograph, Daily necessary, Communication, Food, Weather, Portrait, Constellation, Map, Household, Shopping, Education, Christmas, Wedding, Travel, Scenery, Transportation, Vehicle, Bicycle, Sport, Law, Architecture, Ecology, Cooking, Cards, Animal, Video, Film, Media, Toy, Music, Shipping, Washing, Bank, Army, Computer, Cloud, web, SEO

Maintenance

1. Cleaning the print head: the print head should be cleaned in time, especially the printing performance is not good.

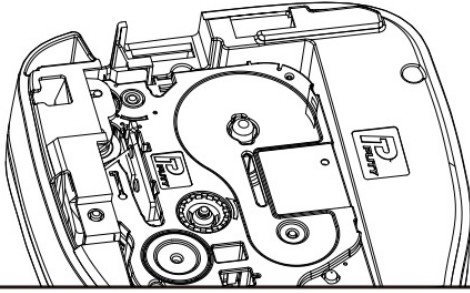

Use a dry cotton swab to gently clean the print head as shown, or use PUTY cleaning tape for an easy cleaning.

2. If water comes into the printer, please turn off it promptly. Take the battery out and keep the printer dry in the air naturally.
3. If the printer won't be used for a long time, please take the battery out and pull out the AC adapter as well as take the tape cassette out of the printer.

Solving Problems

Check the solutions in these sections if you have any problems using the printer.

Message	Cause and Remedy
The data entered is incorrect	The number of entered barcode isn't in accordance with the initially set number.
Invalid	Enter a valid value.
Label length limit	Set "Auto" for label length when cutting option, and the fixed length can't over the white space length.
Low Battery	The batteries are weak. Charge them fully or replace the new battery
Ribbon cover is not covered correctly	Check and close the cover correctly.
Minimum fixed label tapes is 2	Set the fixed label length ~ 20mm.
Invalid serial number	The beginning and the end of serial numbers should be in letters or in numbers.
You can only enter one barcode	Only one barcode is allowed for a label.
Cutter Error	Cutter is not good function. Press any key except the "Power" key to cancel and restart the printer again.
Data not entered	No Text is entered. Press any key except the "Power" key to cancel, and enter text or characters for preview or printing.
No label tape installed	No cassette is installed or cassette is incorrectly installed. Press any key except the "Power" key to cancel and insert the cassette in the right way.
The text length is longer than 1m	The printing label length is longer than 1 m. Press any key except the "Power" key to cancel. Change the size of the characters and reduce the text.
Line limit of 4	The maximum of lines is 4. Press any key except the "Power" key to cancel.
Line limit of 3	The entered text exceed the maximum of lines. Press any key except the "Power" key to cancel. Reduce the line numbers or install tapes of a larger size.
Line limit of 2	The entered text exceed the maximum of lines. Press any key except the "Power" key to cancel. Reduce the line numbers or install tapes of a larger size.
Over the max words	The allowed number of entered characters varies to the different operations. If it exceeds the maximum, no characters can be entered or inserted further. Press any key except the "Power" key to cancel and reduce the text.

*You can diagnose problems with your label printer by checking the messages on the display. For any other messages not instructed in the table above, please contact our customer service center for support.

CUSTOMER SUPPORT

Read this manual before you start using this label printer.
Keep the manual in a handy place for future reference.

Write to us:  Pristar_aftersales@hotmail.com

Pristar PS-100E

Documents / Resources



[Pristar PS-100E Auto Cut Label Maker Machine](#) [pdf] User Guide

PS-100E Auto Cut Label Maker Machine, PS-100E, Auto Cut Label Maker Machine, Cut Label Maker Machine, Label Maker Machine, Maker Machine

References

- [User Manual](#)