



PRO EARS Pro Fit Series User Switch Control Instructions

[Home](#) » [PRO EARS](#) » PRO EARS Pro Fit Series User Switch Control Instructions 




We recently improved the faceplate controls for the Pro-Fit. It is now easier to control the volume and change the memories by pressing a switch.

Contents

- [1 User Switch Control Instructions](#)
- [2 VOLUME/MEMORY SWITCH:](#)
- [3 Changing Memories](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

User Switch Control Instructions

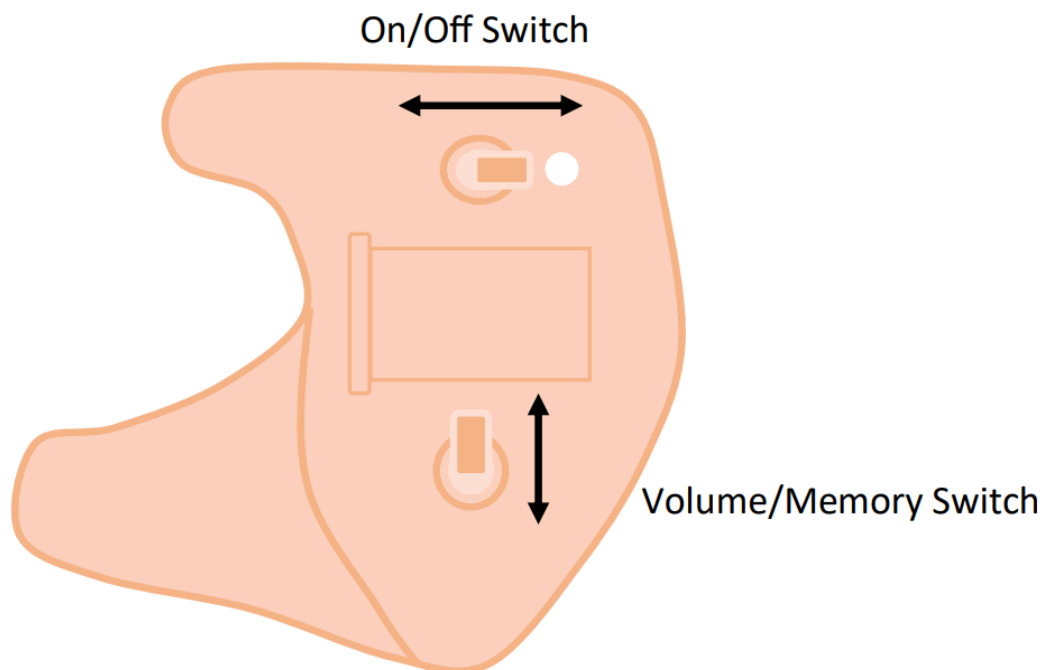

ON/OFF SWITCH:

When the switch is positioned towards the white dot, the device is off. When the switch is positioned opposite of the white dot (towards your face), the device is powered on.

Rechargeable Devices – The switch **MUST** be in the off position when charging. (towards white dot)

VOLUME/MEMORY SWITCH:

Changing Volume

Push switch upward to increase volume.

Push switch downward to lower volume.

***Please Note** – ProFit Classic models will provide a single beep when the volume level reaches the maximum or minimum levels.

Changing Memories

Push and HOLD switch upward for 3 seconds to change memories upward. 1, 2, 3, 4

Push and HOLD switch downward for 3 seconds to change memories downward. 4, 3, 2, 1

Documents / Resources

	<p>PRO EARS Pro Fit Series User Switch Control [pdf] Instructions Pro Fit Series, User Switch Control</p>
--	---