



Pro-Ject AUDIO SYSTEMS Control it RS Remote Control Instructions

[Home](#) » [Pro Ject AUDIO SYSTEMS](#) » Pro-Ject AUDIO SYSTEMS Control it RS Remote Control Instructions 

Contents

- [1 Pro-Ject AUDIO SYSTEMS Control it RS Remote Control](#)
- [2 Safety instructions](#)
- [3 Compatible Box Design devices](#)
- [4 Replacing batteries](#)
- [5 Service](#)
- [6 Warranty](#)
- [7 Copyright, trademarks](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)



Pro-Ject AUDIO SYSTEMS Control it RS Remote Control



Dear music lover

thank you for purchasing a universal remote from Pro-Ject Audio Systems. In order to achieve maximum performance and reliability, you should study these instructions for use carefully.

- Warning of a hazard for the user, the unit or possible misuse
- Important notice

Safety instructions

Avoid letting liquids enter the device. Never spill any liquid on the device. The product shall not be used in damp or wet locations, next to a bathtub, sink, swimming pool or any other similar conditions.

The 4 push buttons in the second row correspond to a unit. Press the appropriate button to select the unit you want to control. The buttons usually carry the same texts as the original remote control (exceptions described below – e.g. press “STR” and then use the remote in the same way as the original Stream Box RS remote)

different button markings:

CD

- Folder Up – F+
- Folder Down – F-
- Repe – Repeat
- Shuf – Shuffle

STR

- F + – F add
- F – – F del
- Repe – Repeat

- Shuf – Shuffle

PREA

- arrow up – volume +
- arrow down – volume –
- arrow left – input –
- arrow right – input +

ON/OFF button only turns Stereo Boxes and Pre Boxes on and off in PREA mode

PRED

- Input left: CHInput
- right: CH+

Please refer to the device user's manual for a detailed description of the buttons. This universal remote includes all the buttons from the original remote control.

Compatible Box Design devices

- PRED: MaiA DS, DS2, DS3; Pre Box DS2, RS, RS2 Digital; DAC Box RS, RS2;
- CD: CD Box RS, RS2 T
- STR: Stream Box DS net, DS2 T, RS
- PREA: Stereo Box DS2, RS; Pre Box DS2 Analogue; Pre Box RS; CD Box DS, DS2, DS2 T, DS3*;

Please note: under PREA only Stereo Boxes and Pre Boxes are turned on and off with the ON/OFF button on the Control it RS.

Replacing batteries

Proceed as follows:

- Unscrew the whole bottom of the remote control
- Replace the batteries. Make sure the batteries are the right way around!
- Reassemble the remote

Do not dispose of the batteries as ordinary domestic refuse. Please dispose of your exhausted batteries at the appropriate collection sites – usually located at supermarkets and drugstores.

Service

Should you encounter a problem, which you are not able to alleviate or identify despite the above information, please contact your dealer for further advice. Only when the problem cannot be resolved there should the unit be sent to the responsible distributor in your country.

Warranty


The manufacturer accepts no responsibility for damage caused by not adhering to these instructions for use. Modification or change to any part of the product by unauthorized persons, releases the manufacturer from any liability over and above the lawful rights of the customer.

Copyright, trademarks

- Pro-Ject Audio Systems is a Registered Trademark of H. Lichtenegger.
- This guide was produced by: Pro-Ject Audio Systems Copyright © 2018. All rights reserved.

The information was correct at the time of going to press. The manufacturer reserves the right to make changes to the technical specification without prior notice as deemed necessary to uphold the ongoing process of technical development. Pro-Ject Audio Systems · Pro-Ject Control it RS · Revision 2022.6.15.

Documents / Resources

 <small>INSTRUCTIONS FOR USE Control it RS</small>	Pro-Ject AUDIO SYSTEMS Control it RS Remote Control [pdf] Instructions Control it RS Remote Control, Remote Control, Control it RS
--	---