




Pro-Ject A1 Audio System User Guide

[Home](#) » [Pro-Ject](#) » Pro-Ject A1 Audio System User Guide 

Pro-Ject

A1
Made in Germany



Contents

- [1 Service](#)
- [2 Warranty](#)
- [3 Warranty: Terms and Conditions](#)
- [4 Commercial Use](#)
- [5 A1 Setup Guide](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

Service

Should you encounter a problem that you are not able to alleviate or identify despite the above information, please contact your dealer for further advice. Only when the problem cannot be resolved there should the unit be sent to the responsible distributor in your country. Warranty repairs will only be affected if the unit is returned correctly packaged. For this reason, we recommend keeping the original packaging.

Never return a record player without making sure that it is safely disassembled and correctly packaged in the original packaging according to the diagrams on the last page of this user guide. Please remove these parts and pack them separately: lid, counterweight, anti-skating weight, and belt.

Fit the cartridge protection cap and the transport block for the tonearm tube, prior to carefully packaging the record player.

Warranty

The manufacturer accepts no responsibility for damage caused by not adhering to these instructions for use and/or by transportation without the original packaging. Modification or change to any part of the product by unauthorized persons releases the manufacturer from any liability over and above the lawful rights of the customer.

Warranty: Terms and Conditions

- A warranty is valid only for products purchased from an authorized Pro-Ject Audio Systems retailer or dealer.
- This warranty offer is limited to the repair of the equipment (which could be a repair or replacement at our discretion, neither of which affects your original warranty).
- Neither transportation nor any other costs, nor any risk for removal, transportation, and installation of products are covered by this warranty.
- A warranty is only valid for the original owner. It is not transferable.
- To validate your warranty, you will need to provide the original sales invoice or other proof of ownership and date of purchase.
- Warranty must be claimed within two years of purchase from an authorized dealer. After this period of time, the warranty will expire.
- The legal warranty obligation exists in addition to this warranty and is not limited by this warranty.

A Pro-Ject Audio Systems warranty relates to claims of defects in materials and/or workmanship at the time of purchase. It does not cover:

- Deterioration of component parts, the nature of which is to become worn or depleted with use, such as batteries and headphone ear pads, drive belts, and cartridges.
- Damages caused by incorrect installation, connection, or packing.
- Damages caused by any use other than the correct use described in the user manual, negligence, modifications, or use of parts that are not made or authorized by Pro-Ject Audio Systems.
- Damages caused by faulty or unsuitable ancillary equipment.
- Damages caused by accidents, lightning, water, fire heat, war, public disturbances, or any other cause beyond the reasonable control of Pro-Ject Audio Systems and its appointed distributors.
- Products where the serial number has been altered, deleted, removed, or made illegible.
- Repairs or modifications that have been executed by an unauthorized person.

Commercial Use

Faults caused due to using domestic products in commercial environments or on commercial scales are not covered by warranty. This turntable is intended for domestic use only. Using them for business applications is done so at your own risk.

Pro-Ject Audio Systems is a Registered Trademark of H. Lichtenegger.

This guide was produced by: Pro-Ject Audio Systems Copyright © 2021. All rights reserved.

 
The information, pictures, and figures were correct at the time of going to press. The manufacturer reserves the right to make changes to the technical specification without prior notice as deemed necessary to uphold the ongoing process of technical development.

A1 Setup Guide

Getting started:

- Make sure to have enough space to unpack your turntable.
- Always unpack and set up in a clean environment.
- Please Do NOT throw away the packaging! If you need service or want to return your product, please send it in the original packaging including all inserts. In case of damage due to alternative packaging, your dealer cannot guarantee a full refund.
- Full manual: www.project-audio.com/en/product/a1

1. Unpack all items from the packaging carton.

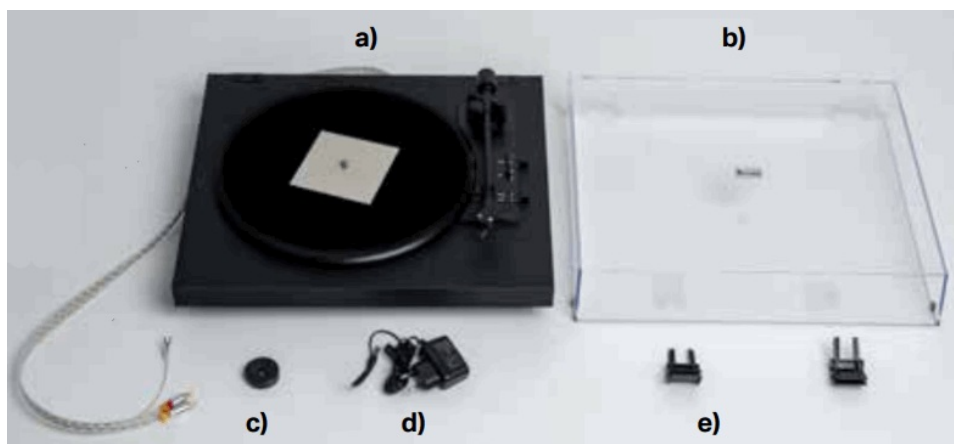

- a) Turntable
- b) Dustcover
- c) Singles adapter
- d) Power Supply
- e) Hinges

Pro Ject A1 Audio System - protection

 
2. Remove the platter protection.



3. Remove tonearm twist tie.



4. Install dust cover hinges.

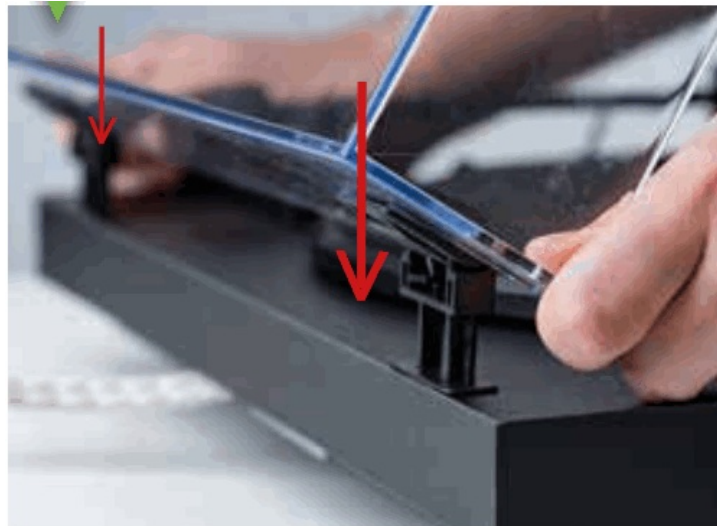

5. Slide the dust cover into the turntable.



 
6. Plug in the power supply.



7. Connect the RCA cable to your amp.




8. Switching the integrated Phono-Preamplifier ON / OFF.

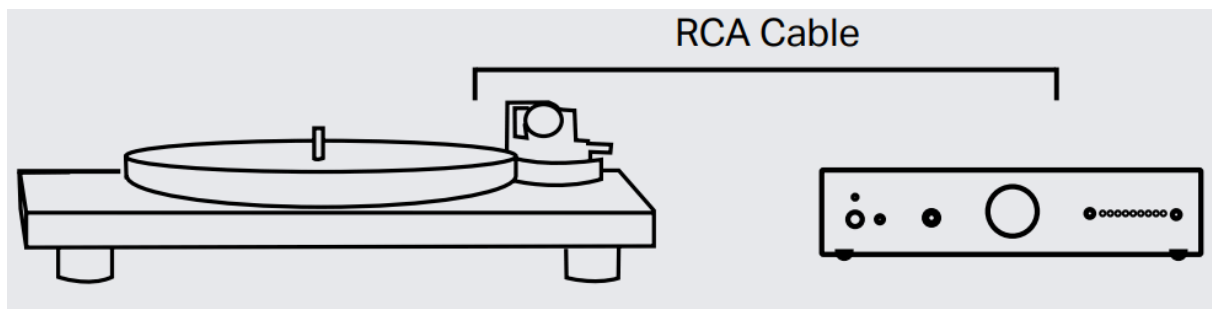

Activates the built-in phono preamplifier in the A1.

 Connect to any line input on your amp without an integrated phono amplifier.

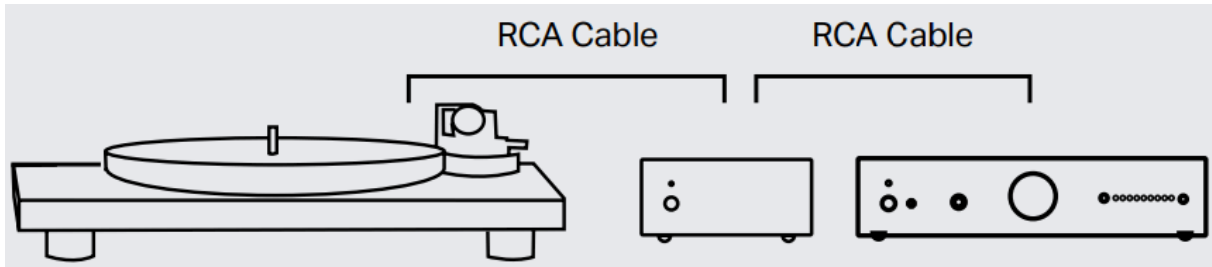

Deactivates the built-in phono preamplifier in the A1.

Connect to an amp with integrated MM phono input or use an external MM phono preamp.



9. Put a record on the turntable & carefully remove the stylus protection cover.



10. select the playback speed and move the tonearm lift to the upper position.



 
11. Select START and wait . . .



12. Have fun with the music!

Need help?
Feel free to contact us. We have experienced
partners all over the world. Find your dealer here:
www.project-audio.com/en/find-a-dealer/

Documents / Resources

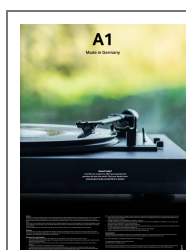

[Pro-Ject A1 Audio System](#) [pdf] User Guide
 A1, Audio System