

PROAIM P-CSHR-01 Surfer Helmet Rig for DSLR Camera Smartphone Instruction Manual

Contents

- [1 P-CSHR-01 Surfer Helmet Rig for DSLR Camera Smartphone](#)
- [2 Product Information: Surfer Helmet Rig for DSLR Camera/ Smartphone \(P-CSHR-01\)](#)
 - [2.1 What's In The Box](#)
- [3 Product Usage Instructions](#)
 - [3.1 Surfer Helmet Rig Setup](#)
 - [3.2 Position Adjustment \(Angle + Height\)](#)
 - [3.3 Smartphone Holder](#)
 - [3.4 Documents / Resources](#)
 - [3.5 Related Posts](#)

P-CSHR-01 Surfer Helmet Rig for DSLR Camera Smartphone

Product Information: Surfer Helmet Rig for DSLR Camera/ Smartphone (P-CSHR-01)

The Surfer Helmet Rig is a camera rig designed to be worn on a helmet while surfing or engaging in other water sports. It allows users to capture high-quality footage while keeping their hands free. The rig is compatible with DSLR cameras and smartphones, and comes with a range of accessories to enhance its functionality. The rig is easy to assemble and adjust, making it suitable for both amateur and professional users.

What's In The Box

- Weight washers-10 pcs
 - Arca-Type I-Phone Adapter Quick Release
 - Cam Surfer Helmet Rig
 - 2 x Camera Bolts 1/4 to 3/8 Converter
 - 2 x L-Type Allen Key (Size : 1/4)
 - Screw BS-100 (Size : 4mm, 3mm)
-

Product Usage Instructions

Surfer Helmet Rig Setup

1. Loosen and remove the weight stopper knob on the back of the

helmet rig.

2. Insert the weight washer at the back of the Helmet, as shown in the image.
3. Add washers according to the setup weight, and then secure them by tightening the stopper knob.
4. Attach the quick-release plate to the camera platform knob and properly secure it in place.
5. Remove the quick-release plate by loosening its knob.
6. Attach the plate to the bottom of your camera (Not Included), and tighten it using a screwdriver.
7. Mount the camera (Not Included) on the quick-release plate and then secure it using the provided knob.
8. Loosen the knobs on either side of the Helmet Rig and then position can be set by twisting the camera platform.
9. Loosen the center knob of the Helmet Rig and set the position according to your requirement.
10. Tighten the knob to secure the position. NOTE: Tighten the knob after matching the threads of the knob of the Helmet Rig to properly secure it with optimal gripping.


Position Adjustment (Angle + Height)

1. To adjust the position of the Helmet Rig, loosen the button head with the Allen key and set the angle according to your setup requirement.
2. After setting the position of Helmet Rig, secure both the bolts by tightening them properly with the help of Allen key.

Smartphone Holder

1. Secure the I-phone adapter holder by attaching it properly to the knob on the helmet's camera platform, as shown in the image.
2. Attach your I-phone in I-Phone Adapter holder.

Note: The Surfer Helmet Rig also features front, top, and side plates with 1/4-20 threads, allowing for accessory mounting flexibility.

PR**AIM** Surfer Helmet Rig for DSLR Camera/ Smartphone (P-CSHR-01)




What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Cam Surfer Helmet Rig

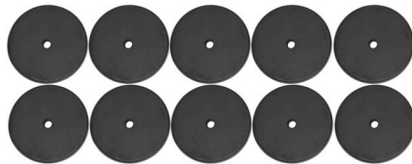

Weight washers-10 pcs



Arca-Type Quick Release



I-Phone Adapter



2 x L-Type Allen Key (Size : 4mm, 3mm)



2 x Camera Bolts (Size : 1/4")



1/4" to 3/8" Converter Screw BS-100

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

■ Surfer Helmet Rig Setup

- Loosen and remove the weight stopper knob on the back of the helmet rig.



- Insert the weight washer at the back of the Helmet, as shown in the image.



- Add washers according to the setup weight, and then secure them by tightening the stopper knob.



- Attach the quick-release plate to the camera platform knob and properly secure it in place.



- Remove the quick-release plate by loosening its knob.



- Attach the plate to the bottom of your camera (Not Included), and tighten it using a screw driver.



- Mount the camera (Not Included) on the quick-release plate and then secure it using the provided knob.



- Loosen the knobs on either side of the Helmet Rig and then position can be set by twisting the camera platform.



- Loosen the center knob of the Helmet Rig and set the position according to your requirement.



- Tighten the knob to secure the position.

NOTE: Tighten the knob after matching the threads of the knob of the Helmet Rig to properly secure it with optimal gripping.



Position Adjustment (Angle + Height)

- To adjust the position of the Helmet Rig, loosen the button head with the Allen key and set the angle according to your setup requirement.



- After setting the position of Helmet Rig, secure both the bolts by tightening them properly with the help of Allen key.



Smartphone Holder

- Secure the I-phone adapter holder by attaching it properly to the knob on the helmet's camera platform, as shown in the image.



- Attach your I-phone in I-Phone Adapter holder.



Accessory Mounting Flexibility Front, Top & Side Plates with 1/4"-20 Threads



Front Plate

Top Plate



Side Plate

YOUR PROAIM SURFER HELMET RIG FOR DSLR CAMERA /SMARTPHONE ALL DRESSED UP AND READY TO GO!




(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.

Documents / Resources

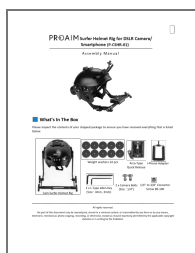

[PROAIM P-CSHR-01 Surfer Helmet Rig for DSLR Camera Smartphone](#) [pdf] Instruction Manual

P-CSHR-01 Surfer Helmet Rig for DSLR Camera Smartphone, P-CSHR-01, Surfer Helmet Rig for DSLR Camera Smartphone, DSLR Camera Smartphone, Camera Smartphone, Smartphone