

PROAIM ST-FLMX-01 Flowmax Body Support Instruction Manual

Home » PROAIM » PROAIM ST-FLMX-01 Flowmax Body Support Instruction Manual



Contents

- 1 PROAIM ST-FLMX-01 Flowmax Body
- Support
- **2 Product Specifications**
- 3 FAQ
- 4 What's In The Box
- **5 Flowmax Setup**
- **6 Warranty**
- 7 Documents / Resources
 - 7.1 References



PROAIM ST-FLMX-01 Flowmax Body Support



Product Specifications

• Product Name: Flowmax Body Support

Payload: 12-25kg / 26-55lb
Model Number: ST-FLMX-01

FAQ

- Q: Can I adjust the tension of the spring in the support rod?
 - **A:** Yes, you can adjust the tension using the tension adjustment knob at the bottom of the support rod.
- **Q:** How do I balance the setup weight to reduce strain on my back?
 - **A:** You can balance the weight by adjusting the height of the back plate with the provided Allen key.

What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Flowmax Setup











- Attach the Support rod into the Jacketsupport rod holder and tighten the knobs.
- The height of the Support rod is adjustable; you can adjust it via provided Allen key as per your setup requirement.
 - Note: A tension adjustment knob at the bottom allows changing the amount of tension of spring depending on the weight of setup while retaining stability and control.
 - **Note:** The Back Plate is also height-adjustable and allows balancing the setup weight; this adjustment helps in reducing the load on the lumbar area and helps eliminate back pain.













- You can make this adjustment by providing key.
- You can make waist area adjustments quickly by adjusting the ratchet buckle belts.
- Now, attach both Chest buckles with waistbuckles.







- You can adjust the angle up to 210° as per requirement, insert the pin to lock correctly.
- Loosen the knob on the hook and attach a camera/gimbal camera setup with it.

YOUR PROAIM FLOWMAX BODY SUPPORT, ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty

We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability

We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

Documents / Resources



PROAIM ST-FLMX-01 Flowmax Body Support [pdf] Instruction Manual ST-FLMX-01 Flowmax Body Support, ST-FLMX-01, Flowmax Body Support, Body Support

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.