



PROAIM W10631033A ESD Coinslide with Electronic Switch Extension Instruction Manual

[Home](#) » [PROAIM](#) » PROAIM W10631033A ESD Coinslide with Electronic Switch Extension Instruction Manual 

Contents

- [1 PROAIM W10631033A ESD Coinslide with Electronic Switch Extension](#)
- [2 Product Information](#)
- [3 Installation Instructions](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)



PROAIM W10631033A ESD Coinslide with Electronic Switch Extension



Product Information

Specifications

- **Product Name:** ESD Coinslide with an Electronic Switch Extension
- **Model Number:** W10631033

FAQ

- **Q:** What should I do if I experience an electrical shock?
 - **A:** Disconnect power before servicing. Replace all parts and panels before operating. Failure to do so can result in death or electrical shock.
- **Q:** How do I remove the coin slide assembly from the washer?
 - **A:** Follow these steps:
 1. Disconnect power from the washer if removing the coin slide assembly from a metercase.
 2. Unlock and remove the service door on top of the metercase.
 3. Disconnect the 4-pin 2-wire connector in the metercase.
 4. Remove the coin slide securing bolt (5/16) from inside the metercase.
 5. Lift up on the coin slide assembly and pull the entire coin slide mechanism out of the metercase.

WARNING: Electrical Shock Hazard

- Disconnect power before servicing.

- Replace all parts and panels before operating.
- Failure to do so can result in death or electrical shock.

Installation Instructions

Removing the Coinslide Assembly from Washer

1. Disconnect power from washer if removing the coinslide assembly from a metercase.
2. Unlock and remove the service door on the top of the metercase.
3. Disconnect the 4-pin 2-wire connector in the metercase.
4. Remove the coinslide securing bolt (5/16") from inside the metercase.

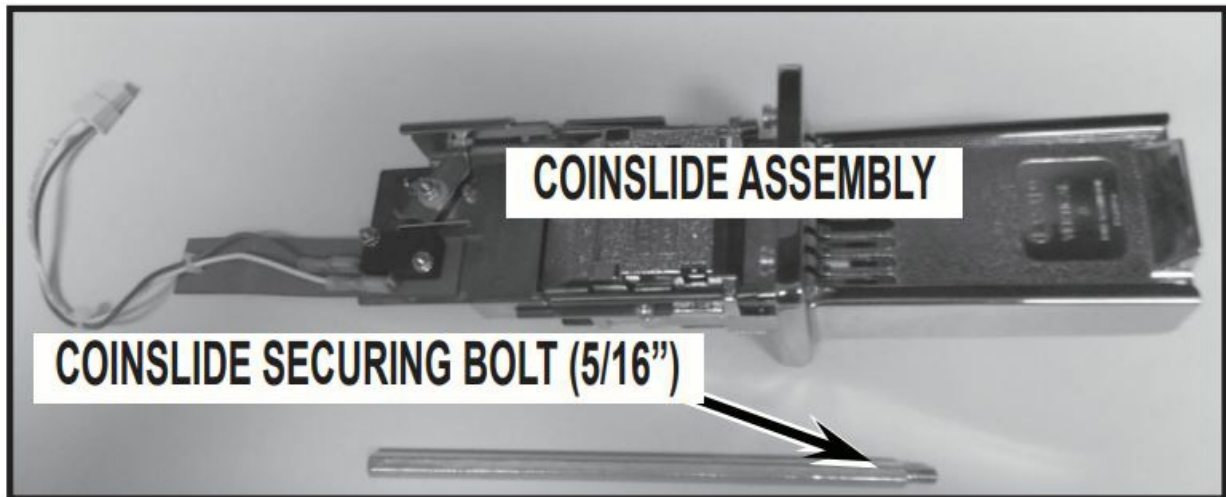


FIGURE 1

5. Lift up on the coinslide assembly and pull the entire coinslide mechanism out of the metercase. See Figure 1.

Changing the Vend Price on Coinslide Mechanism

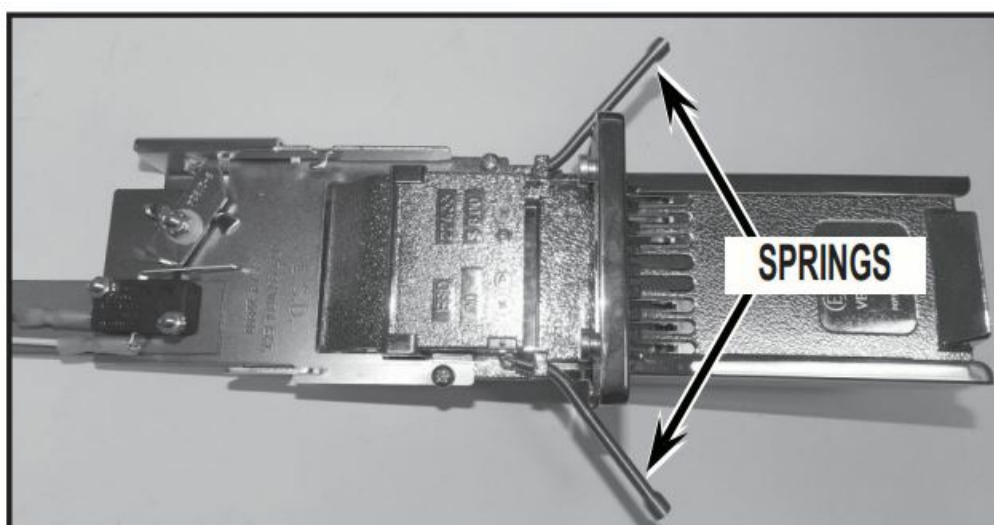


FIGURE 2

1. Take both springs off their hooks (no need to remove the springs from the coinslide body). See Figure 2.

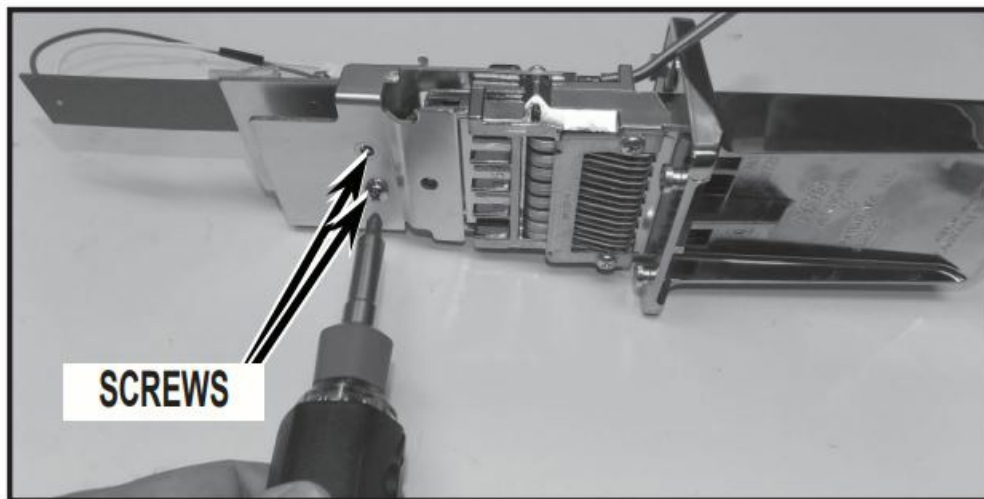


FIGURE 3

2. Turn the coin slide over and remove both screws from the bottom of the coin slide extension. See Figure 3.

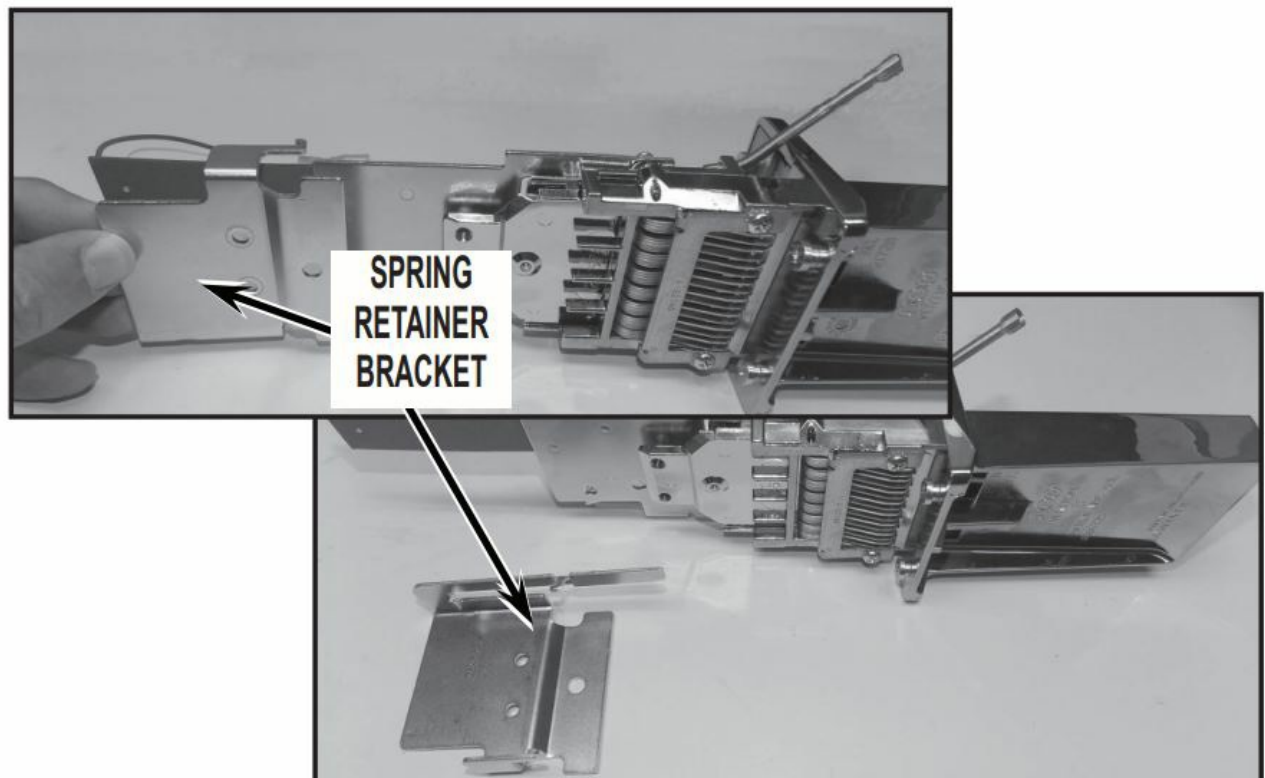


FIGURE 4

3. Remove the spring retainer bracket. See Figure 4.

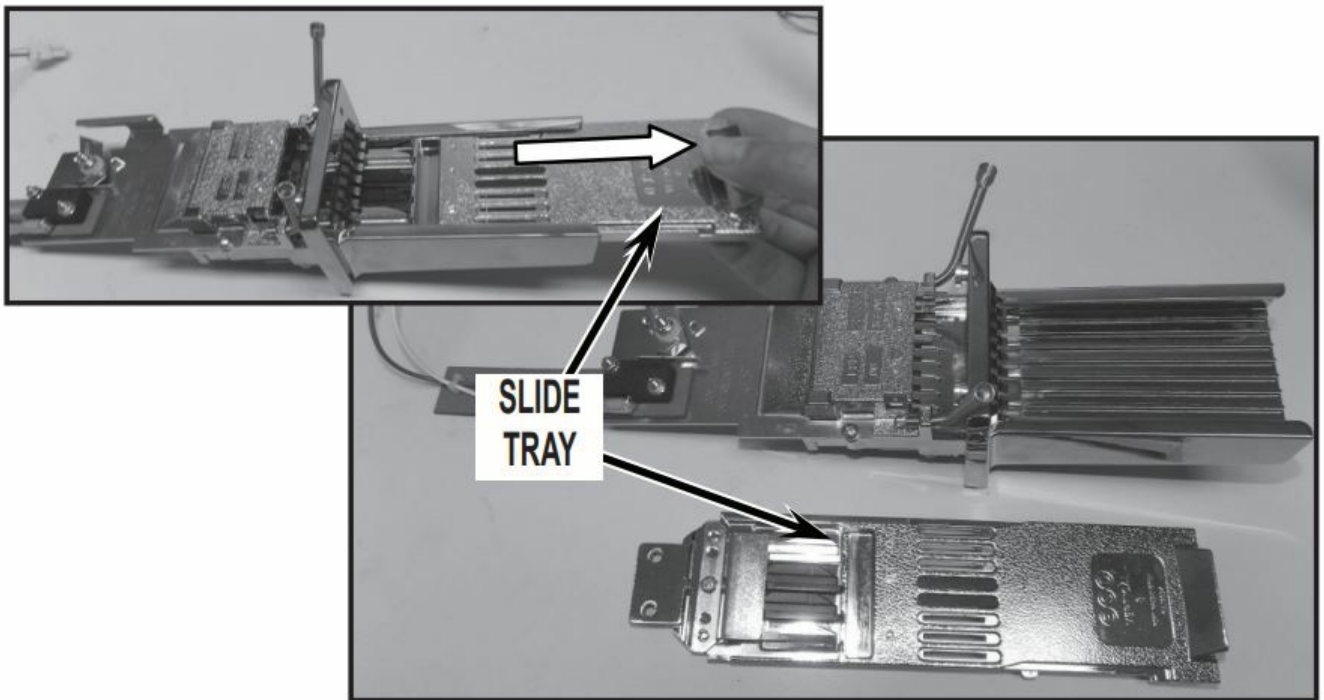


FIGURE 5

4. Grasp and pull the slide tray out of the coin slide body. See Figure 5.



FIGURE 6

5. Remove screw from extra insert retainer and set the extra insert retainer and screw to side for use later. See Figure 6.
6. Remove the inserts from the storage tray.

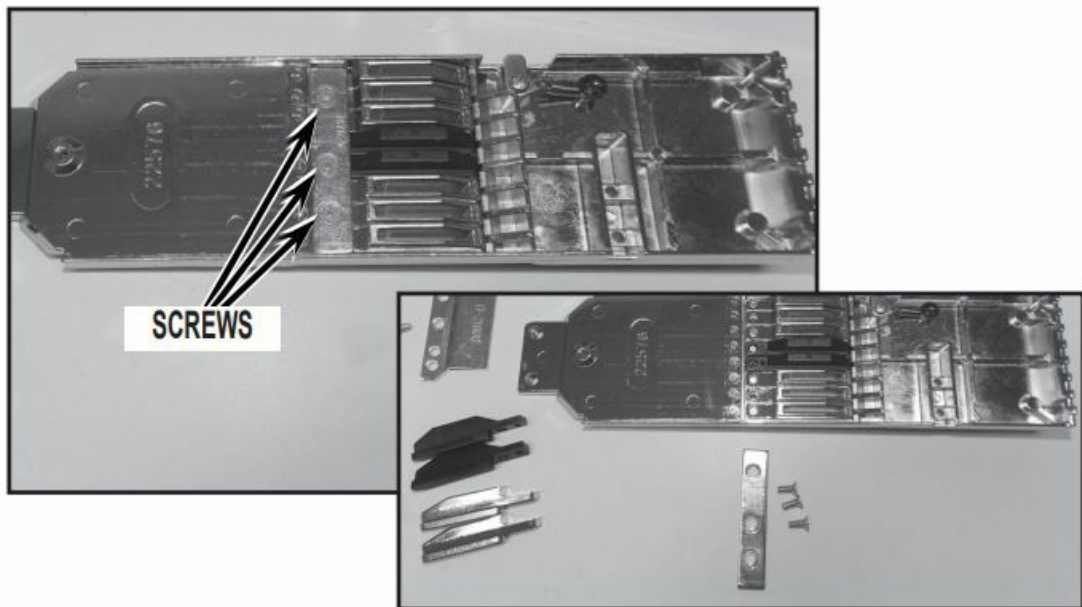


FIGURE 7

7. Turn slide tray over and remove three screws from active insert retainer. See Figure 7.

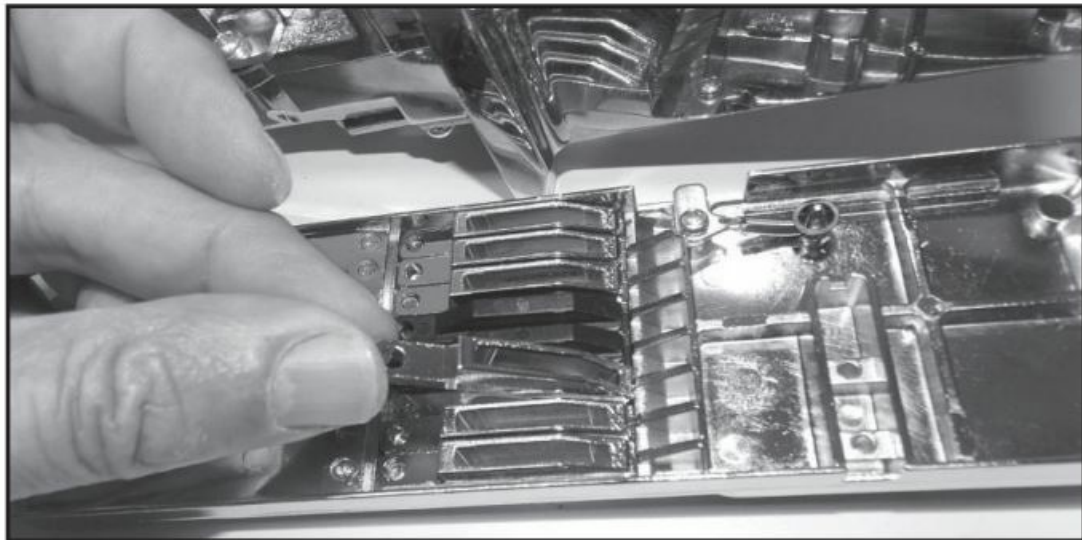


FIGURE 8

8. Lift and remove functional or blank inserts and exchange them as needed to obtain vend price. See Figure 8.

- **IMPORTANT:** All insert positions must be loaded with a functional or blank insert.

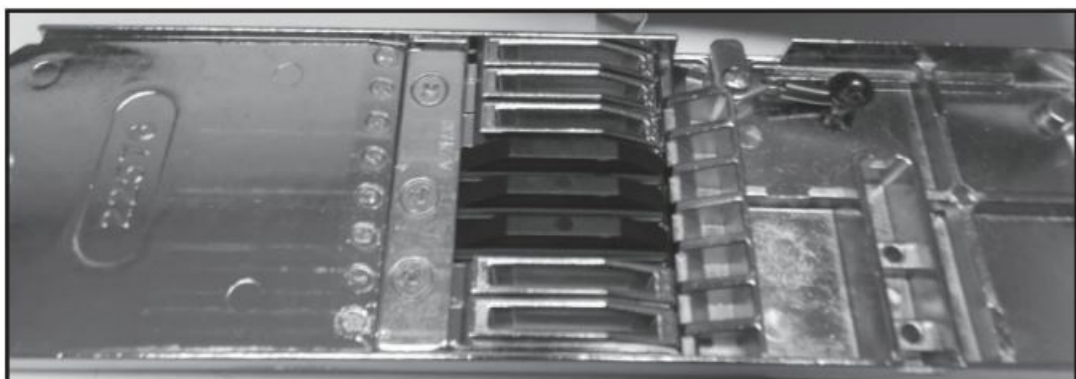


FIGURE 9

9. Reinstall the active insert retainer. Illustrated slide set for \$1.25. See Figure 9..

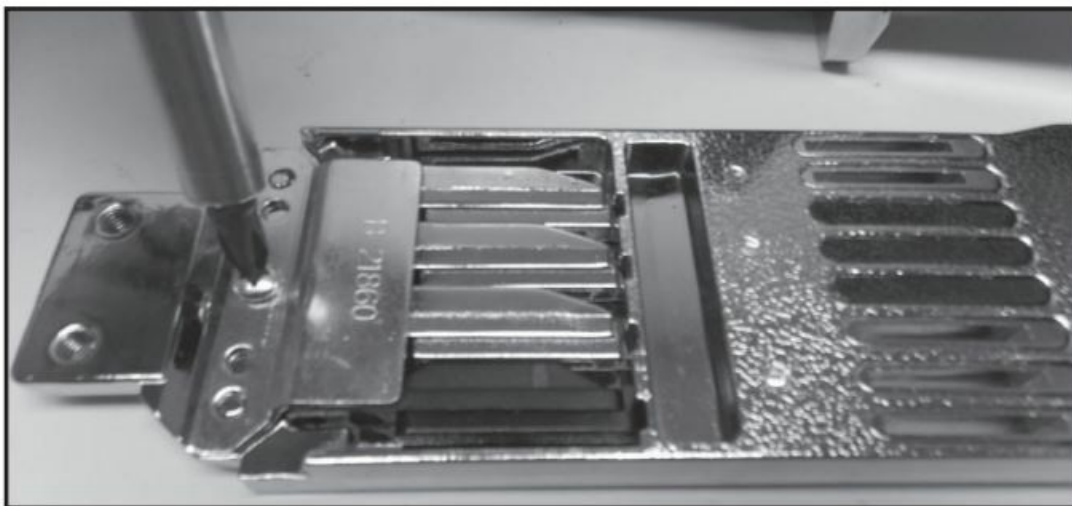


FIGURE 10

10. Turn the slide tray over and load all unused functional or blank inserts into the extra insert storage tray and reinstall the extra insert retainer with the screw previously removed in step 5. See Figure 10.

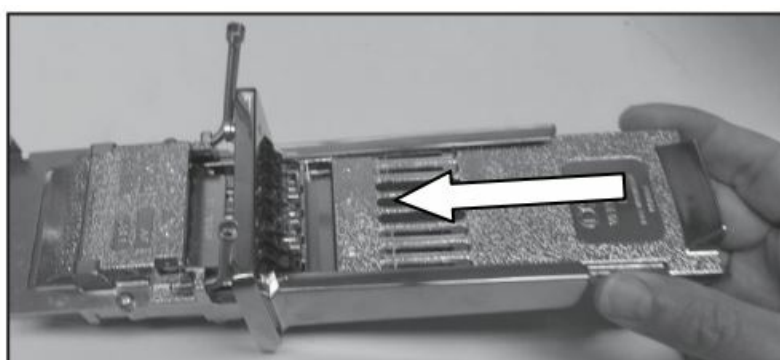


FIGURE 11

11. Turn the slide tray over and insert it into the coinslide body. See Figure 11.

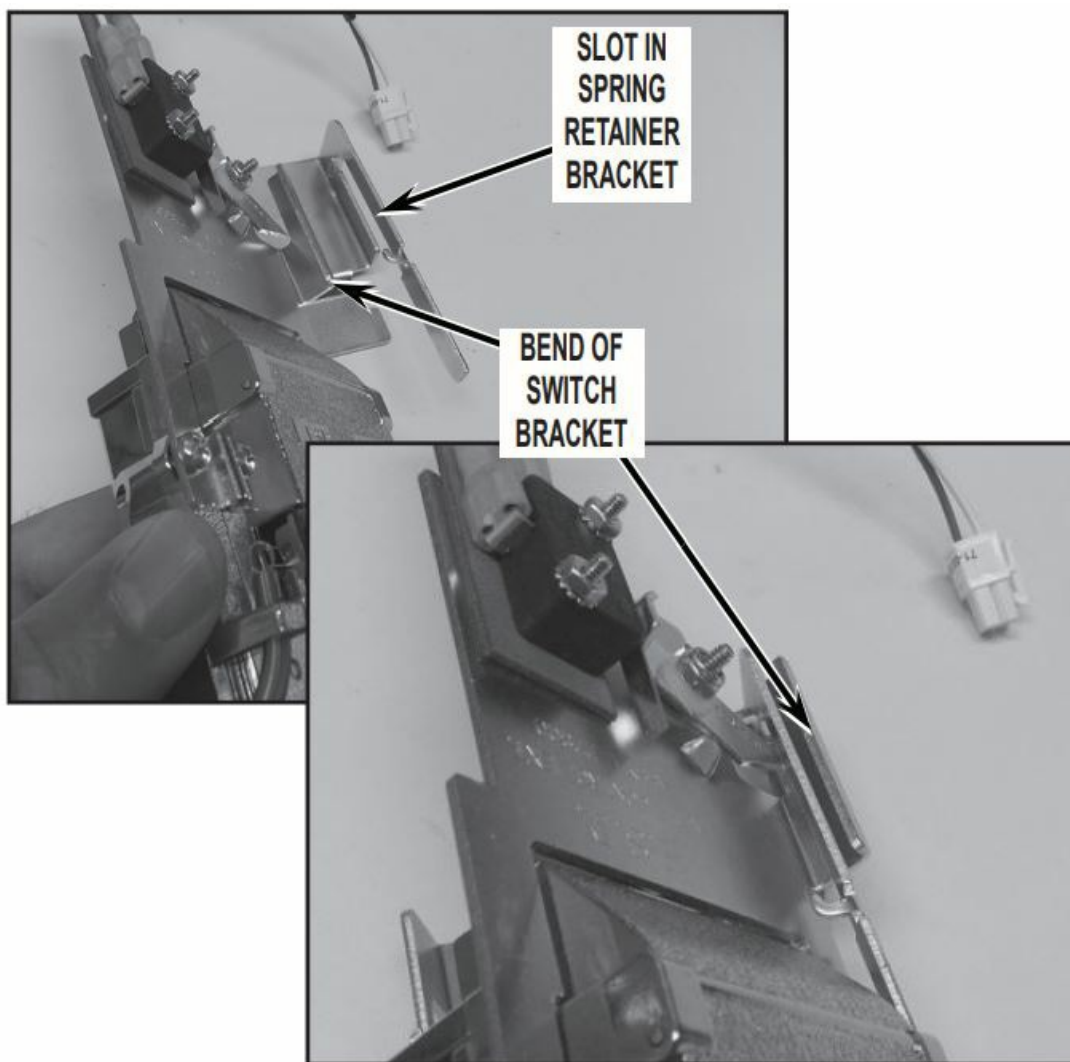


FIGURE 12

12. Align coin slide assembly over spring retainer bracket as shown. Insert the bend of the switch bracket into the slot in the spring retainer bracket. See Figure 12.

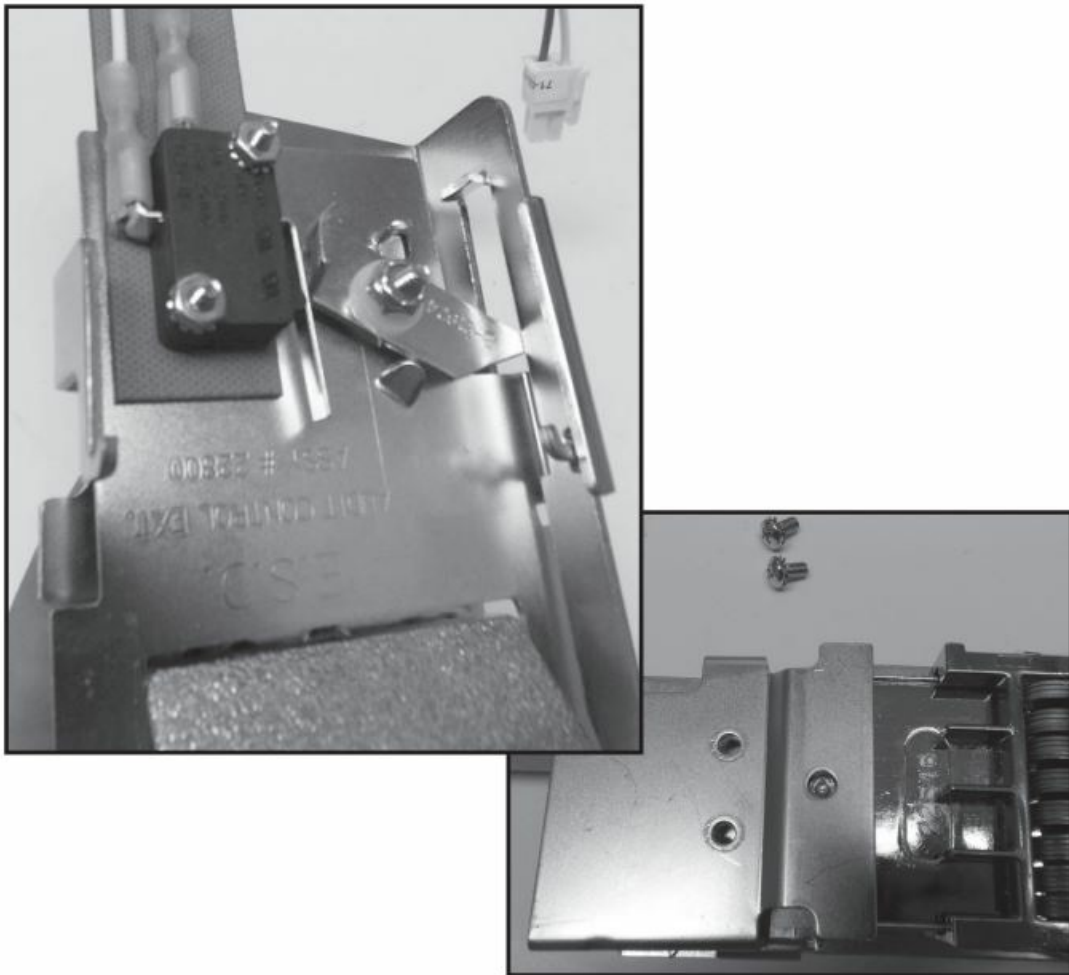


FIGURE 13

13. Rotate other end of spring retainer bracket up to the coin slide assembly and align holes on bottom of spring retainer bracket with holes on coin slide. See Figure 13

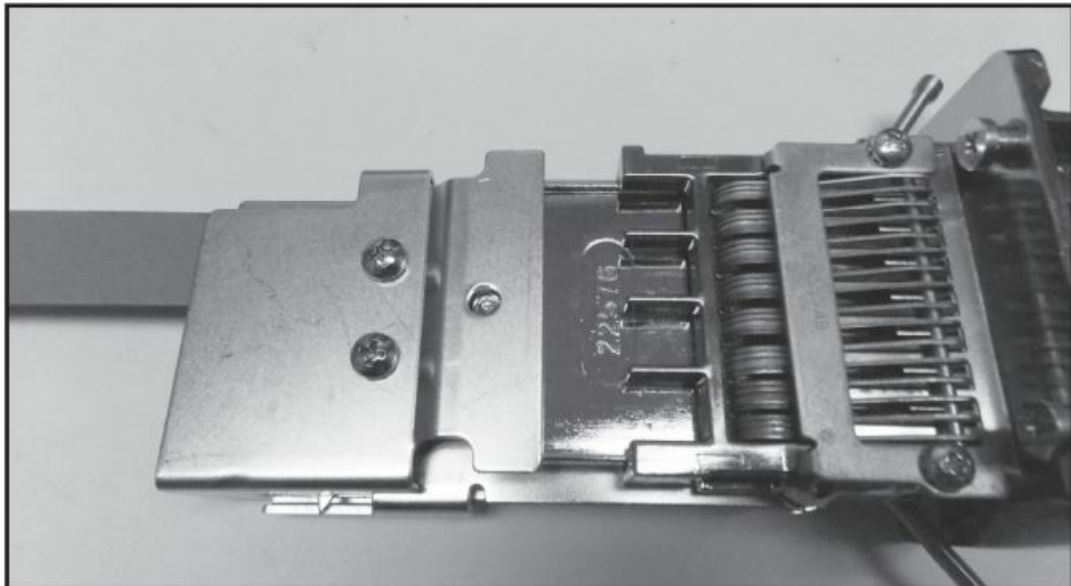


FIGURE 14

14. Reinstall both screws into the spring retainer bracket securing it to the coin slide assembly. See Figure 14.

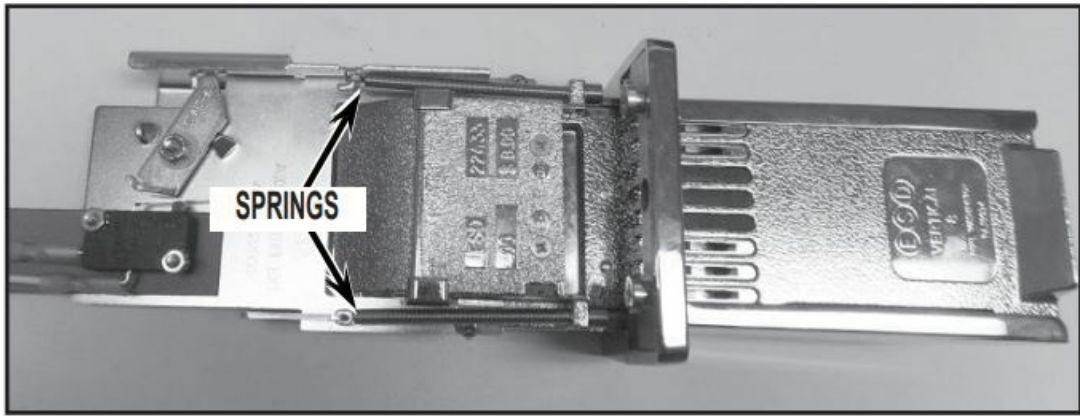


FIGURE 15

15. Hook the springs back onto spring retainer bracket. See Figure 15.
16. Test the coinslide with coins to make sure slide is functional, be sure to notice the switch actuation.

Installation of Correctly Vended Coinslide

1. Insert coinslide assembly into the coinslide bracket mounted in the metercase.
2. Mount coinslide assembly onto the coinslide adapter bracket and force it down into place.
3. Reinstall the 5/16" coinslide mounting bolt.
4. Connect 4-pin 2-wire coinslide wire harness to receiving connector in the metercase.
5. Check coinslide operation to make sure it will start a washer cycle.
6. Secure the service door on the metercase.

W10631033 B

© Whirlpool Corporation 2023
(All Rights Reserved)

Documents / Resources



[PROAIM W10631033A ESD Coinslide with Electronic Switch Extension](#) [pdf] Instruction Manual

W10631033A ESD Coinslide with Electronic Switch Extension, W10631033A, ESD Coinslide with Electronic Switch Extension, with Electronic Switch Extension, Electronic Switch Extension, Switch Extension, Extension

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.