



Contents [hide](#)

[1 Probots MC-56AG Numeric Keypad and Calculator](#)

[2 Product Description](#)

[3 Key functions](#)

[4 Operating Instructions](#)

[5 Selecting the application – calculator or keyboard](#)

[6 General advice](#)

[7 Care and maintenance](#)

[8 Troubleshooting](#)

[9 Disposal](#)

[10 Specifications](#)

[11 Documents / Resources](#)

[11.1 References](#)

PROBOTS

Probots MC-56AG Numeric Keypad and Calculator

 


Wireless Numeric Keyboard

Model MC-56AG

- Please read the entire instruction manual before using the product and save it for future reference.
- We reserve the right to correct any errors in text or images and any necessary changes made to technical data.
- If you have any questions regarding technical problems, please contact our Customer Services.

Product Description

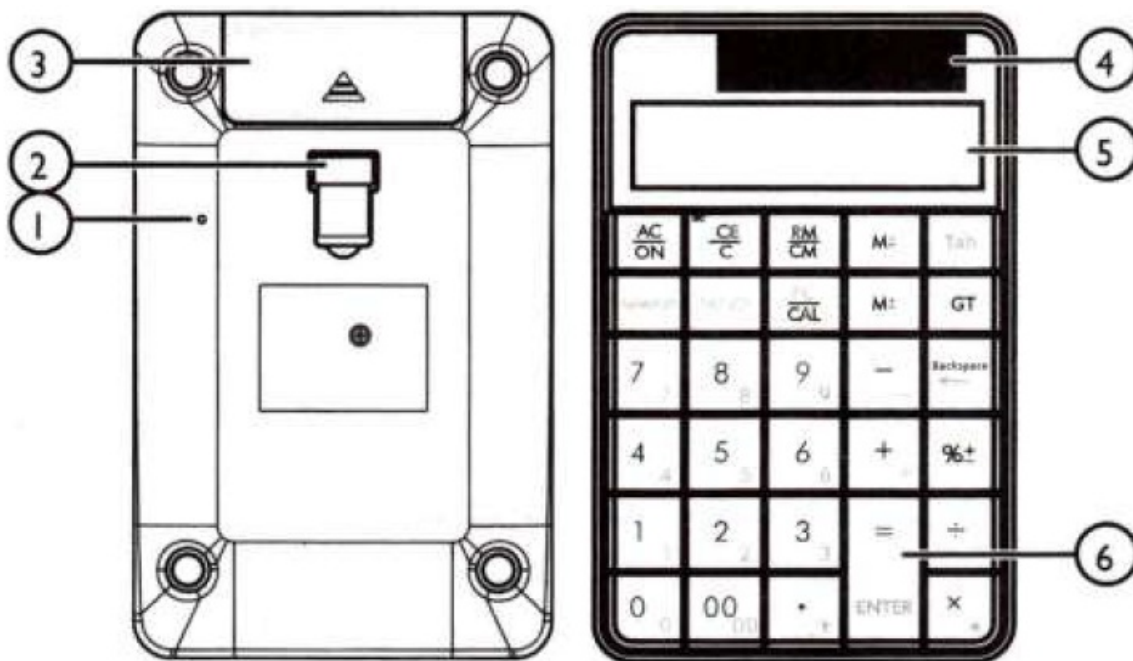

1. Resetting the device
2. USB receiver
3. Battery cover
4. Solar cell
5. 10-digit display
6. Keyboard

Key functions

- **[AC/ON]:** Turn on calculator, keyboard/clear screen. Clear saved calculations.
- **[CONNECT]:** Connect wirelessly to a computer.
- **[ESC/C/CE]:** Delete latest input/delete all inputs (in calculator mode). Escape (in keyboard mode).
- **[PC/CAL]:** Toggle between calculator and keyboard mode.
- **[Backspace]:** Backspace, delete the last input.
- **[SEND]:** Send the calculator's result or the screen's display to the computer (in calculator mode).
- **[%±]:** Calculate percentage (in calculator mode).
- **[ENTER]:** Perform calculation (in calculator mode). Confirm input value (in keyboard mode).
- **[RM/CM]:** Display memory/clear memory (in calculator mode).
- **[-]:** Select the number of decimal places to be shown after the decimal point. Press

[AC/ON], press and hold in [-]. The display will change in the following sequence: F-0-2-3-F (in calculator mode). F-maximum number of decimals.

 
- **[GT]:** The sum of multiple operations (in calculator mode).

Note: The blue signs on the keys apply in keyboard mode.

Operating Instructions

Inserting the batteries


- Remove the battery cover and insert 2 x AAA/LR03 batteries into the battery compartment.

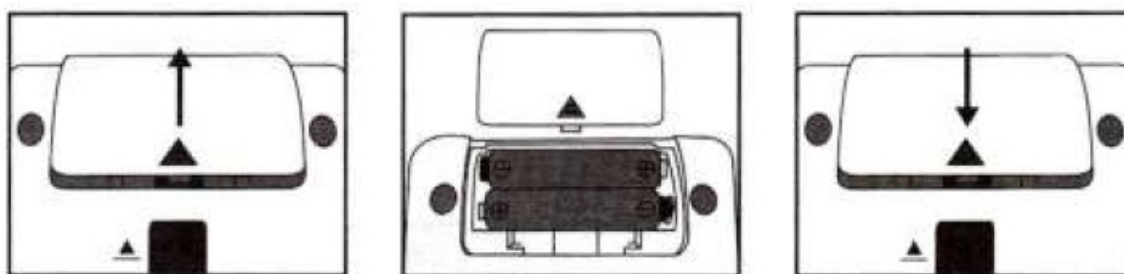


Warning! If the wrong types of batteries are used, they could explode.

Wireless connection to a computer

 
1. Remove the USB receiver, which is stored on the bottom of the keyboard.

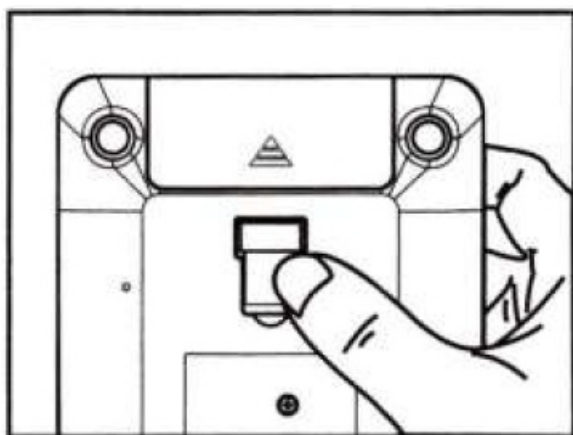

 2. Press [CONNECT] on the keyboard. Note: The symbol in the upper right hand corner of the display should start flashing. If not, ot, press [CONNECT] again.

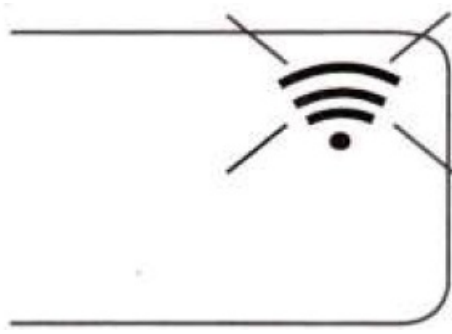

 3. Plug the USB receiver into an available USB port on your computer. Note: The symbol in the upper right hand corner will stop flashing when the wireless connection has been established and the keyboard is ready for use.

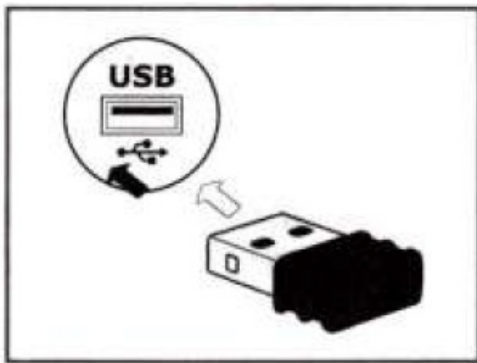

Note: In order for the keyboard to connect wirelessly to a computer, the batteries must be used. If the device is used as an independent calculator, it will be powered by its built-in solar panel.

Selecting the application – calculator or keyboard

- When the keyboard is wirelessly connected to a computer, it can be used either in calculator or keyboard mode.
- Toggle between keyboard mode K and calculator mode C by pressing [PC/CAL].

Calculator (when wirelessly connected to a computer)

- The calculator can perform the four basic calculation functions and % with 10 digits
- The results of the calculation can be shown on or sent to the computer screen by pressing [SEND].
- It is not possible to send the result to the computer if the Error symbol (E) is shown,
- The [SEND] key is only activated when the keyboard is wirelessly connected to a

computer.

Keyboard (when wirelessly connected computer)

- These keys can be used as a numeric keyboard for writing directly on your computer:
- [0][9][+][-][*]. [+]. [Backspace]. [-]. [ESC]. [ENTER] and [TAB].

Automatic shut-off Calculator mode (when not connected computer)

 
- Shuts off automatically after 7 minutes of inactivity.
- Press [AC/ON] to turn the calculator on again.

Calculator or keyboard mode (when wirelessly connected to a computer)

- The wireless connection with the computer is automatically shut off after 30 minutes of inactivity. Press [CONNECT] to re-establish a wireless connection with the computer.
- After the wireless connection has been shut off, the device will operate in calculator mode until it is completely shut off after 7 minutes of inactivity. Press [AC/ON] and then [CONNECT] to turn the device on and reconnect wirelessly.

Low battery indicator

- Replace the batteries when the display fades or the battery symbol appears.
- When the batteries are low, you will not be able to connect wirelessly to the computer.

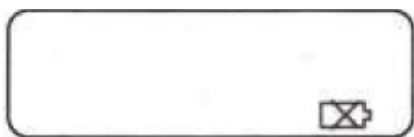

General advice

- Remember to unplug the USB receiver from the computer when the keyboard is not in use.
- Store the receiver in the holder on the bottom of the keyboard.

- If you connect the keyboard to another computer, you must follow the instructions in section 2.2, Wireless connection to a computer. Switch the device off immediately if it gets hot or emits smoke, or a burning smell.

Care and maintenance

- Clean the product using a soft, moist cloth.
- Use a mild detergent and never use solvents or strong, abrasive cleaning agents for cleaning the product.

Troubleshooting

If the product is not working correctly:

- Make sure that the batteries are inserted correctly.
- Make sure that the computer fulfils the system requirements.
- Make sure that the USB receiver is properly connected.
- Press [CONNECT] to connect wirelessly again if the connection between the device and the computer has been broken.
- Follow the instructions in Wireless connection to a computer if you have recently used the device with a different computer.
- Reset the device to its default factory settings by pushing a pointed object into the hole (1) on the back.

Disposal

 
- This product should be disposed of in accordance with local regulations.
- If you are unsure how to proceed, contact your local authority.

Specifications

- **Batteries:** 2 x AAA/LR03
- **Solar panel voltage/current:** 3 V, 3 mA
- **Recommended operating temperature:** 5-45 °C
- **Size:** 155 × 100 mm

- **LCD display:** 77 x 20 mm
- **Weight:** 158 g (excluding batteries)
- **System requirements:** 1 vacant USB port Windows XP/VISTA/Win 7/Win 8 Mac OS X 10.3.9 or later

Documents / Resources

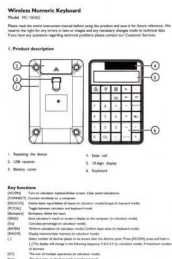

[Probots MC-56AG Numeric Keypad and Calculator \[pdf\] User Manual](#)

MC-56AG, MC-56AG Numeric Keypad and Calculator, MC-56AG, Numeric Keypad and Calculator, Keypad and Calculator, Calculator

References

- [User Manual](#)

■ [Probots](#) [Calculator](#), [Keypad and Calculator](#), [MC-56AG](#), [MC-56AG Numeric Keypad and Calculator](#), [Numeric Keypad and Calculator](#), [Probots](#)

[Previous Post](#)

[Probots Mini Bluetooth Speaker Instructions](#)

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

[Manuals+](#), [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.