

proctor|silex  
proctor silex 76504 Smooth Edge  
Cordless Can Opener



# proctor silex 76504 Smooth Edge Cordless Can Opener Instructions

[Home](#) » [Proctor Silex](#) » proctor silex 76504 Smooth Edge Cordless Can Opener Instructions 

## Contents

- 1 proctor silex 76504 Smooth Edge Cordless Can Opener
- 2 Product Usage Instructions
- 3 IMPORTANT SAFEGUARDS
- 4 SAVE THESE INSTRUCTIONS
- 5 Parts and Features
- 6 Care and Cleaning
- 7 Troubleshooting
- 8 Limited Warranty
- 9 Documents / Resources
  - 9.1 References
- 10 Related Posts

proctor|silex®

proctor silex 76504 Smooth Edge Cordless Can Opener



## Product Specifications

- Manufacturer: Proctor Silex
- Intended Use: Electric Can Opener
- Model Number: [Insert Model Number]
- Power Source: Electric
- Power Consumption: [Insert Power Consumption]
- Warranty: Limited Warranty, Contact Customer Service for details

## Product Usage Instructions

### Safety Precautions

1. Read all provided instructions before use.
2. This appliance is not intended for use by children or persons with reduced capabilities.
3. Do not use outdoors or near hot surfaces.
4. Avoid contact with moving parts and do not open pressurized cans.
5. Unplug the charging cord before cleaning and when not in use.

### Usage Guidelines

1. Ensure the appliance is placed on a stable surface.
2. Plug the charging cord into a suitable power source.
3. Press the power button to turn the appliance on and off.
4. Only use the can opener for its intended purpose.
5. Do not attempt to repair the appliance yourself; contact Customer Service for assistance.

## Frequently Asked Questions (FAQ)

- **Q: Can I charge the can opener with any power source?**

- A: No, only connect the appliance to a Listed/Certified Information Technology (Computer) Equipment, Listed/Certified ITE Power Supply, or Listed Class 2 Power Unit as using unapproved sources may be unsafe.

- **Q: Is it safe for children to use this appliance?**

- A: No, this appliance is not intended for use by children. Keep it and its cord out of reach of children to prevent accidents.

- **Q: What should I do if the appliance malfunctions?**

- A: If the appliance malfunctions, unplug it immediately and contact Customer Service for guidance on repairs or adjustments as per the Limited Warranty terms.

## Smooth Edge Cordless Can Opener Read before use


Recipes, tips, product information and registration

[proctorsilex.com](https://proctorsilex.com)

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following

1. Read all instructions.
2. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
3. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
4. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance.
5. To protect against risk of electrical shock, do not put cord assembly and/or can opener in water or other liquid.
6. Press power button to OFF ( ), then unplug charging cord when not in use, and before cleaning. To unplug, grasp the plug end and pull from the charging port. Never pull from the cord.
7. Avoid contact with moving parts.
8. Do not operate any appliance with a damaged charging cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Repairs must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. Contact Customer Service for information on examination, repair, or adjustment as set forth in the Limited Warranty
9. The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock, or personal injury.
10. Do not use outdoors.
11. Do not let charging cord hang over edge of table or counter or touch hot surfaces, including stove.
12. Do not place on or near a hot gas or electric burner, or in a heated oven.


13. Press power button to OFF (  ) before plugging charging cord into port. To unplug, grasp the plug end and pull from the charging port. Never pull from the cord.
14. Do not open pressurized (aerosol-type) cans.
15. Do not open cans of flammable liquids such as lighter fluids.
16. Do not use appliance for other than intended purpose.
17. Do not use can opener when it is attached to charging cord.
18. Do not incinerate this appliance, even if it is severely damaged. The batteries can explode in fire.
19. Under extreme conditions, leaks of batteries can occur. If the battery liquid gets on the skin, wash quickly with soap and water or neutralize area with lemon juice, vinegar or other mild acid. If the liquid gets into the eyes, immediately flush them with clean water for a minimum of 10 minutes. Seek medical attention as soon as possible.
20. Do not charge can opener with unapproved sources. Only connect to a Listed/Certified Information Technology (Computer) Equipment, Listed/Certified ITE Power Supply or Listed Class 2 Power Unit.

## SAVE THESE INSTRUCTIONS

This appliance is intended for household use only.

## Parts and Features

To order parts, visit: [proctorsilex.com/parts](http://proctorsilex.com/parts)

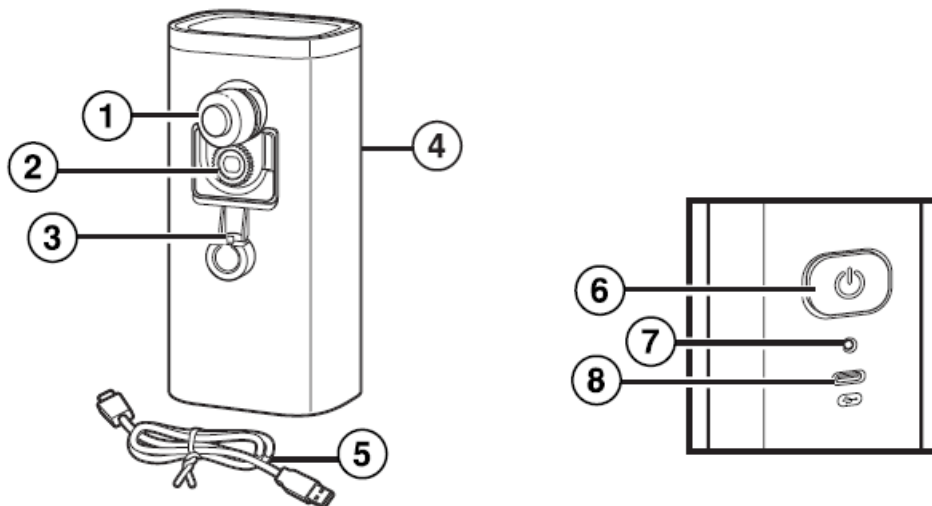

1. Cut Wheel
2. Drive Wheel
3. Lid Lifter
4. Can Opener Body
5. Charging Cord
6. ( ) Power ON/OFF Button
7. Indicator Light
8. Charging Port

## How to Charge

The appliance is not fully charged when packed in the carton.

We recommend fully charging the Can Opener before first use. Insert Charging Cord into Charging Port. Plug USB plug end into a USB plug adapter and then plug into a power outlet; OR plug the USB plug end into your computer or car. The Indicator Light will flash green while it is charging and will turn solid green when fully charged. Charge time may take up to 2 hours.


## Battery Charging Chart


Battery Indicator Light Color	% Battery Charged
Solid Green	100%
Flashing Green	30-99%
Flashing Red	less than 30%

## Battery In Use Chart

Battery Indicator Light Color	% Battery Energy
Solid Green	51-100%
Solid Yellow	30-50%
Flashing Red	less than 30%

## How to Use

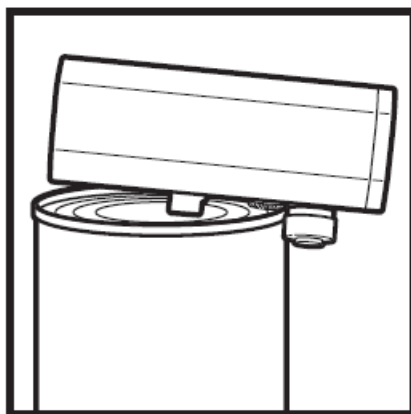

1. Unplug Charging Cord from Can Opener. Can Opener will not operate while it is charging.
2. Place Can Opener on top of can, making sure edge of can is between Cut Wheel and Drive Wheel.
3. Push the (  ) Power ON/ OFF Button to start Can Opener. Indicator Light will be solid green while Can Opener rotates around can by itself.
4. When finished, Can Opener will stop automatically. Indicator Light will flash green, then shut off as Cut Wheel and Drive Wheel release from can.  
**NOTE:** Stop Can Opener operation at any time by pressing ( ) Power ON/OFF Button.
5. Remove Can Opener from can and lift off can lid.
6. If necessary, hook Lid Lifter on edge of can lid and pry can lid open.

## Care and Cleaning

When finished using Can Opener, wipe with a soft, damp cloth and dry thoroughly. DO NOT put in dishwasher.

## Troubleshooting

### Why is my Can Opener shutting off early?

- Please make sure the edge of the can is between the Cut Wheel and Drive Wheel.
- Your Can Opener may need charging. Charge your Can Opener for at least 2 minutes to open 1 can.

### Why is my Can Opener not charging?

- Ensure your Can Opener is plugged into a working outlet.
- The Can Opener charges best with an amperage rating of at least 1.0A. If a charging block of less than 1.0A is used, the charging will take longer.

### Why does my Can Opener keep coming off the can?

- Please make sure the edge of the can is between the Cut Wheel and Drive Wheel.
- Make sure the Can Opener is fully centered on the top of the can. If the can is not lined up correctly, it could come off the can while operating.

## Battery Removal and Disposal

Hamilton Beach Brands, Inc. is concerned about protecting the environment and, therefore, has chosen to participate in the RBRC® (Rechargeable Battery Corporation) recycling program. The RBRC® is a nonprofit organization whose recycling programs adhere to all federal, state and provincial mandates concerning the proper collection, storage, and transportation of lithium-ion batteries. The RBRC® Seal on the lithium-ion battery indicates that the cost to recycle the battery pack has already been paid. Call 1-800-8-BATTERY to find the nearest retail collection site. You may also contact your local recycling center for information on where to drop off the used battery pack. For more information on RBRC®, check out their website at [call2recycle.org](http://call2recycle.org).

### To remove battery from Cordless Can Opener

1. With flat head screwdriver, remove top silver cover.
2. With flat head screwdriver, separate the two main housing pieces.
3. Lift battery and cut wires, one at a time, using scissors.

## Limited Warranty

This warranty applies to products purchased and used in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of three (3) years from the date of original purchase. During this period, your exclusive remedy is replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with our returning a product or component under this warranty to you. If the product or component is unavailable, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions,

or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V ~ 60 Hz).



We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty

or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make warranty claim, do not return this appliance to the store. Please write Hamilton Beach Brands, Inc., Attn: Consumer Affairs, 261 Yadkin Road, Southern Pines, NC 28387, or visit [proctorsilex.com/customer-service](http://proctorsilex.com/customer-service) in the U.S. or [proctorsilex.ca/customer-service](http://proctorsilex.ca/customer-service) in Canada . For faster service, include the model, type, and series numbers on your appliance.

- ERENCIA INTERNACIONAL DE SERVICIO
- 800 71 16 100
- Email: [mexico.service@proctorsilex.com](mailto:mexico.service@proctorsilex.com)

Documents / Resources

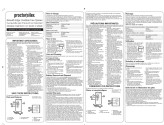	<a href="#">proctor silex 76504 Smooth Edge Cordless Can Opener</a> [pdf] Instructions 76504, 76502, 76504 Smooth Edge Cordless Can Opener, 76504, Smooth Edge Cordless Can Opener, Edge Cordless Can Opener, Cordless Can Opener, Can Opener, Opener
	<a href="#">Proctor Silex 76504 Smooth Edge Cordless Can Opener</a> [pdf] Instruction Manual 76504 Smooth Edge Cordless Can Opener, 76504, Smooth Edge Cordless Can Opener, Edge Cordless Can Opener, Cordless Can Opener, Can Opener, Opener

References

- [call2recycle.org](http://call2recycle.org)
- [Home | ProctorSilex.com](#)
- [Inicio | Proctor Silex Mexico](#)
- [Customer Service | ProctorSilex.com](#)
- [Parts & Accessories | ProctorSilex.com](#)
- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.