

Proctor Silex 24215PS 4 Slice Toaster INSTRUCTION MANUAL

Contents

- [1 Proctor Silex 24215PS 4 Slice Toaster](#)
- [2 WARNING](#)
- [3 IMPORTANT SAFEGUARDS](#)
- [4 SAVE THESE INSTRUCTIONS](#)
- [5 Limited warranty](#)
- [6 FREQUENTLY ASKED QUESTIONS](#)
- [7 VIDEO – OVERVIEW](#)

proctor|silex.

Proctor Silex 24215PS 4 Slice Toaster



Read before use

For questions and other information:

USA: proctorsilex.com

Canada: proctorsilex.ca

México: proctorsilex.com.mx

WARNING

To reduce the risk of fire:

- Do not operate while unattended.

- Do not use it with food that has been spread with butter, jelly, frosting, etc.
- Do not use rice cakes, fried foods, frozen prepared foods, or nonbread items.
- Do not use it with toaster pastries. Always cook toaster pastries in a toaster oven.
- Do not cover or use near curtains, walls, cabinets, paper or plastic products, cloth towels, etc.
- Closely supervise when used by or near children.
- Do not operate a toaster in an enclosed space, such as an appliance cabinet, caddy, garage, or other storage area.
- To reduce the risk of fire, clean crumb trays regularly.
- Always unplug the toaster when not in use. Failure to follow these instructions can result in death or fire.

IMPORTANT SAFEGUARDS


When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are closely supervised and instructed concerning the use of the appliance by a person responsible for their safety.
3. Close supervision is necessary when any appliance is used by or near children. Cleaning and user maintenance shall not be made by children unless they are supervised. Children should be supervised to ensure that they do not play with the appliance.
4. Do not attempt to dislodge food when the toaster is plugged in.
5. To protect against electrical shock, do not immerse the cord, plug, or toaster in water or other liquid.
6. Unplug from the outlet when not in use and before cleaning. Allow to cool before cleaning. Allow to cool before putting on or taking off parts, or moving toaster.
7. Do not operate any appliance with a damaged supply cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Supply cord replacement and repairs must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. Call the provided customer service number for information on examination, repair, or adjustment.
8. Oversized foods or metal utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
9. To remove food that is lodged in slots, unplug it and allow it to cool. With toaster controls facing you, rotate the toaster away from you, controls over the top, until the toaster is upside down, and gently shake. Do not insert any utensils.
10. The bread may burn. A fire may occur if the toaster is covered or touching flammable material, including curtains, draperies, walls, overhead cabinets, paper or plastic products, cloth towels, and the like, when in operation.
11. Do not place on or near a hot gas or electric burner or in a heated oven.
12. Do not touch hot surfaces. Use handles or knobs.
13. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
14. Do not let the cord hang over the edge of the table or counter or touch hot surfaces, including the stove.
15. Before unplugging the toaster, make sure the bread lifter is in the "up" position.
16. Do not use outdoors.

17. Do not use appliances for other than intended use.
18. To disconnect, turn all controls to OFF (O); then remove the plug from the wall outlet.
19. This product is for household use only.
20. Do not operate the appliance by means of an external timer or a separate remote-control system.
21. Do not operate unattended.
22. Do not heat toaster pastries in the toaster— use a toaster oven. If you must use a toaster, always set it to the lowest toast color setting. Never heat-cracked, broken, or warped pastries, and never leave them unattended.
23. **CAUTION:** HOT SURFACE. The temperature of accessible surfaces may be high when the appliance is operating.

SAVE THESE INSTRUCTIONS

Parts and features

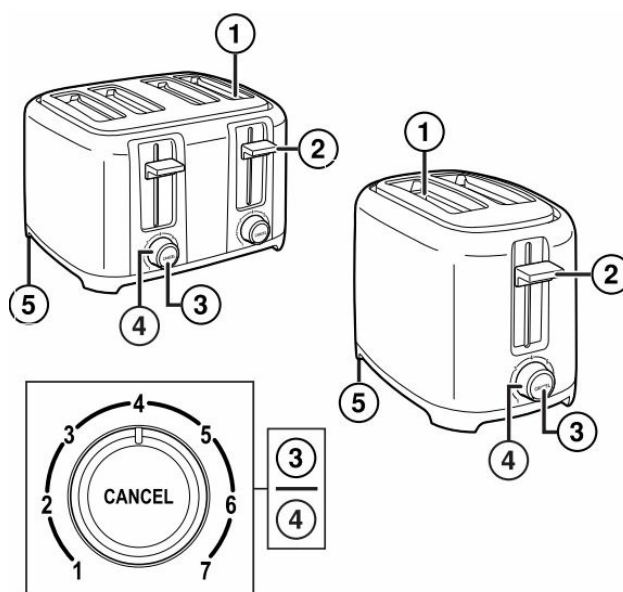

1. Food Slots With Guides
2. Bread Lifter
3. Cancel Button
4. Shade Selector
5. Slide-Out Crumb Tray

Food Slots With Guides

- **Bread Lifter** – Push down the bread lifter to start the toaster. After the toast cycle ends, raise the bread lifter to remove food easily.
- **Cancel Button** – To cancel or end a cycle, press the CANCEL button.
- **Shade Selector** – Turn the dial to adjust the toast shade.
- **Slide-Out Crumb Tray**

How to toast

- Plug into an outlet.
- Place appropriate food items in slots.
- Select toast shade. Press down the bread lifter.

NOTE: The bread lifter will not latch down unless the toaster is plugged in.

- Bread will pop up automatically at the end of the cycle.

NOTE: Frozen foods may require an additional toasting cycle.

Cleaning

NOTE: If the toaster is used daily, the crumb tray should be cleaned weekly.

- Unplug the toaster and let it cool.
- Slide out the crumb tray and wipe off with a clean cloth; then slide back into place.
- Wipe the outside of the toaster with a damp cloth. Do not use abrasive cleansers that may scratch the surface of the toaster.

Limited warranty

This warranty applies to products purchased and used in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition. This product is warranted to be free from defects in material and workmanship for a period of three (3) years from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value. This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120 V ~ 60 Hz).

We exclude all claims for special, incidental, and consequential damages caused by a breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you. To make a warranty claim, do not return this appliance to the store. Please call 1.800.851.8900 in the U.S. or 1.800.267.2826 in Canada or visit proctorsilex.com in the U.S. or proctorsilex.ca in Canada. For faster service, locate the model, type, and serial numbers on your appliance.

FREQUENTLY ASKED QUESTIONS

How many slices of bread can the Proctor Silex 24215PS toaster toast at once?

The Proctor Silex 24215PS is a 4-slice toaster, meaning it can toast up to four slices of bread simultaneously.

Does the toaster have multiple browning settings?

Yes, the Proctor Silex 24215PS toaster typically offers adjustable browning settings, allowing you to choose your desired level of toasting.

Does the toaster have wide slots to accommodate different types of bread?

Yes, the Proctor Silex 24215PS toaster is usually equipped with wide slots that can accommodate various bread types, including bagels and thicker slices.

Does the toaster have a cancel button to stop the toasting process?

Yes, the toaster is typically equipped with a cancel button that allows you to stop the toasting process at any time.

Does the Proctor Silex 24215PS toaster have a crumb tray?

Yes, the toaster usually features a removable crumb tray that makes it easy to clean and maintain.

Is the toaster equipped with a defrost function for frozen bread?

Yes, many models of the Proctor Silex 24215PS toaster come with a defrost function that allows you to toast frozen bread directly from the freezer.

Does the toaster have a reheat function to warm previously toasted bread?

Some models of the Proctor Silex 24215PS toaster offer a reheat function that lets you warm up previously toasted bread without further toasting.

Can the toaster accommodate taller bread slices?

The Proctor Silex 24215PS toaster typically has a high-lift lever that allows you to easily retrieve smaller or taller bread slices without burning your fingers.

Does the toaster have an automatic shut-off feature?

No, the Proctor Silex 24215PS toaster generally does not have an automatic shut-off feature. It requires manual operation to start and stop toasting.

Is the toaster equipped with cool-touch sides to prevent burns?

Yes, the sides of the toaster are usually designed to stay cool to the touch, reducing the risk of burns.

Does the toaster have an indicator light to show when it is in use?

Yes, the Proctor Silex 24215PS toaster typically features an indicator light that illuminates when the toaster is turned on and toasting.

Can I toast only two slices of bread in the 4-slice toaster?

Yes, you can use the Proctor Silex 24215PS toaster to toast any number of slices, including just two slices if desired.

Can I toast other items besides bread in the toaster?

While the primary purpose of the toaster is to toast bread, you may be able to toast other items like English muffins, toaster pastries, or toaster waffles depending on their size and thickness.

Does the toaster have a bagel setting for toasting bagels?

Yes, many models of the Proctor Silex 24215PS toaster offer a bagel setting that toasts the cut side of the bagel while gently warming the outer side.

Does the Proctor Silex 24215PS toaster come with a warranty?

Warranty information may vary, so it's best to check with the manufacturer or retailer for the specific warranty details of the toaster.

VIDEO – OVERVIEW



[Download the PDF link](#)
[Downloads/Content/uploads/2023/06/Proctor-Silex-24215PS-4-Slice-Toaster-INSTRUCTION-MANUAL.mp4](#)

[Proctor Silex 24215PS 4 Slice Toaster INSTRUCTION MANUAL](#)