



# Proctor Silex 66331 Juicer Machine and Squeezer User Manual

[Home](#) » [Proctor Silex](#) » Proctor Silex 66331 Juicer Machine and Squeezer User Manual 

## Contents

- [1 Proctor Silex 66331 Juicer Machine and Squeezer](#)
- [2 IMPORTANT SAFEGUARDS](#)
- [3 CONSUMER SAFETY INFORMATION](#)
- [4 Parts and Features](#)
- [5 How to Use](#)
- [6 Tips for Best Results](#)
- [7 How To Clean](#)
- [8 Customer Service/Warranty](#)
- [9 FAQs](#)
- [10 Video- Product Overview](#)

**proctor|silex.**

**Proctor Silex 66331 Juicer Machine and Squeezer**



#### READ BEFORE USE

Please call our toll-free number before returning product to the store. Our friendly associates are ready to help you:

- USA: 1-800-851-8900
- Canada: 1-800-267-2826
- Mexico: 01-800-71-16-100

#### **WARNING** Shock Hazard

- Do not immerse this appliance in water or other liquid.
- This appliance has a polarized plug (one wide blade) that reduces the risk of electrical shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or using an adaptor. If the plug does not fit, reverse the plug. If it still does not fit, have an electrician replace the outlet.

#### **IMPORTANT SAFEGUARDS**

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
3. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. To protect against risk of electric shock, do not immerse base, cord, or plug in water or other liquid.
5. Turn the appliance OFF( ), then unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
6. Avoid contact with moving parts.
7. Do not operate any appliance with a damaged supply cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Supply cord replacement and repairs must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. Call the provided customer service number for information on examination, repair, or adjustment.
8. The use of attachments not recommended or sold by Hamilton Beach/Proctor-Silex, Inc. may cause fire, electric shock, or injury.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter or touch hot surfaces, including stove.
11. Do not place on or near a hot gas or electric burner or in a heated oven.

SAVE THESE INSTRUCTIONS

## CONSUMER SAFETY INFORMATION


**This appliance intended for household use only.**

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in, or tripping over a longer cord. If a longer cord is necessary an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the juicer. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

To avoid an electrical circuit overload, do not use another high wattage appliance on the same circuit with your juicer.




## Parts and Features

1. Lid
2. Large Reamer with Pulp Scraper (oranges, grapefruit)
3. Small Reamer with Pulp Scraper (limes, lemons)
4. 2-Piece Pulp Control Basket with Pulp Control Dial (see inset)
5. Pitcher with Juice Level Indicator
6. Center Shaft
7. Base with Cord Storage

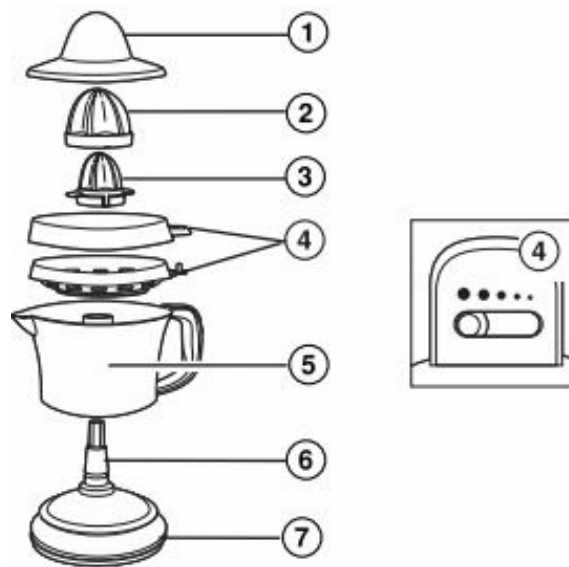

## How to Use

1. Unplug from electrical outlet.
2. Place pitcher onto base. Hold base and turn pitcher clockwise to lock. The pitcher will stop when locked. (Illustration A.)
3. Fit the two parts of pulp control basket together. Place onto center shaft of juicer, aligning handle of pulp control basket with handle of pitcher. (Illustration B.)
4. Snap small reamer onto pulp control basket. If juicing large fruit (oranges, grapefruit) fit the large reamer directly on top of the small reamer.  
**NOTE:** Always select size of reamer based on size of fruit to be juiced.
5. Slide the pulp control dial to select the desired amount of pulp. (Illustration C.)  
**NOTE:** If the reamer is used without the pulp control basket, the juice will contain pulp and seeds.
6. Plug cord into 120 volt AC outlet.
7. Push down on reamer with halved fruit Illustration C to start the juicing action. Lift the fruit up off the reamer and the juicer stops. This juicer is designed with an auto-reverse. It automatically reverses direction, from time to time, to make juicing easier.

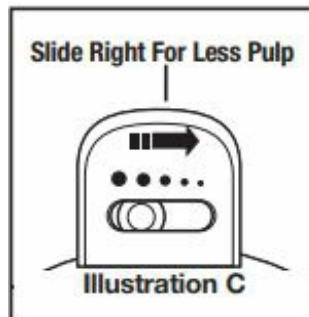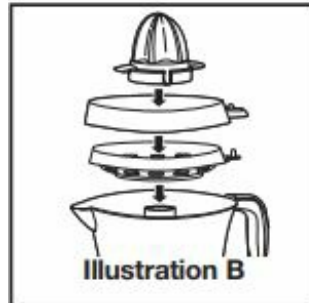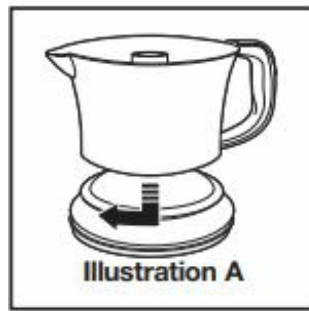


8. When finished juicing, unplug from outlet, then remove reamer (and strainer if used).
9. To unlock pitcher, hold base and turn pitcher counterclockwise. Place lid on pitcher and pour juice. Store unused juice in pitcher in the refrigerator.

## Tips for Best Results

- This juicer is designed to juice citrus fruit such as oranges, lemons, limes, and grapefruit.
- For maximum juice, fruit should be room temperature.
- Before juicing, roll fruit between countertop and palm of your hand. Slice fruit in half, cutting across sections.

## How To Clean

1. Unplug from electrical outlet.
2. Lift off lid, reamer (and strainer if used).
3. To unlock pitcher, hold base and turn pitcher counterclockwise.
4. Lift pitcher to remove.
5. The lid, reamers, pulp control basket, and pitcher may be washed in hot, soapy water or on the TOP rack of a dishwasher.
6. Wipe base with a damp cloth.
7. Wrap cord around cord storage (Illustration D). NOTE: All parts fit together for easy storage. See illustration on page 3 under Parts & Features.

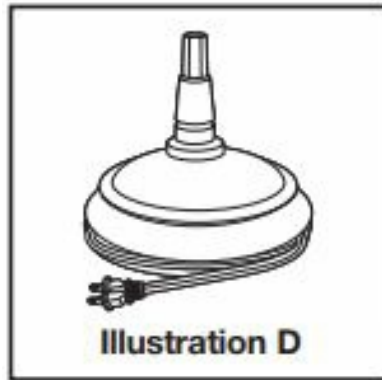

## Customer Service/Warranty

If you have a question about your appliance, call our toll-free customer service number. Before calling, please note the model, type, and series numbers and fill in that information below. These numbers can be found on the bottom of your appliance.

MODEL: \_\_\_\_\_ TYPE: \_\_\_\_\_ SERIES: \_\_\_\_\_

### LIMITED WARRANTY

This warranty applies to products purchased in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use.

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim, do not return this appliance to the store. Please call 1.800.851.8900 in the U.S. or 1.800.267.2826 in Canada or visit [proctorsilex.com](http://proctorsilex.com) in the U.S. or [proctorsilex.ca](http://proctorsilex.ca) in Canada. For faster service, locate the model, type, and series numbers on your appliance.

### FAQs

What should I do if the appliance malfunctions or is damaged?

If the appliance malfunctions or is damaged, do not use it. Contact the manufacturer or their service agent for examination, repair, or adjustment.

Can I use this juicer outdoors?

No, this juicer is not designed for outdoor use.

Can I use attachments that are not recommended or sold by Hamilton Beach/Proctor-Silex?

No, using attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.

How do I clean the juicer?

To clean the juicer, unplug it from the electrical outlet and remove the lid, reamers, pulp control basket, and pitcher. These parts can be washed in hot, soapy water or on the top rack of a dishwasher. Wipe the base with a damp cloth.

What fruits can I juice with this appliance?

This juicer is designed to juice citrus fruits such as oranges, lemons, limes, and grapefruit.

How should I store unused juice?

After juicing, store unused juice in the pitcher in the refrigerator.

Can I use a longer cord with this juicer?

If a longer cord is necessary, you can use an approved extension cord. However, make sure the electrical rating of the extension cord is equal to or greater than the rating of the juicer.

How long is the warranty for this product?

This product comes with a one-year limited warranty from the date of original purchase. The warranty covers defects in material and workmanship.

What is the Proctor Silex 66331 Juicer Machine primarily used for?

The Proctor Silex 66331 Juicer Machine is primarily designed for juicing citrus fruits like lemons and oranges. You can easily make fresh lemonade, juices, salad dressings, and marinades. It can handle a variety of citrus fruits ranging from small Key limes to large grapefruits.

Does a part of the purchase contribute to a charitable cause?

Yes, one dollar of every purchase goes directly to Alex's Lemonade Stand Foundation. This foundation funds research into childhood cancer and provides support to children battling with cancer.

What makes the juicing process efficient in this machine?

The electric citrus juicer comes with two nesting reamers for small to large citrus fruits. Additionally, the juicer is equipped with an auto-reversing feature which ensures maximum juice extraction from the fruit.

How do I manage the amount of pulp in the juice?

The juicer features a pulp control dial that allows users to slide left or right, adjusting the pulp level as per preference. The pulp collects in a strainer, making it easy to discard.

### Video- Product Overview



[Download This PDF Link or to Site 6623/09 Product File x663 Squeezer User Manual Machine-and-Squeezer-User-Manual.mp4](#)

[Manuals+.](#)