



PRODEMAND 3RD ROW SEAT BACK PIVOT ACTUATOR MOTOR Instructions

[Home](#) » [PRODEMAND](#) » PRODEMAND 3RD ROW SEAT BACK PIVOT ACTUATOR MOTOR Instructions 

Contents

- [1 PRODEMAND 3RD ROW SEAT BACK PIVOT ACTUATOR MOTOR](#)
- [2 REPAIR INSTRUCTIONS](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)


PRODEMAND

PRODEMAND 3RD ROW SEAT BACK PIVOT ACTUATOR MOTOR



REPAIR INSTRUCTIONS

Fig 1: 3rd Row Seat Back Pivot Actuator Motor – Back Cushion

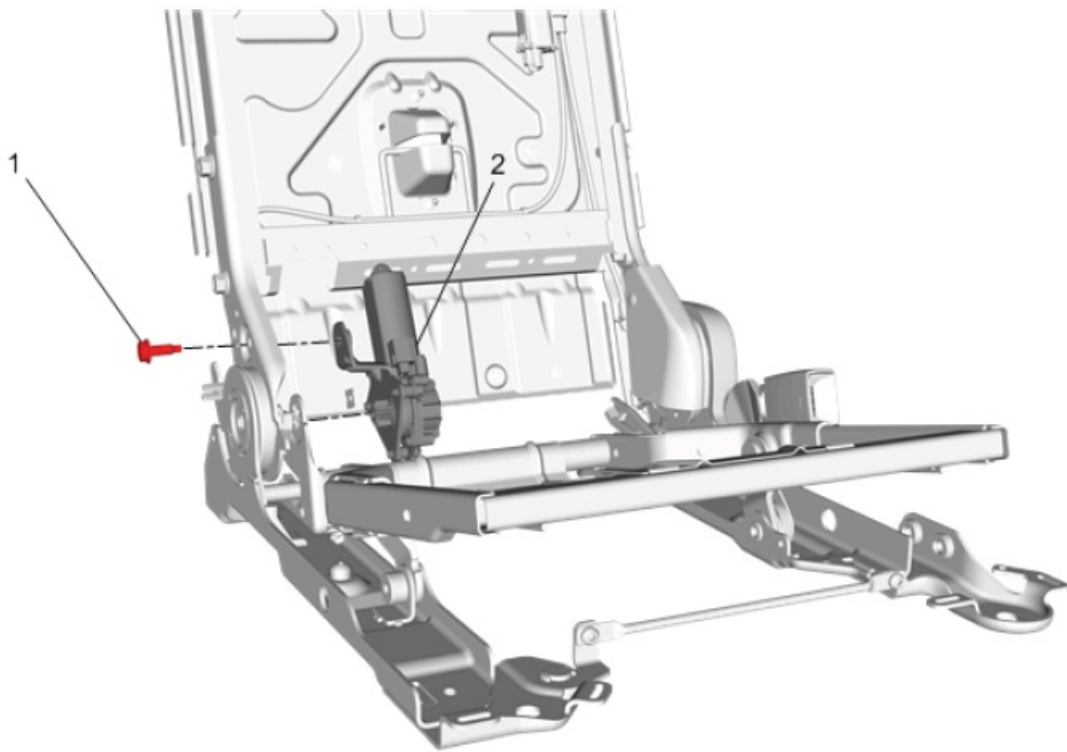

Callout	Component Name
Preliminary Procedures	
<p>1. Remove the 3rd row seat back cover and pad. Refer to 3rd Row Seat Back Cover and Pad Replacement (40% Inboard with AS8)3rd Row Seat Back Cover and Pad Replacement (60% Outboard with AS8) .</p> <p>2. Remove the 3rd row seat back hinge finish cover. Refer to 3rd Row Seat Back Hinge Finish Cover Replacement (40% Inboard with AS8)3rd Row Seat Back Hinge Finish Cover Replacement (40% Outboard with AS8)3rd Row Seat Back Hinge Finish Cover Replacement (60% Inboard with AS8)3rd Row Seat Back Hinge Finish Cover Replacement (60% Outboard with AS8)3rd Row Seat Back Hinge Finish Cover Replacement (60% Inboard with ARN)3rd Row Seat Back Hinge Finish Cover Replacement (60% Outboard with ARN)3rd Row Seat Back Hinge Finish Cover Replacement</p>	

(40% Outboard with ARN)3rd Row Seat Back Hinge Finish Cover Replacement (40% Inboard with ARN) .

1	<p>3rd Row Seat Back Pivot Actuator Motor Bolt</p> <p>CAUTION: <i>Refer to Fastener Caution .</i></p> <p>Tighten</p> <p>28 N.m (21 lb ft)</p> <p>NOTE: <i>The seat back frame is under spring tension.</i></p> <p><i>When the motor is removed, the seat frame will suddenly spring into the folded position.</i></p>
2	<p>3rd Row Seat Back Pivot Actuator Motor Procedure</p> <ol style="list-style-type: none"> 1. Disconnect the electrical connector. 2. Slide the motor off of the gear keyed bracket on the frame. 3. Transfer the mounting bracket, if necessary.

