

**Contents** [ [hide](#) ]

- [1 PRODIM Portable 2D Coordinate Measuring Machines](#)
- [2 Package Contents](#)
- [3 The remote control](#)
- [4 Proliner software](#)
- [5 Projection](#)
- [6 Compensation](#)
- [7 Positioning](#)
- [8 Leap function](#)
- [9 Measuring in 5 steps](#)
- [10 Maintenance](#)
- [11 Documents / Resources](#)
  - [11.1 References](#)

# PRODIM

## PRODIM Portable 2D Coordinate Measuring Machines



### Package Contents



1x Proliner



1x remote control



2x battery



1x battery charger



2x adapter with cable



1x bag with scanners



1x USB stick



1x Prodim touchscreen pen



1x cleaning cloth



Forms

**ATTENTION!** Check your packing list for the exact content of your order / package. The content may differ from what is shown here. Contact Prodim if the supplied content deviates from packing list.


NOTE: Save the shipping box and its contents for safe transport in the event of a return.

[Watch the video](#)



## The Proliner (hardware)

### Proliner parts:

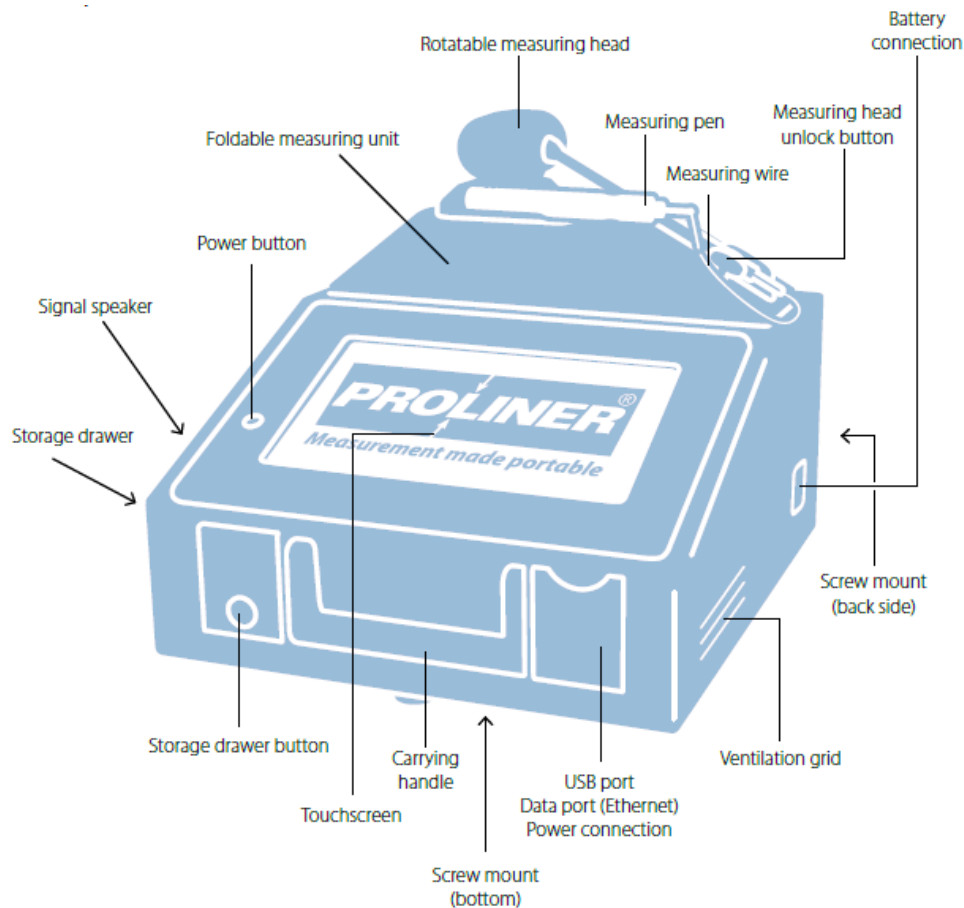

TIP: Mount the Proliner on a tripod for a better reach! Screw mounts can be used to attach the Proliner on a tripod. They are positioned at the bottom and back side of the Proliner.

[Watch the video](#)



## The remote control

The remote control is used to capture measuring points. The remote control has four buttons

### 1. Point mode

Press once to capture a single point. When the next point is captured, the Proliner will automatically draw a line between the measured points.

### 2. Continuous mode

Once pressed, the Proliner will register a number of points until the button is pressed again. Continuous mode records straight lines and / or radii depending on the shape of the object.

### 3. End of a contour

This button ends a measured contour. After closing a contour, you add a new contour by continuing to measure. You can also create a new layer by holding button 3. This layer can be named as well.

### 4. Delete the last point or contour

Press button 4 to delete the last measured point.

Holding the button will remove the last measured contour.



Watch the video



#### DEFINITIONS:

Point: □

Line: —

Contour: □—□—□—□

**TIP:** Work with layers A layer is a collection of points, lines and contours. Hold button 3 to close a layer and create a new layer. Working with layers can be very useful for the processing of your drawing.

## Proliner software

## 1. Login screen:


After starting up the Proliner you will first see the initial loading screen followed by the login screen.



## 2. App screen:

### SHOWN CONTENT

Depending on your specific Proliner configuration, apps, functions and options might be different from the content shown or discussed in this manual.

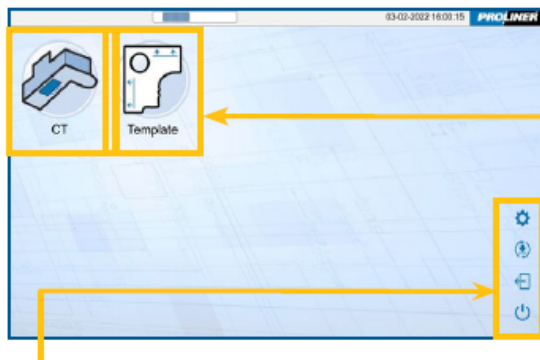

The app screen displays main Proliner functions and industry-specific apps that are available to you.

Apps are dedicated to the project that the icon displays. The available functionalities within the app and Proliner measurement settings are tuned to the application for easy and accurate measurement.

Start an app by clicking the icon and continue to the home screen.



#### Manager

Advanced machine settings, diagnostic and manual software upgrades of the Proliner can be found here. Access it only under Prodim supervision.



#### Update\*

This function enables you to automatically update the Proliner software and licenses via internet. Update procedure:

1. Connect the Proliner to the internet using an Ethernet cable.
2. Push the update button to start the automated update procedure.
3. Follow the on screen instructions.



#### Logout

Press to return to the login screen and select a different industry.




#### Shut down

Press to switch off the Proliner. **Recommended to use this button to shut down the Proliner.**


## Menu structure:

## Main menu:

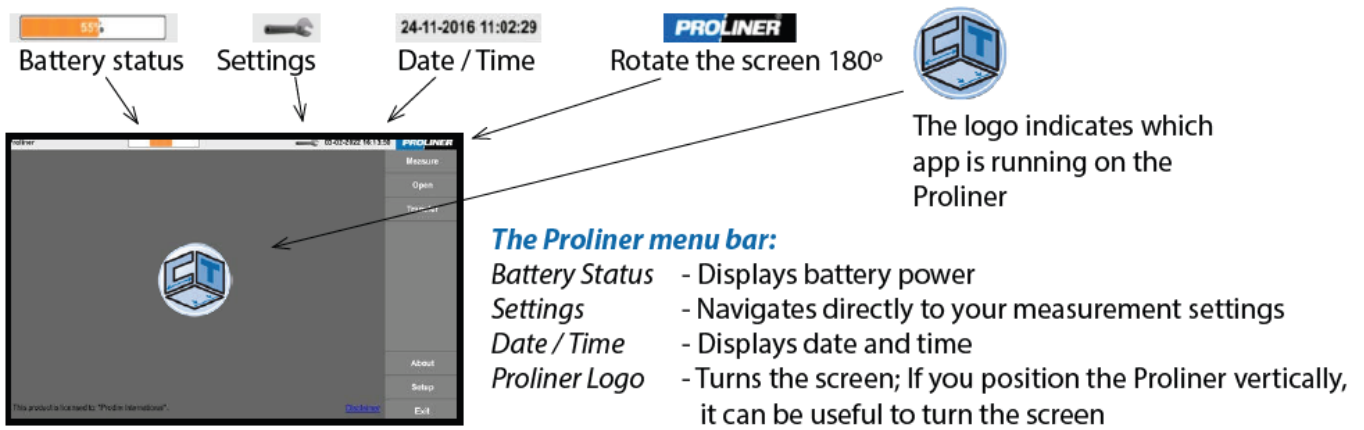

## Measurement menu:

Create and manage projects, files and customer data

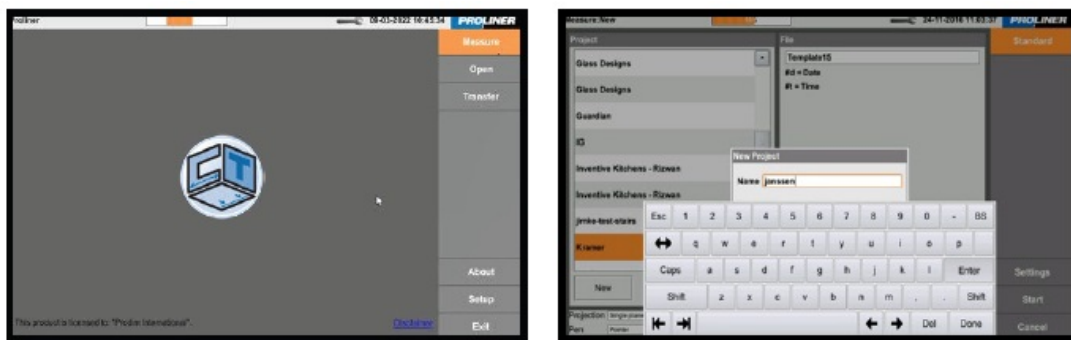

## Open

Open, rename or delete projects



## Transfer

Import and export projects and files to and from USB, an external data storage device or a computer over the network.





## Settings:

In this menu you can configure all Proliner measurement settings before starting a measurement.

**Pen**

Choose the type of measuring pen used:  
**Pointer** or **scanner**.

**Contour**

Choose whether the contour you measure in the drawing should remain **open** or is automatically **closed**.

**Compensation**

Configure whether the pen thickness should be compensated or not.  
Choose: **compensate left**, **compensate right** or **no compensation**.

**Projection**

In this menu you can configure the 2D projection plane on which your measurement will be projected.

**The number of projection planes:** determine whether a measurement needs projected on a single 2D plane (**single plane**) or on multiple 2D planes (**multiple plane**).

**Determine the projection plane to be projected on:** choose **horizontal** plane, **vertical** plane, **average** plane, or choose to measure the projection plane (**first contour**).

**Projection plane compensation:** here you can configure whether the 2.5mm thickness of the pen should be compensated on the projection plane or not. It is most common to use **offset plane** by default. **Don't offset plane** is only used for particular measurements.

## Watch the video




## ATTENTION!

The Proliner is equipped with customer-specific software and licenses. Menus may differ between different Proliner types.

## Projection

The Proliner always measures in 3D.


To create a 2D template, the measured 3D points have to be projected on a projection plane.

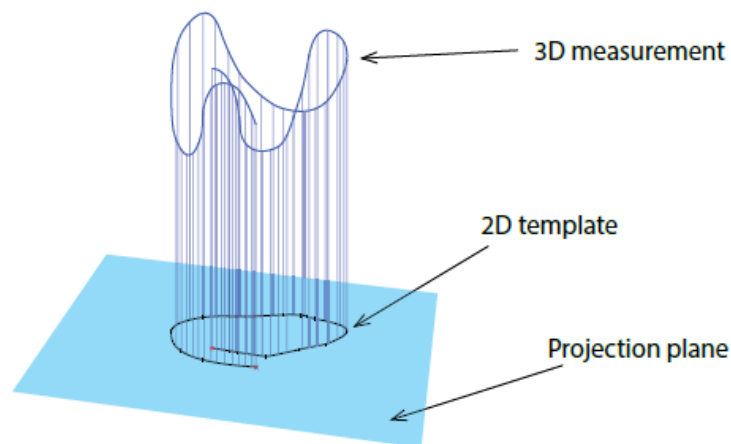


The drawing above is an excessive example to help explain what the Proliner software actually does. Below is a picture of a kitchen countertop. This top looks fairly flat, but is uneven in practice, thus 3D. Therefore, you will always need to determine the 2D projection plane first.

The determined 2D projection plane used for measuring the countertop is shown in light blue.



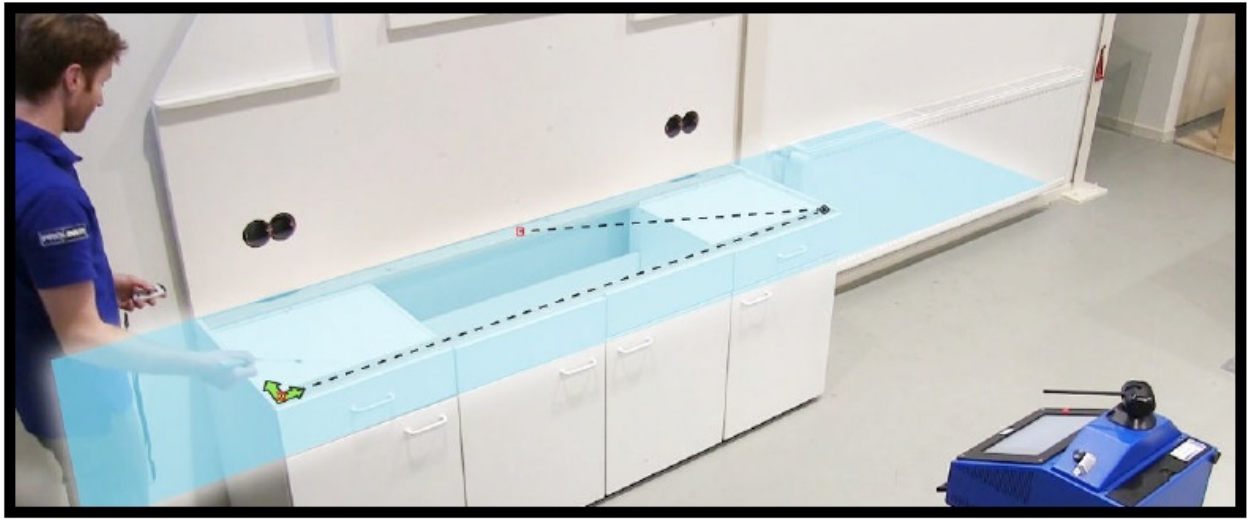

[Watch the video](#)

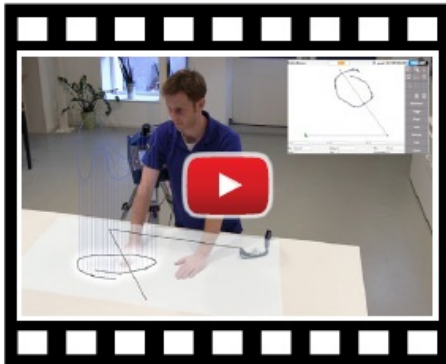


## Compensation

The measuring pen captures points from the absolute center of the pen tip.

During a measurement, the object is touched with the outside of the pen tip.

Due to the thickness of the pen tip, there is a difference of 2.5mm between the object that you are measuring and what the Proliner pen captures. This can be corrected using the compensation settings beforehand or during editing afterwards.

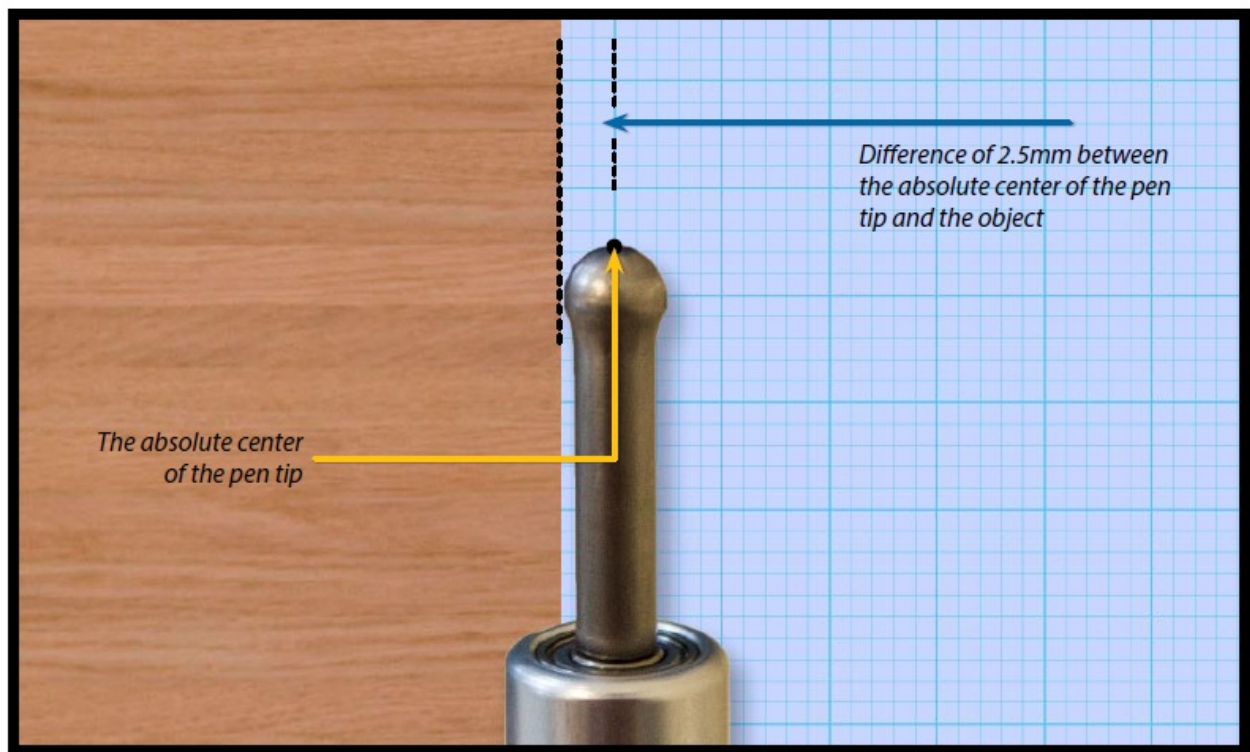


Depending on the choice of either left or right compensation, you have to measure in a specific direction. When choosing none, the measurement results will not be compensated and if needed have to be corrected after-wards using a CAD program.

### **ATTENTION!**

If you use a different measuring pen type, you have to adjust the compensation values as well!

TIP: Check our website for other measuring pen solutions There are several measuring pens and add-ons available for different applications.

[Watch the video](#)

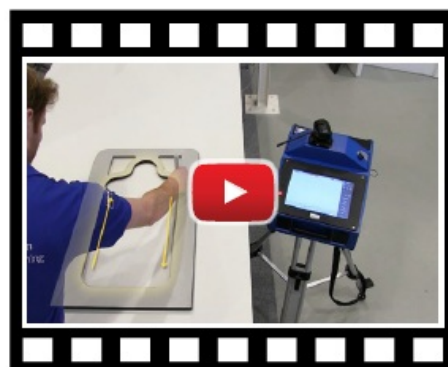

## **Positioning**

When measuring, it is important to choose the ideal position for your Proliner. Leveling is not necessary if you determine the projection plane yourself.


- Stability:

Make sure the Proliner is placed in a stable position, it should not be able to move during the measurement. The same is applicable to the object that needs be measured.

- Range:

Determine if you can reach all points to be measured. Pick a place where you can make the most of the Proliner range. Try to avoid obstacles, so that you can keep the wire in a straight line during measurement.

- TIP: Position the Proliner significantly higher than the measurement object! If possible, try to place the Proliner clearly above the projection plane. This way you get a drawing projected on the top of your projection plane. If the projection plane is positioned higher than the Proliner, you are likely to mirror your measurement.

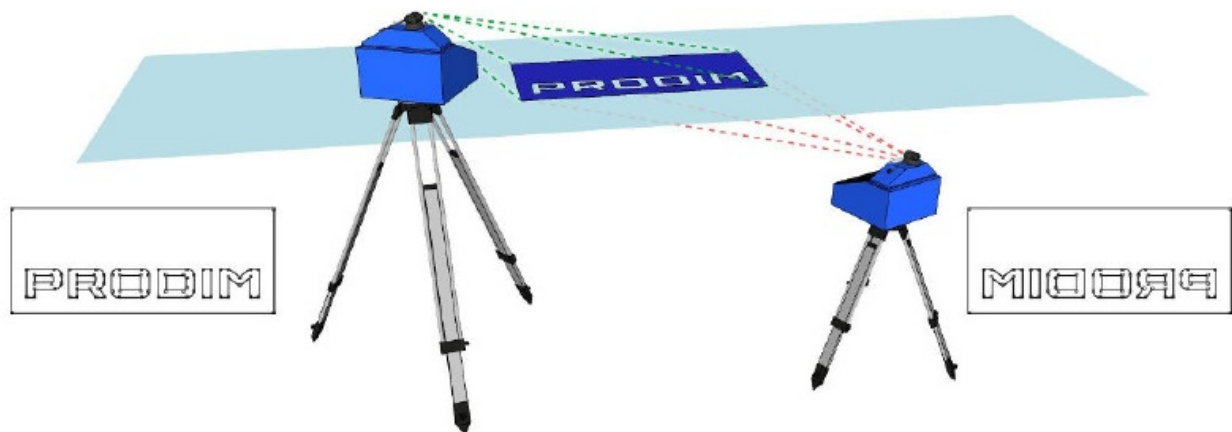


[Watch the video](#)




**Leap function**

The Proliner leap function has been developed to give users an unlimited reach for measuring large objects and surfaces as well as for measurements that cannot be done from a single Proliner position. Special leap-pods are used to serve as reference points and to be able to connect measurements.

Start the first part of your measurement. When done, you can place the four leap-pods and start the leap. The Proliner will ask you to capture the position of the four pods.

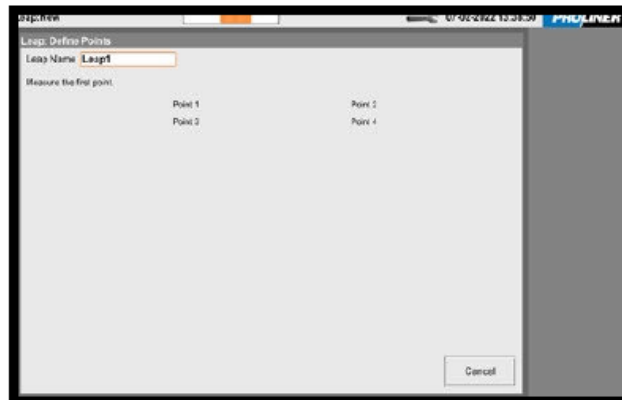


After the 4 pods have been registered, you can move the Proliner to its new position. At the new position, the Proliner will ask you to capture the position of the pods again to accurately determine its own new position.

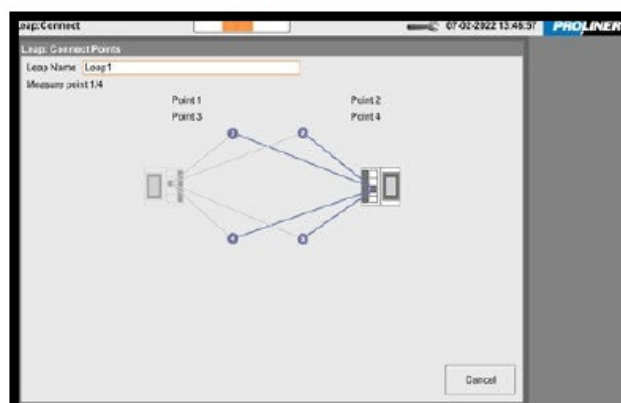

You can now continue with the measurement. These steps can be repeated as often as necessary. There is no limit to the number of times you can leap.

**Ensure that the pods are placed in a stable position and that:**

1. Pods are not placed close to each other;
2. Pods are not placed in a single line;
3. Pods are not placed in a symmetrical shape.

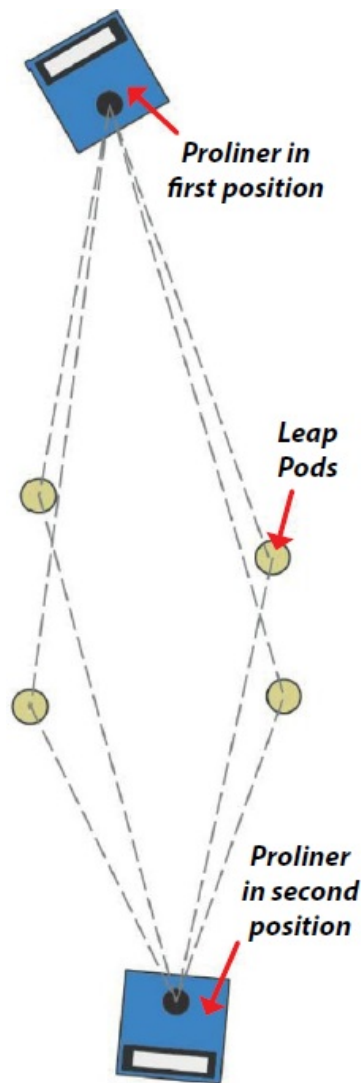

TIP: Markings instead of pods! If it is not possible to place pods (on a wall for example) you can make your own markings used in combination with the leap-function.

TIP: Also check our Proliner IPT! The solution for measuring hard-to-reach spots.

[Watch the video](#)



## Measuring in 5 steps

Now that the basics are explained, measurement can begin. We take a kitchen countertop to serve as an example:

## 1. STEP 1 – POSITIONING

Ensure that the Proliner is placed in a fixed and stable position and all measuring points can be reached.

## 2. STEP 2 – PROJECTION PLANE

Determine the projection plane by measuring three or more points.

## 3. STEP 3 – MEASURE THE OUTSIDE CONTOUR

Measure the wall and the outer rim of the kitchen block. Measure the situation outside the countertop to determine how far the countertop can stick out. Measure the front of the kitchen block and measure the kitchen block supports for the countertop, not the doors.

## 4. STEP 4 – MEASURE THE INNER CONTOUR

Measure cabinets, cut-outs, sinks, taps and all other data required.



## 5. STEP 5 – THE FILE

Edit the drawing, make notes and export your measurement as DXF.





[Watch the video](#)



ATTENTION! If you measure with compensation, do not measure too tight. Think about the margin you need for installation.

TIP: Expand the Proliner with CT Software! This special kitchen top solution offers many additional functionalities. 10. Proliner CT

Proliner CT software provides additional functionalities for finishing digital templates of countertops and backsplashes on-site and preparing them for production. These are the main functionalities:

#### 1. Edit digital templates on-site

Extra (CAD) features to easily edit Proliner measurements, such as:

- Automatically offset lines with custom offset
- Easily draw lines, straight and rounded shapes
- Add linear, horizontal, vertical, radial and angle dimensions
- Placing cutting lines
- The ability to add notes

#### 2. Ready for CNC – Instant tangential

Proliner CT automatically creates fluent lines between measured points; various “radii” are made between the measured points to prepare the digital templates for quick processing by a CNC.

#### 3. Add cut-outs, sinks, production profiles and materials from a library

Import DXF-files (measured with the Proliner) to separate Proliner CT libraries for: cut-



outs, sinks, production profiles and materials. These objects can then be selected and added directly to the digital templates.

4. Create elements and add them to a virtual slab

Create a selection within digital templates and save it to create an element. Elements can be placed in a dimensioned work sheet (virtual slab) so that the amount of required material can be determined.

5. Add detailed project information

Create projects and add detailed project information. Add notes and briefings to digital template to describe how they should be interpreted and processed.

6. Get an on-site agreement from the customer

Allow the customer to check the digital template and project information on-site and let him sign for approval directly on the Proliner.

7. Export drawings and reports for the customer and production

Create complete reports (with your own company logo) that can be customized for the customer or production. Send a report with a drawing overview and project data to the customers and expand it with detailed drawings of elements and instructions to be used for production. Files can be exported as DXF and PDF.



\* Proliner CT is an addition to the standard integrated Proliner software and an optional purchase.

## Maintenance

### General care

We advise to regularly clean the Proliner and to keep it dust free, also in storage.

If possible, make use of the official Proliner backpack and / or flight case.

The measuring wire should also be cleaned on a regular basis (weekly) using the supplied dust-free cloth. Do not use lubricants, detergents or chemicals!



- Always start a measurement first before cleaning the wire.
- This ensures that you hear the signal alarm when the wire is stretched out too far.
- We advise to clean the entire wire with two persons.
- One person takes the measuring pen and stretches the wire until the alarm starts to beep at the end of the wire. The other person cleans the wire with the cloth.
- If you are alone and you still want to clean the entire wire, make sure that the wire is lying on a clean surface and cannot get entangled. Never let go of the wire!

For questions, feedback or support, please contact Prodim.

Check our website for more information: [www.prodim-systems.com](http://www.prodim-systems.com)

Watch the video




Manual by Prodim International 2025

The manual might discuss or show content that is not available for your particular Proliner configuration. The content of this manual may change without notice. Any submission regarding this content can be send to [helpdesk@prodim-systems.com](mailto:helpdesk@prodim-systems.com)

Prodim International BV – Phone: +31 492 579050 Lagedijk 26, 5705 BZ Helmond, The Netherlands  
Prodim USA – Phone: +1 772 465 4000 7454 Commercial Cir. Fort Pierce, FL 3495, USA

# Documents / Resources

	<a href="#">PRODIM Portable 2D Coordinate Measuring Machines [pdf]</a> User Guide Portable 2D Coordinate Measuring Machines, 2D Coordinate Measuring Machines, Coordinate Measuring Machines, Measuring Machines, Machines
---	---

## References

- [User Manual](#)

■ PRODIM

◆ 2D Coordinate Measuring Machines, Coordinate Measuring Machines, Machines, Measuring Machines, Portable 2D  
Coordinate Measuring Machines, PRODIM

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

## Search:

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.