PROGRESS LIGHTING P400374 6LT Linear Island Instruction Manual




- 1.1 PACKAGE CONTENTS
- 1.2 HARDWARE CONTENTS (not actual size)
- 1.3 Safety Information
- 1.4 Preparation
- 1.5 Care and Maintenance
- 1.6 Assembly Instructions
- 2 Documents / Resources
 - 2.1 References
- **3 Related Posts**


P400374 **6-LT LINEAR ISLAND**

PACKAGE CONTENTS

| PART | DESCRIPTION | QUANTITY |
|------|-------------------|----------|
| А | Fixture | 1 |
| В | Glass Shade | 6 |
| С | Socket Cover | 6 |
| D | Black Socket Ring | 6 |
| E | Canopy | 1 |
| F | Cover | 2 |

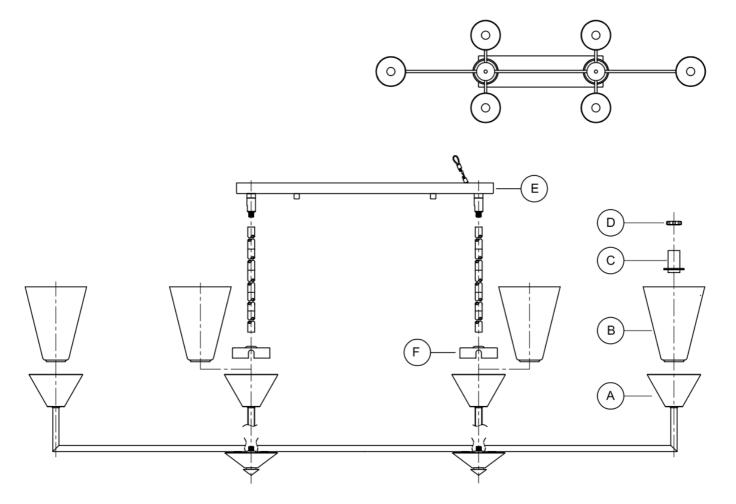

HARDWARE CONTENTS (not actual size)

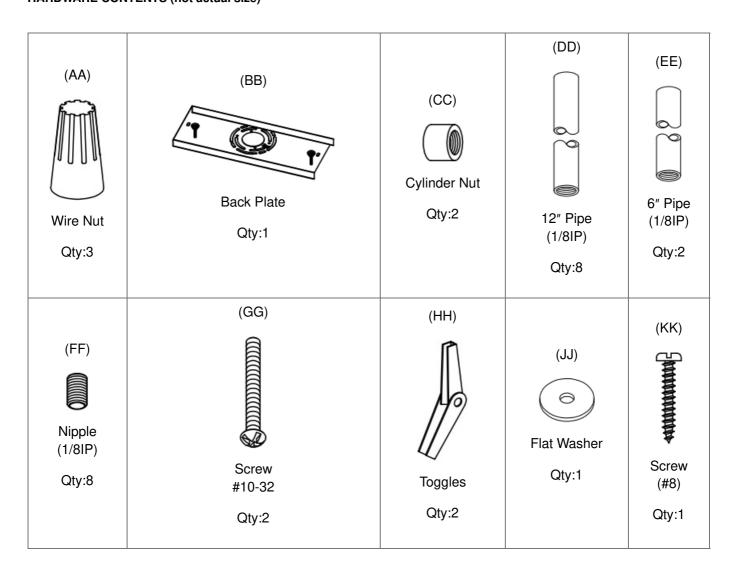



We can assist you with questions regarding product information, assembly or missing parts







Please read and understand this entire manual before attempting to assemble, operate or install the product.

CAUTION: Read instructions carefully and turn electricity off at main circuit breaker panel before beginning installation.

CAUTION: Risk of fire. Min. 90°C supply conductors. Consult a qualified electrician to ensure correct branch circuit conductor.

WARNING: If any Special Control Devices are used with this fixture, follow instructions carefully to assure full compliance with N.E.C. requirements. If there are any questions, contact a qualified electrical contractor.


CAUTION: All glass is fragile. Use care when handling glass shades and bulbs.

Preparation

- 1. Before beginning installation, make sure all parts are included using the contents diagrams from page 1. If any part is missing or damaged, do not attempt to assemble, install or operate the product.
- 2. Estimated assembly time: 30 minutes.
- 3. Tools required for assembly (not included): Phillips screwdriver, pliers, wire stripper, safety glasses, electrical tape, ladder.


Care and Maintenance

Shut off main power supply before cleaning product or changing light bulbs. To clean, wipe with damp cloth. Do not use abrasive cleaners or cleaners that contain alcohol.

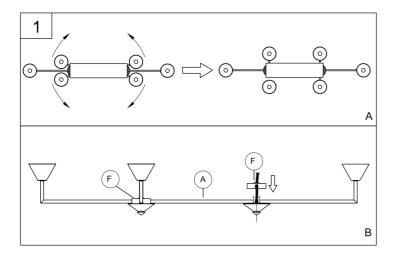

1. Equally adjust the arms by carefully turning them out from the center. Next pass the wire through the two covers (F). Attach two covers (F) to fixture (A).

WARRANTY AND EXCLUSIVE REMEDY: Progress products, when properly installed and under normal conditions of use, are warranted to our customers only to be free from defects in material and workmanship at time of shipment. All warranty claims must be asserted within one year from date of purchase of the subject items; thereafter, warranty claims will not be honored. Customers' sole remedy for a warranty claim or otherwise shall be limited to repair or replacement of the subject product if it is shown to have been defective in material or workmanship at time of shipment. Progress's sole and maximum liability for a defective product shall never exceed the cost of the subject product. EXCEPT FOR SUCH A WARRANTY AND EXCLUSIVE REMEDY AS STATED (AND THE EXPRESS WARRANTY OF TITLE), WE DISCLAIM ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, AND SPECIFICALLY DISCLAIM THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL WE BE LIABLE TO CUSTOMER IN WARRANTY, CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHERWISE, FOR ANY DAMAGES, WHETHER INCIDENTAL OR CONSEQUENTIAL WHICH ARE ALLEGED TO BE CAUSED BY ONE OR MORE OF OUR PRODUCTS, BEYOND THE COST TO THE CUSTOMER OF THE SUBJECT PRODUCT **OR PRODUCTS.** Therefore, the customer's sole and exclusive remedy against us for breach of the warranty, breach of contract or negligence or strict liability or otherwise shall be limited to repair or replacement of the subject product at our option (excluding installation and removal charges which shall not be our liability) or, if we choose, refund of the purchase price. In no case does our warranty and exclusive remedy extend to anybody other than our customers. Our customers are not authorized to extend warranties or remedies on our behalf to anyone. Such unauthorized extensions of warranties or remedies by the customer shall remain customer's responsibility. Customer is responsible for determining the suitability of our products for customer's use or resale, or for incorporating them into objects or for applications which customer designs, assembles, constructs or manufactures.

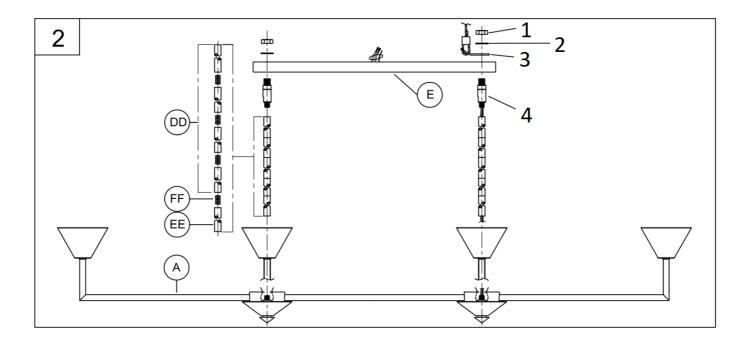


- 1. Hex nut
- 2. Lock washer
- 3. Safety cable
- 4. 90° Swivel

NOTE: During this step, determine the hanging length of your fixture by adding or removing pipes. The electrical and ground wire may also optionally be cut to length. Remove the swivels if they are already assembled to the canopy. You will re-assemble them onto the top of the last pipe before wiring has been passed through during this step.

Align them so they will swivel in the same direction.


<u>Do NOT cut electrical or ground wires until this length is determined.</u> Leave AT LEAST 6 inches MINIMUM of wire past the canopy (D) to allow for easy connections in step 5.

2. Determine the hanging height of the fixture and number of pipes (EE) / (DD) needed for each side of the fixture at this time. Ensure that you have equal length pipes on each side. Pass the wires through the pipes (EE) / (DD), nipples (FF) and 90° swivels as shown on the diagram. Tighten the remaining pipes and 90° swivels to the assembly as you go to avoid twisting the wires. Now re-install the fixture back onto the canopy (E), re-using the lock washers and hex nuts. Also re-install the safety cable under one of the lock washers. Tighten the hex nuts, making sure the swivels are aligned to swivel in the same direction.

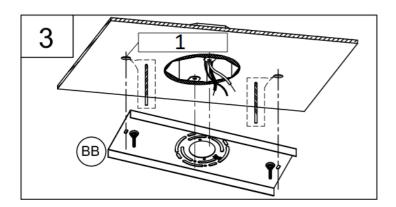

- 1. ø1/2" DRILL HOLES
- 3. Line up the back plate (BB) with the outlet box. Use a pencil to mark the locations of the two mounting holes.

Remove the back plate (BB) from the ceiling. Drill (2) Ø1/2" mounting holes in the ceiling for the step 6.

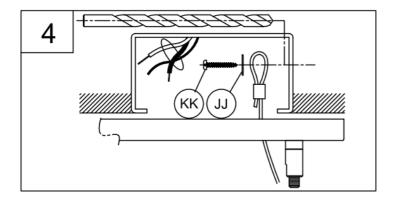


4. You now need to attach the fixture support cable. Start by passing the cable up through the middle opening in the back plate (BB).

This cable will aid you in supporting the fixture during the wiring connection in step 5. You will need a helper to help hold up the fixture during this step.

Make sure the supply wire is out of the way from the drill for this step.


Use a #29 drill (Ø.136) or (3.5mm) bit to create a mounting hole in the side of the junction box.

Next, using the self threaded screw (KK) and flat washer (JJ) provided, secure the support cable into the hole you just drilled in the junction box. Tighten securely.

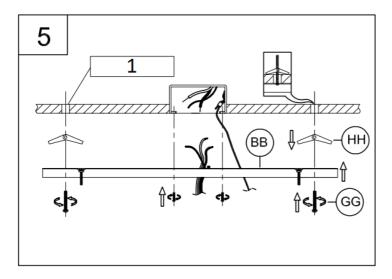

1. ø1/2" DRILL HOLES


5. Loosely thread the screws (GG) and the toggles (HH) onto the back plate (BB). Line up the holes in the back plate (BB) with the drilled holes, press toggles (HH) into the mounting holes drilled and use screws (GG) securing tightly. Then use the mounting screws supplied with the outlet box (not included) to secure the back plate (BB) to the outlet box.

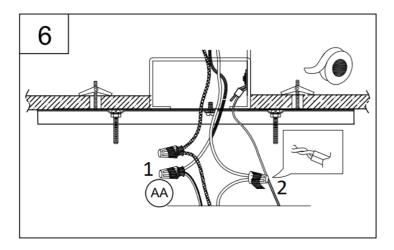

- 1. Ribbed
- 2. Smooth
- 6. Strip 3/8" of insulation from the electrical wire ends. Using wire nuts (AA), connect RIBBED fixture wire to the WHITE supply wire from the outlet box; connect the SMOOTH fixture wire to the BLACK supply wire.


Connect the fixture ground wire and supply ground wire using a wire nut or by fastening to the ground screw on the round mounting plate. Push all wire connections into the outlet box.

7. Pass the screws through the two holes in the canopy (E). Secure the canopy (E) to the screws using the two cylinder nuts (CC) provided. Tighten securely in place.

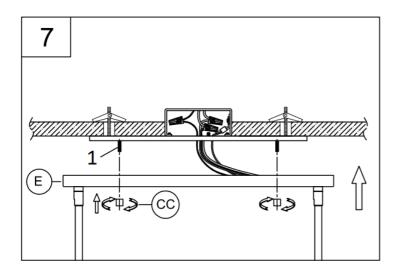

- 1. Screw
- 8. Attach the glass shades (B) to the fixture (A). Use the socket covers (C) and the black socket rings (D) to secure modestly tight.


Thread the lamps (not included) into the fixture sockets. Use 60-watt MAX incandescent candelabra base lamp, SBCFL or SBLED.

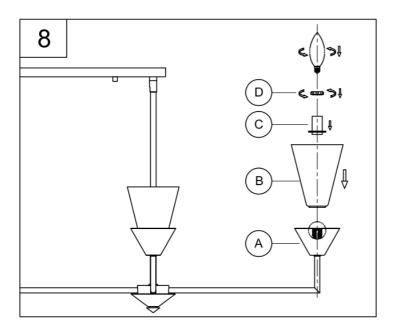

93166117

SPEC.NO. 93166117 07/25/23

Documents / Resources

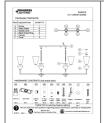

PROGRESS LIGHTING P400374 6LT Linear Island [pdf] Instruction Manual P400374 6LT Linear Island, P400374, 6LT Linear Island, Linear Island

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.