



Home » PROJECT SOURCE » PROJECT SOURCE NZ-1010BN Fixed Post Strainer Basket User Guide ♥

Contents [hide]

- 1 PROJECT SOURCE NZ-1010BN Fixed Post Strainer Basket
- 2 Specifications
- 3 Technical Details
- **4 PRODUCT DESCRIPTION**
- 5 Product Usage Instructions
- 6 FAQs
- 7 Documents / Resources
 - 7.1 References



PROJECT SOURCE NZ-1010BN Fixed Post Strainer Basket



Specifications

• Item Numbers: 5256829, 5256822

• Models: NZ-1010BN, NZ-1001

• Type: Fixed Post Strainer Basket

Technical Details

Brand	PROJECT SOURCE		
Color	Stainless steel, Chrome		
Material	Stainless Steel		
Finish Type	chrome		
Special Feature	Removable		
Style	Modern		
Manufacturer	1st Choice		
UPC	728943619324		


Part Number	FBA_3925577		
Item Weight	1.44 ounces		
Package Dimensions	3.27 x 3.15 x 2.68 inches		
Country of Origin	China		
Item model number	FBA_3925577		
Is Discontinued By Manufacturer	No		
Finish	chrome		
Item Package Quantity	1		
Special Features	Removable		
Batteries Included?	No		
Batteries Required?	No		


PRODUCT DESCRIPTION

- Kitchen Basket Strainer and Stopper combo effectively catches food, waste, and scraps from going down the drain and clogging up the plumbing in the kitchen. Use a Stopper to fill the sink with water for washing and soaking. 32 holes on the basket for smooth and fast drainage.
- Kitchen Sink Strainer and Stopper Combo Basket Replacement fits most standard 3-1/2 inch kitchen sink drains in the USA – Note: please double-check the size/diameter of sink drain before purchasing the product.
- Easy post style sink strainer/basket with a simple push and pull installation and operation; The strainer requires a narrow rectangular center hole style sink for installation.
- Durable and corrosion-resistant for long-term usage; Built to last material with stainless steel and plated chrome, high-quality plastic knob
- Simple and non-obstructive design to pair with any style of sink. Stain-free and easy cleaning by removing the basket to empty with a grip attached on the center; The sink

Product Usage Instructions

- 1. Place the basket in the strainer.
- 2. Firmly push down until the center post securely locks in place.

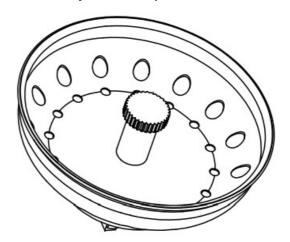

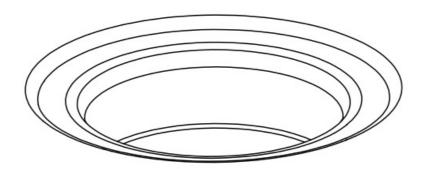

Ensure that the center post is fully secured before using the strainer basket.

Contact Information

If you have any questions, problems, or missing parts, please contact us:

Phone: 866-439-9800 (8 a.m. – 8 p.m. EST, Monday – Sunday)

Email: ascs@lowes.com

PROJECT SOURCE and logo design are trademarks or registered trademarks of LF, LLC. All rights reserved.

FAQs

Q: How do I clean the strainer basket?

A: To clean the strainer basket, remove it from the sink and wash it with warm, soapy

water. Rinse thoroughly and dry before using it again.

Q: Can the strainer basket be used in a dishwasher?

A: It is recommended to hand wash the strainer basket topreserve its quality and functionality.

Documents / Resources



PROJECT SOURCE NZ-1010BN Fixed Post Strainer Basket [pdf] User G uide

NZ-1010BN, NZ-1001, NZ-1010BN Fixed Post Strainer Basket, NZ-1010B N, Fixed Post Strainer Basket, Strainer Basket, Basket

References

- User Manual
- PROJECT

SOURCE

Email

▶ Basket, Fixed Post Strainer Basket, NZ-1001, NZ-1010BN, NZ-1010BN Fixed Post Strainer Basket, PROJECT SOURCE, Strainer Basket

Leave a comment

Your email address will not be published. Required fields are marked*					
Comment *					
Name					

Website		

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.

Search