

PROKORD PW-400E-90FS Adjustable Cart for Displays **Instruction Manual**

Home » PROKORD » PROKORD PW-400E-90FS Adjustable Cart for Displays Instruction Manual



Contents

- 1 PROKORD PW-400E-90FS Adjustable Cart for
- **2 INSTRUCTIONS OF SAFETY AND WARNINGS**
- 3 Hardware
- **4 Assembling Instruction**
- 5 Documents / Resources
 - **5.1 References**



PROKORD PW-400E-90FS Adjustable Cart for Displays



IMPORTANT


Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty.

INSTRUCTIONS OF SAFETY AND WARNINGS


- Make sure that the mounting surface is strong enough to handle a mounted product and equipment.
- DO NOT EXCEED THE MAXIMUM LISTED WEIGHT CAPACITY.
- Always use an assistant or a mechanical lifting device to safely lift and position heavy products.
- Tighten screws firmly, but do not over tighten. Over tightening can cause product damage that greatly reduces the holding power.
- Keep a clear area and distance from moving parts when using the product.
- Use only as intended. Never stand, hang or climb on the product.
- This product is intended for indoor use only.
- Any attempts to reconstruct the construction aren't allowed.
- This product may contain small items that could be a choking hazard if swallowed. Keep children away unless
 the product is intended for their use and all instructions and manuals are fully reviewed and understood by
 them.
- Check that the product is secure and safe to use at regular intervals (at least every three months).


Should you ever have any questions or feel you require help please contact your place of purchase for assistance.


Hardware

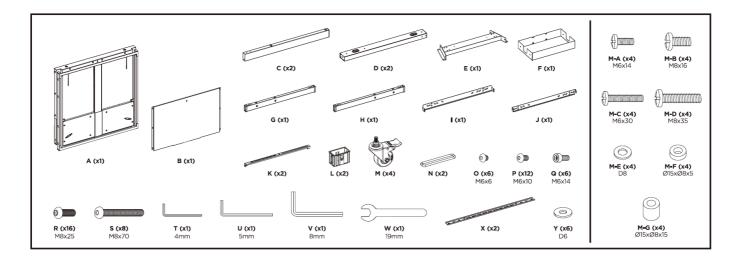



Assembling Instruction

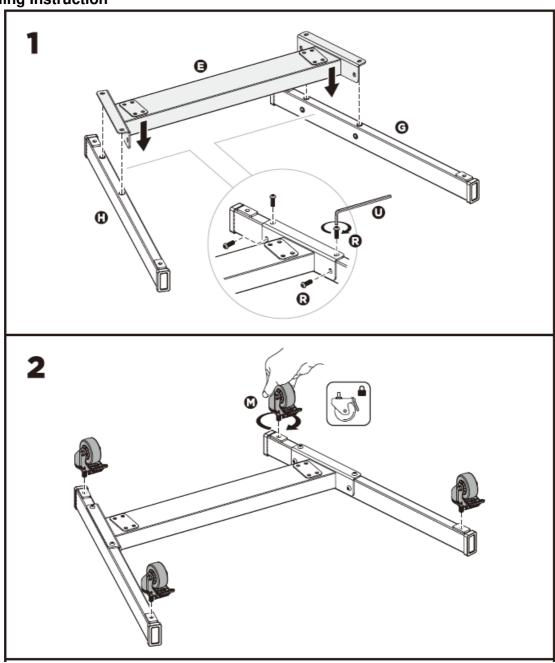


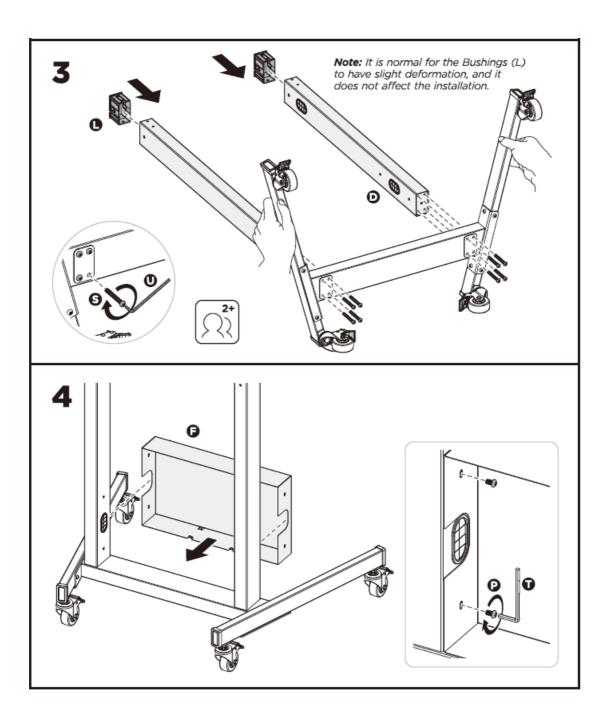


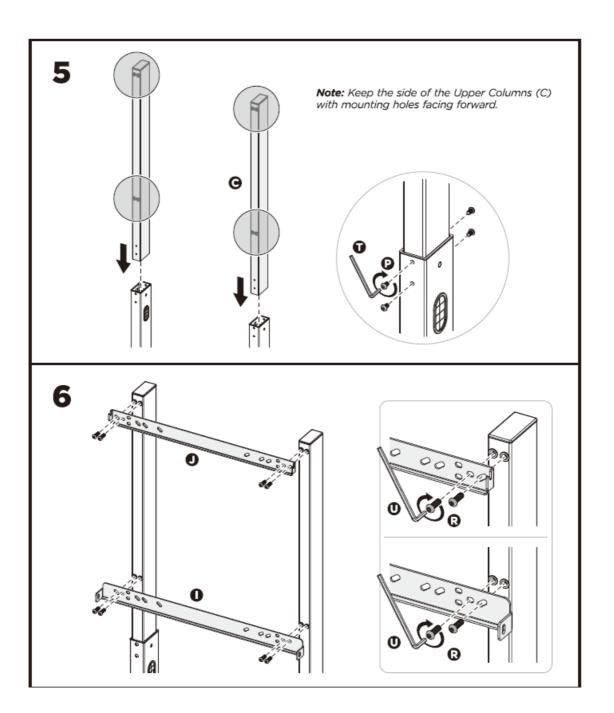


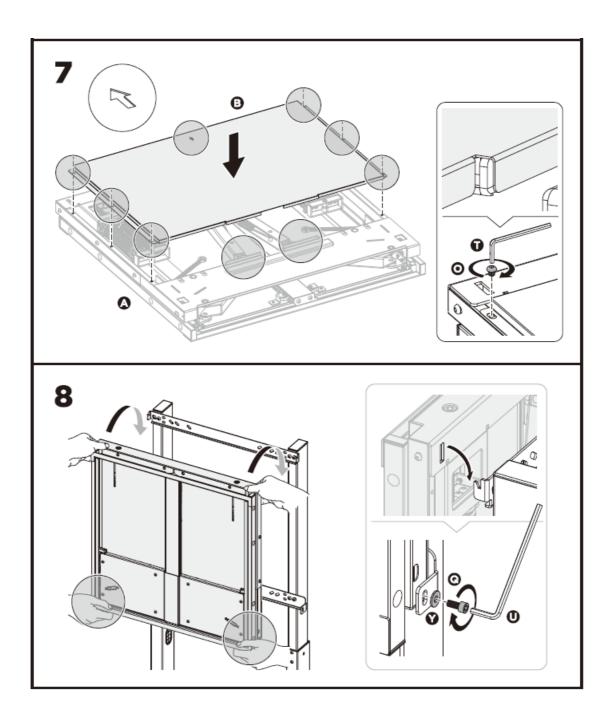

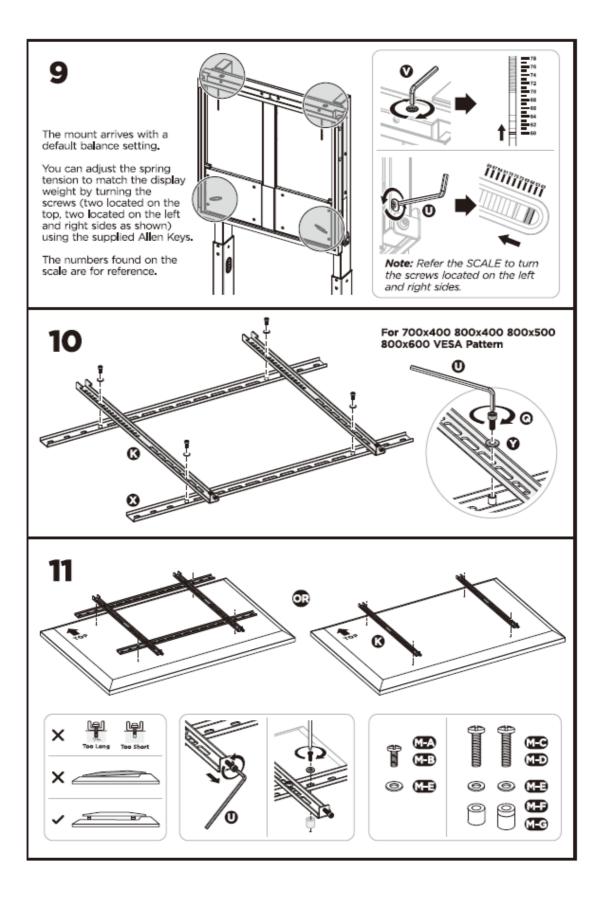

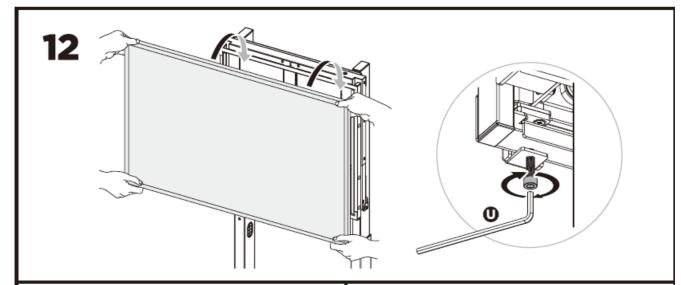

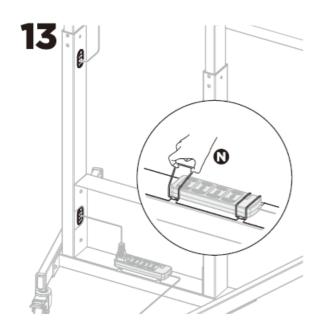

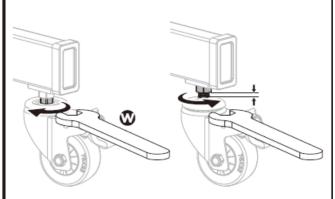


Note: If the caster can't touch the ground, loosen the lower nut as shown to adjust the caster to proper position, then tighten the upper nut.

To achieve a perfect balance with display mounted, adjust the spring tension as follows:

Middle Section of Movement

If it is difficult to pull down the display and it can't stay at the desired position when raised, turn the two screws located on the top in the "-" direction. Otherwise, turn them in the "+" direction.


Note: Adjust both screws the same amount of turns.

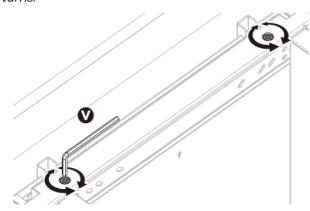

Upper & Lower Sections of Movement

If it is difficult to pull down the display during the upper section of movement and it can't stay at the desired position when lowered during the lower section of movement, turn the two screws located on the left and right sides in the "-" direction. Otherwise, turn them in the "+" direction.

Note: Adjust both screws the same amount of turns.

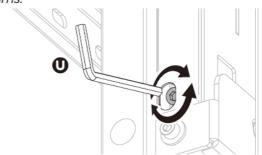

Documents / Resources



PROKORD PW-400E-90FS Adjustable Cart for Displays [pdf] Instruction Manual 400E-90FS, HAW400E-90FS, PW-400E-90FS Adjustable Cart for Displays, PW-400E-90FS, Adjustable Cart for Displays, Cart for Displays, for Displays

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.