

# prolink PCWM-7005 Wireless multimedia desktop combo User Guide

Home » PROLINK » prolink PCWM-7005 Wireless multimedia desktop combo User Guide 🖺



### **Contents**

- 1 prolink PCWM-7005 Wireless multimedia desktop combo
- 2 Package Contents
- 3 Overview
- 4 Using the Device
- 5 Documents / Resources
- **6 Related Posts**



# prolink PCWM-7005 Wireless multimedia desktop combo



# **Package Contents**











#### Overview




# **Using the Device**

The wireless keyboard and mouse are paired to work as a complete set with the receiver. User can use the product right away with the following steps:

- 1. Insert the receiver into the USB port of computer
- 2. Insert batteries into the battery compartment of both keyboard and mouse
- 3. The computer will detect and setup the device automatically
- 4. Upon completion, the keyboard and mouse can be used
- 5. If no response either from the mouse or keyboard, please eject the receiver and insert to another USB port of the computer or replace a new set of batteries

## Install battery and remove USB receiver

- · Remove the battery compartment cover
- Take out the USB receiver from mouse
- Insert the included AAA battery into the battery compartment. Make sure the battery orientation matches the "+" and "-" symbols in the compartment
- Replace the battery compartment cover back to its original position

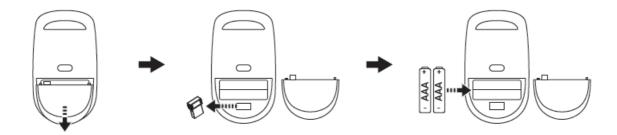

## Note:

- · Store the USB receiver in the mouse when it is not in use
- Plastic cover / paper strip (if any) needs to be removed for completing the circuit

# **Sleep Mode**

The combo will go into Standby Mode after 60 seconds and Sleep Mode after 8 minutes of inactivity to conserve

battery power. Click on any key on the keyboard and mouse to exit from Sleep Mode

#### **DPI** switch button

The resolution of the mouse can be switched between 800DPI / 1200DPI (default) / 1600DPI with the DPI switch button

#### **Multimedia Shortcuts**

14 Multimedia shortcuts provide instant access to multimedia control

	My Computer	$\star$	Favourite	<b>+</b>	Volume +	<b>&gt;&gt;</b>	Next Track
ħ	Home		Calculator	×	Mute		Stop
	Mail	IJ	Media	▶/■	Play/Pause		
Q	Search	<b>-</b>	Volume -	<b>H</b>	Previous Track		

### **Power Key**

Turns off the computer w



ith just one key

# **User Advice / Maintenance**

- · Avoid contact with strong medicated hand creams/sanitisers whilst using the mouse and keyboard
- Do not immerse any part of this product in water or other liquid
- Do not spray liquid on this product or allow excess liquid to drip inside
- Disconnect this product before cleaning

### **MALAYSIA Office**

FIDA SYSTEMS (M) SDN BHD Walk-In: 29 Jalan USJ 1/31, 47600 Subang Jaya, Selangor Darul Ehsan,

Malaysia.

**Telephone:** +60 3 8024 9151

Email Support : <a href="mailto:support.my@prolink2u.com">support.my@prolink2u.com</a>

**SINGAPORE Office** 

FIDA INTERNATIONAL (S) PTE LTD Walk-In: Block 16 Kallang Place #06-02,

Kallang Basin Industrial Estate, Singapore 339156.

Telephone: +65 6357 0668

Email Support : support@prolink2u.com

# **Technical Support Hotline**

INDONESIA: +62 21 3483 1717
MALAYSIA: +60 3 8023 9151
SINGAPORE: +65 6357 0666

Note: Closed on Saturdays, Sundays and local/regional Public Holidays

Prolink is a registered trademark of Fida International (S) Pte Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders. Product images are purely for illustrative purposes and may defer from the actual product. Specifications are subjected to changes without prior notice. Copyright © 2021 Fida International (S) Pte Ltd.

#### **Documents / Resources**



prolink PCWM-7005 Wireless multimedia desktop combo. [pdf] User Guide PCWM-7005 Wireless multimedia desktop combo, PCWM-7005, Wireless multimedia desktop combo, multimedia desktop combo, combo

Manuals+,