



PROSCAN PSP1067 TWS Transparent LED Light Up Bluetooth Speaker Instruction Manual

[Home](#) » [ProScan](#) » PROSCAN PSP1067 TWS Transparent LED Light Up Bluetooth Speaker Instruction Manual



PROSCAN PSP1067 TWS Transparent LED Light Up Bluetooth Speaker



Contents

- 1 Safety Instructions
- 2 Content
- 3 Instruction
- 4 Instructions (How to use the wireless mode)
- 5 Instructions (How to use the TF-card mode)
- 6 Instructions (How to change the LED mode)
- 7 Instructions (How to use the FM Radio mode)
- 8 Instructions (How to use the TWS Pairing)
- 9 Instructions (How to charge the speaker)
- 10 Specifications
- 11 90 day Warranty
- 12 Customer Support
- 13 Documents / Resources
 - 13.1 References

Safety Instructions

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids
- Do not use the unit if it has been dropped or damaged in anyway.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not put objects into any of the openings. Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
Keep the unit out of reach of children
- This product is not a toy
- Do not use abrasive cleaning solvents to clean
- To minimize the risk of fire or electrical shock, avoid operating in wet conditions such as rain or humidity
- Do not operate around water (e.g. bathroom, swimming pool etc.)
- Do not expose to excessive heat such as sunshine, fire etc
- Never immerse the unit in water or any other liquid for cleaning purposes


Content

Bluetooth Speaker USB TYPE-C Charging Cable AUX in Audio Cable Instruction Manual

Instruction

1. On/off button & Pause / Play button
2. **Short press:** To Play Previous Song
Long press: To Decreasing Volume
3. **Short press:** To Play Next Song
Long press: To Increase Volume
4. Mode Button
(Bluetooth/FM Radio Mode/TF Card/ LED changing mode)
5. AUX IN Port

6. TF card slot
7. USB Charging Port

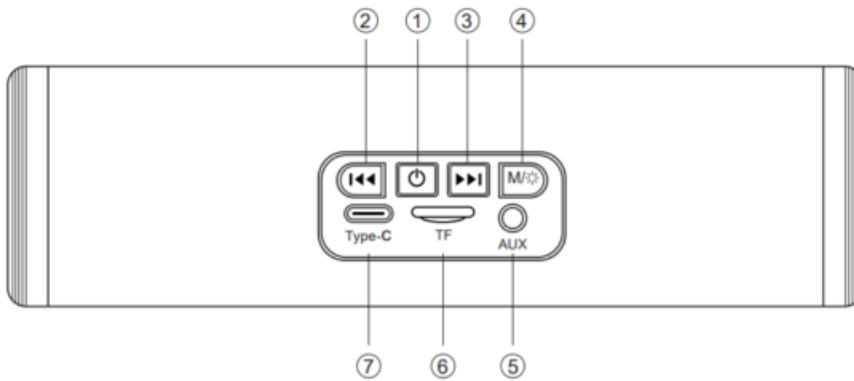

Instructions (How to use the wireless mode)

- Turn on the speaker by pressing and hold the on/off button (1), the bluetooth mode will be on automatically
- Press and hold the “M” button (4) to browse through the mode options
- Stop pressing the” M ” button when hearing the command “bluetooth mode”
- Turn on the Bluetooth menu on your wireless device (phone, tablet, laptop, i.e.) and select ” Pro PSP1067 “
- Pair the device
- Play music

Instructions (How to use the TF-card mode)

- Turn on the speaker by pressing and hold the on/off button (1)
- Insert the TF-card into the TF card slot (6)and the music will start playing automatically

Instructions (How to use the AUX IN mode)

- Turn on the speaker by pressing and hold the on/off button (1)
- Insert one of the 3.5mm jack into the 3.5mm Aux in slot (5) and insert another one into your device.
- Play music

Instructions (How to change the LED mode)

- Turn on the speaker by pressing and hold the on/off button (1)
- Short press the M button to change any LED mode you want

Instructions (How to use the FM Radio mode)

- Turn on the speaker by pressing the on/off button (1)
- Insert the 3.5mm Aux cable into the 3.5mm Aux in slot (5) to work as an antenna.
- Press and hold the “M” button (4) to browse through the mode options, Stop pressing the” M” button when hearing the command “FM Mode”
- Press the Play/Pause button (1) to scan the FM channels. The speaker will now search for channels, this might take few minutes. When the search is finished the speaker will stay on a channel. Short press the button (3) and button (2) to change the channel.

Instructions (How to use the TWS Pairing)

- Make sure both speakers are “ON” and not paired with any Bluetooth device.
- Double press the button (3) on any one speaker, an indication tone would be heard. After few seconds, another indication tone would be heard if they pair together automatically.
- Turn on the Bluetooth menu on your wireless device (phone, tablet, laptop, i.e.) and select ” Pro PSP1067”
- Pair the device
- Play music

Note: On any one of the speaker, double press the button 3 and this would unpair the speakers from TWS.

Instructions (How to charge the speaker)

- Insert the USB TYPE-C cable into the micro charging port (9)
- Insert the USB-A side into a 5V USB charger or other power source
- During the charging process, a red indicator light will remain on, and the light will be off when fully charged.

Specifications

Attention/ Danger !

Too avoid hearing damage, limit the time you use this sound source at high volume and set the volume to a safe level. Prolonged exposure to high volumes can cause hearing damage.

Precautions:

- Only charge the speaker with a 5V/1A charger.
- Handle with care and avoid falling on the ground.
- Don't place heavy objects on the item.
- Children should be supervised while operating the item.
- Working temperature is between 0°C-30°C.
- Don't use the speakers with wet hands To make a warranty claim, please email support2@curtiscs.com or call 1-[800-968-9853](tel:800-968-9853).

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

To make a warranty claim, please email support2@curtiscs.com or call 1-[800-968-9853](tel:800-968-9853).

90 day Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

ATTACH YOUR PROOF OF PURCHASE HERE, PROOF OF PURCHASE IS REQUIRED TO OBTAIN WARRANTY SERVICE. Please have the following information available when you contact the Support Team:

- Name, address and telephone number.
- Model number and serial number.
- A clear, detailed description of the problem.
- Proof of purchase including dealer or retailer name, address and date of purchase.

Customer Support

For service assistance and product information please call: 1-[800-968-9853](tel:800-968-9853).

Curtis International Ltd.


www.curtisint.com

7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3

This pictures is only provided for reference Please refer to the actual unit!
PROSCAN, and the PROSCAN logo are trademarks used under license by
CURTIS INTERNATIONAL LTD. – www.proscan-brand.com.

PROSCAN

Documents / Resources

	<p>PROSCAN PSP1067 TWS Transparent LED Light Up Bluetooth Speaker [pdf] Instruction M anual PSP1067 TWS Transparent LED Light Up Bluetooth Speaker, PSP1067, TWS Transparent LED Light Up Bluetooth Speaker, LED Light Up Bluetooth Speaker, Bluetooth Speaker</p>
---	--

References

- [Tiscs.com is for sale | HugeDomains](#)
- [Curtis International - Affordable TVs, electronics and appliances](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.