



PLX51 DL 232 ProSoft Connect Data Logger User Guide

[Home](#) » [ProSoft](#) » PLX51 DL 232 ProSoft Connect Data Logger User Guide 



PLX51-DL-232 Quick Start Guide

Contents

- [1 PLX51 DL 232 ProSoft Connect Data Logger](#)
- [2 North American Hazardous Location Approval](#)
- [3 Required Software](#)
- [4 Module Installation](#)
- [5 Ethernet Network Setup](#)
- [6 Support, Service, and Warranty](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

PLX51 DL 232 ProSoft Connect Data Logger

Note: Before installing, configuring, operating, or maintaining ProSoft Technology products, please review this information and the information located on www.prosoft-technology.com for the latest software, documentation, and installation files specific to your ProSoft Technology product. Installation and maintenance of your ProSoft Technology product(s) should be carried out by suitably trained personnel in accordance with applicable codes of practice. In case of malfunction or damage, no attempts of repair should be made. Your ProSoft Technology product(s) should be returned to the manufacturer for repair. Do not dismantle the product.



For professional users in the European Union

If you wish to discard electrical and electronic equipment (EEE), please contact your dealer or supplier for further information.



WARNING Cancer and reproductive harm www.p65warnings.ca.gov

Your Feedback Please

We always want you to feel that you made the right decision to use our products. If you have suggestions, comments, compliments or complaints about our products, documentation, or support, please write or call us.

ProSoft Technology, Inc.

+1 (661) 716-5100

+1 (661) 716-5101 (Fax)

www.prosoft-technology.com

support@prosoft-technology.com

ProSoft Technology®, is a registered copyright of ProSoft Technology, Inc. All other brand or product names are or may be trademarks of, and are used to identify products and services of, their respective owners.

Documentation is subject to change without notice.

North American Hazardous Location Approval

The following information applies when operating the product in hazardous locations:

-20°C to +70°C; T5

Class 1 Div 2 Gps A, B, C, D

THIS EQUIPMENT IS AN OPEN-TYPE DEVICE AND IS MEANT TO BE INSTALLED IN AN ENCLOSURE SUITABLE FOR THE ENVIRONMENT SUCH THAT THE EQUIPMENT IS ONLY ACCESSIBLE WITH THE USE OF A TOOL.


SUITABLE FOR USE IN CLASS I, DIVISION 2, GROUPS A, B, C AND D HAZARDOUS LOCATIONS, OR NONHAZARDOUS LOCATIONS ONLY.

Required Software

The PLX51-DL-232 requires the ProSoft PLX50 Configuration Utility to set up and configure. The software installation can be found at: www.prosoft-technology.com

Module Installation

The PLX51-DL-232 requires input power of 10 to 28 VDC. It communicates on both Ethernet and RS232 serial.

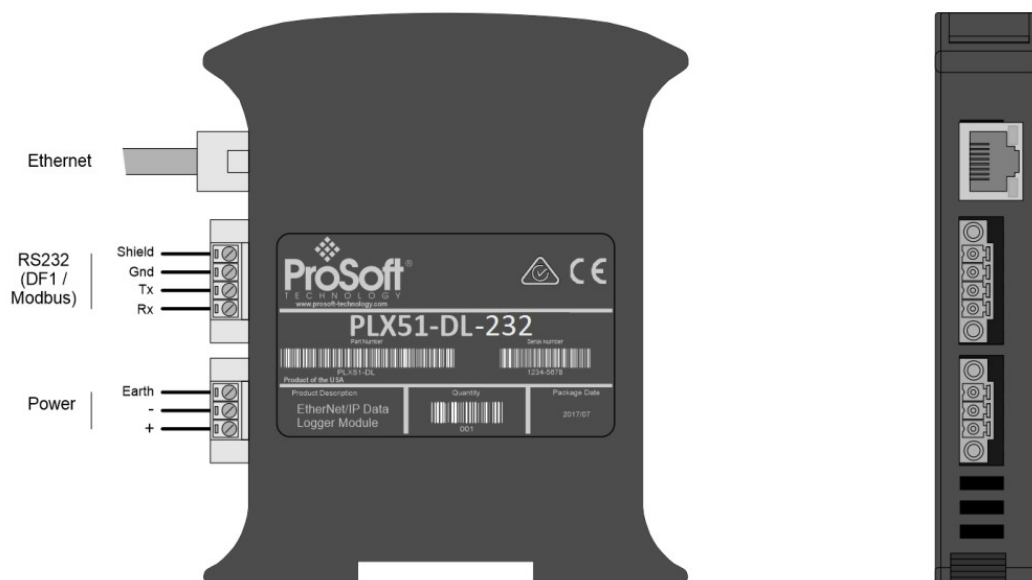

Ethernet Network Setup

The PLX51-DL-232 has DHCP enabled as factory default. Launch the DHCP server in the ProSoft PLX50 Configuration Utility to assign an IP address to the module. Then configure the module with the ProSoft PLX50 Configuration Utility.

Support, Service, and Warranty

Note: For technical support calls within the United States, ProSoft Technology's 24/7 after-hours phone support is available for urgent plant-down issues. Detailed contact information for all our worldwide locations is shown below:

Internet	Website: www.prosoft-technology.com Email: support@prosoft-technology.com
North America	Tel: +1.661.716.5100 Email: support@prosoft-technology.com Languages spoken include: English, Spanish
Asia Pacific	Tel: +60.3.2247.1898 Email: support.ap@prosoft-technology.com Languages spoken include: Bahasa, Chinese, English, Japanese, Korean
Europe / Middle East / Africa	Tel: +33.(0)5.34.36.87.20 Email: support.EMEA@prosoft-technology.com Languages spoken include: French, English
Mexico, Andean Countries, Central America, Caribbean, Chile, Bolivia, Paraguay	Tel: +52.222.264.1814 or +507.6427.48.38 Email: support.la@prosoft-technology.com Languages spoken include: Spanish, English
Brasil, Argentina, Uruguay	Tel: +55.11.5084.5178 Email: support.la@prosoft-technology.com Languages spoken include: Portuguese, English, Spanish

For complete details regarding ProSoft Technology's TERMS & CONDITIONS OF SALE, WARRANTY, SUPPORT, SERVICE AND RETURN MATERIAL AUTHORIZATION INSTRUCTIONS, please see the documents at: www.prosoft-technology.com/legal

Documents / Resources

	ProSoft PLX51 DL 232 ProSoft Connect Data Logger [pdf] User Guide PLX51 DL 232 ProSoft Connect Data Logger, PLX51 DL 232, ProSoft Connect Data Logger, Connect Data Logger, Data Logger
---	--

References

- [technology.com](https://www.prosofttechnology.com)
- p65warnings.ca.gov
- [ProSoft Technology Inc — IIOT connectivity starts with ProSoft](#)
- [ProSoft Technology Inc — IIOT connectivity starts with ProSoft](#)
- [ProSoft Technology, Legal Terms and Conditions, / Homepage - ProSoft Technology, Inc.](#)
- p65warnings.ca.gov/