

Proster PST44 Wireless PowerPoint Presentation Clicker User Guide

Home » Proster » Proster PST44 Wireless PowerPoint Presentation Clicker User Guide 🖺

Contents

- 1 Proster PST44 Wireless PowerPoint Presentation Clicker
- **2 Proster Wireless Presenter with Laser Pointer User** Guide
- 3 Introduction
 - 3.1 Package Contents
 - 3.2 Product Specification
 - 3.3 Safety Measures
 - 3.4 Trouble shooting
 - 3.5 Warranty
- 4 Documents / Resources
 - 4.1 References
- **5 Related Posts**



Proster PST44 Wireless PowerPoint Presentation Clicker



Proster Wireless Presenter with Laser Pointer User Guide

Introduction

- Thank you for purchasing proster wireless presenter with laser pointer.
- Plug and Play: No Need to Install Driver Software.
- Long Control Distance: Distance up to 10 Meters without Signal Disturbance and NO Direction Limit.

Package Contents

- 1 x Wireless presenter with laser pointer (Battery NOT included)
- 1 x Ultra-Slim Wireless Receiver (Under the Battery Cover)
- 1 x User Guide

Product Specification



Transmitter

| RF | 2.400GHz-2.48JG H z |
|----------------------------------|---------------------|
| Battery Type | AAA Battery |
| Effective RF Communication Range | 10 meters Max |
| RF Ou1put Power | I mW M ax |
| Power Consumption | J 0mA max |

Receiver

| RF | 2.400GHZ-2.483GHz |
|------------|-------------------|
| Inter face | USB 1.1/2.0 |
| Power | USB Power 5V DC |

System Requirements

• Hardware: USB interface

• Operating System: Microsoft Windows2000

Setting up your Wireless Presenter

1. Installing the Battery:

Insert the battery correctly



2. Connecting the Receiver

- 1. Take out the USB Receiver from the card slot.
- 2. Plug the USB Receiver into the USB port on your computer. Your computer's operating system will indentify the receiver and install the default driver automatically.



3. Synchronizing your Wireless Presenter

The receiver and presenter will synch up automatically. If not, reinsert the USB Receiver and then holding the "Connect" button for about 3 seconds.



Safety Measures

- 1. To avoid possible eye damage, never point the presenter's laser at people, especially their faces, or look directly into presenter's beam.
- 2. Avoid pointing the presenter's laser mean at a mirror or other high-reflective surfaces
- 3. Keep the presenter away from young children.
- 4. Never view the presenter's laser beam through telescopic devices, such as microscope or binocular.
- 5. Any attempt to disassemble, adjust or repair the presenter may result in exposure to laser light or other safety hazards

Trouble shooting

If the presenter is slow to response or intermittently stops working, please pay attention to the following points:

- 1. Make sure that the presenter is within 30 feet (10m) of its receiver
- 2. Tum off or keep away from other wireless devices to avoid their signal interference.
- 3. Reinstall the battery.
- 4. Re-synchronize the receiver and presenter. Re-insert the USB Receiver and then holding the "Connect" button for about 3 seconds.

Caution

Please turn off the item when it is not in use in order to prolong its working life.

Warranty

thanks for using poster product, all poster product comes with warranty of 18 months from the day of purchase, if you need any support, please feel free to contact us.

Documents / Resources



<u>Proster PST44 Wireless PowerPoint Presentation Clicker</u> [pdf] User Guide PST44 Wireless PowerPoint Presentation Clicker, PST44, Wireless PowerPoint Presentation Clicker, PowerPoint Presentation Clicker, Clicker

References

• User Manual

Manuals+,