



# T755WHO PROsync Digital Programmable Thermostat Instruction Manual

[Home](#) » [PROSYNC](#) » T755WHO PROsync Digital Programmable Thermostat Instruction Manual 

## Contents

- 1 T755WHO PROsync Digital Programmable Thermostat
- 2 Product Information
- 3 Product Usage Instructions
  - 3.1 Installation
- 4 Operation
- 5 Installation Tips
- 6 Thermostat Subbase Installation
- 7 Equipment Module Subbase Installation
- 8 Getting to know your thermostat
- 9 Wireless Communication Setup
- 10 Private Label Badge
- 11 Getting to know your thermostat
- 12 Adding A Remote Sensor
- 13 Wiring For The Equipment Module
  - 13.1 Wiring Tips
- 14 Wiring
- 15 Note: This thermostat is hardwire powered when the 24V transformer is connected to the R and C terminals of the thermostat. Note: In many systems with no emergency heat relay a jumper can be used between W1 and W2.
- 16 Technician Setup
- 17 Setting The Humidity
- 18 Programming
  - 18.1 Default Programming
- 19 Temporary & Permanent Hold Feature
- 20 Specifications
- 21 Specifications
- 22 Documents / Resources
  - 22.1 References



## T755WHO PROsync Digital Programmable Thermostat



### Product Information

- Product Name: T755WHO Thermostat
- Manufacturer: Pro1 Technologies
- Model Number: PM-T755WHO-IM-2321
- Power Type: Battery Power or Hardwired (Common Wire)
- Compatible Systems: Gas or Oil Heat, Electric Furnace, Heat Pump (with or without Aux. or Emergency Heat), Multi-Stage Systems, Heat Only Systems, Cool Only Systems, Millivolt, Dual Fuel
- Additional Features: Battery Backup, Humidity Control

### Product Usage Instructions

#### Installation

##### Location:

- The thermostat should be installed approximately 4 to 5 feet above the floor.
- Select an area with average temperature and good air circulation.
- Avoid installing the thermostat in basements, attics, living space closets, or locations with electrical hazards.

##### Installation Process:

- Ensure that a trained and experienced technician installs the thermostat.

- Follow the installation tips provided in the user manual.
- Disconnect the power before beginning the installation to prevent electrical shock or equipment damage.
- The PROsync Wireless System has been tested in various building constructions and can cover spaces over 5500 square feet.
- The wireless range works well across multiple floors and can transmit data reliably across hundreds of feet indoors and over 1000 feet line of sight.
- The PROsync radios constantly search for open channels to avoid interference and ensure messages are received.

#### **Thermostat Subbase Installation:**

- For horizontal mount, use one screw on the left and one screw on the right.
- For vertical mount, use one screw on the top and one screw on the bottom.

#### **Operation**

- Familiarize yourself with the thermostat's buttons and display. Use the buttons to set the time, temperature, humidity, and programming.
- The thermostat offers various modes and settings for different needs (e.g., Wake, Leave, Sleep, AutoCool, AutoIAQ).
- Refer to the quick reference guide for a basic understanding of the thermostat's functions.

#### **Additional Information:**

The thermostat is mercury-free, but if you are replacing a mercury-containing product, dispose of it properly according to your local waste management authority's instructions. Please refer to the complete user manual for detailed instructions on programming, setting up wireless communication, technician setup menu, and other specifications.

#### **Thermostat Application Guide**

<b>Description</b>	
Gas or Oil Heat	Yes
Electric Furnace	Yes
Heat Pump (No Aux. or Emergency Heat)	Yes
Heat Pump (With Aux. or Emergency Heat)	Yes
Multi-Stage Systems	Yes
Heat Only Systems	Yes
Cool Only Systems	Yes
Millivolt	No
Humidity	Yes
Dual Fuel	Yes

## Power Type

- Battery Power\*
- Hardwire (Common Wire)
- Hardwire (Common Wire) with
- Battery Backup

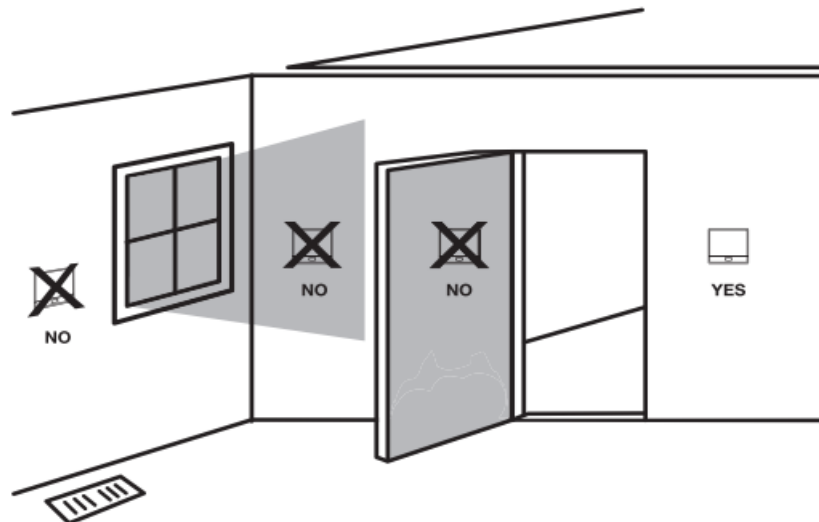
A trained, experienced technician must install this product.

Carefully read these instructions. You could damage this product or cause a hazardous condition if you fail to follow these instructions.

## Installation Tips

### Wall Locations

The thermostat should be installed approximately 4 to 5 feet above the floor. Select an area with average temperature and good air circulation.



### Do not install thermostat in these locations:

- Close to hot or cold air ducts
- That are in direct sunlight
- With an outside wall behind the thermostat
- In areas that do not require conditioning
- Where there are dead spots or drafts (in corners or behind doors)
- Where there might be concealed chimneys or pipes

Installation Tip: Pick an installation location that is easy for the user to access. The temperature of the location should be representative of the building.

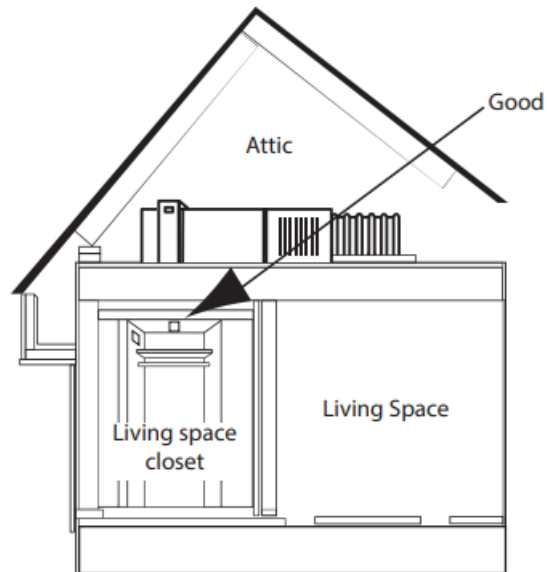
### Wireless Range

The PROsync System has been tested in many different types of building construction including wood, steel beam, and brick in spaces over 5500 square feet. The wireless range performs well across multiple floors successfully. The PROsync radios constantly search for open channels to avoid interference and ensure messages are received. The PROsync system has been shown to reliably transmit data across hundreds of feet


indoors and over 1000 feet line of sight.

### Equipment Module -Attic Location

When performing an attic installation, instead of placing the equipment module in the attic, locate the closet nearest to the air conditioning unit. We recommend mounting the Equipment module high on the wall inside the closet or on the ceiling of the closet. This location will insure the equipment module is below the 150°F maximum ambient temperature specification while also allowing easy technician viewing.



### Equipment Module – Basement Location

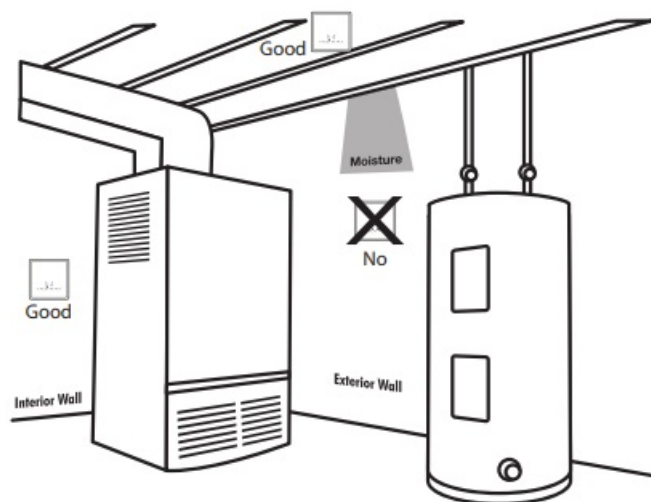


Do not install the base module in locations:

- That are behind a chimney
- Where temperature could exceed 150°F
- Where rain or snow or extreme hot or cold is possible

**Note:** This base module is NOT weatherproof.

### Thermostat Subbase Installation

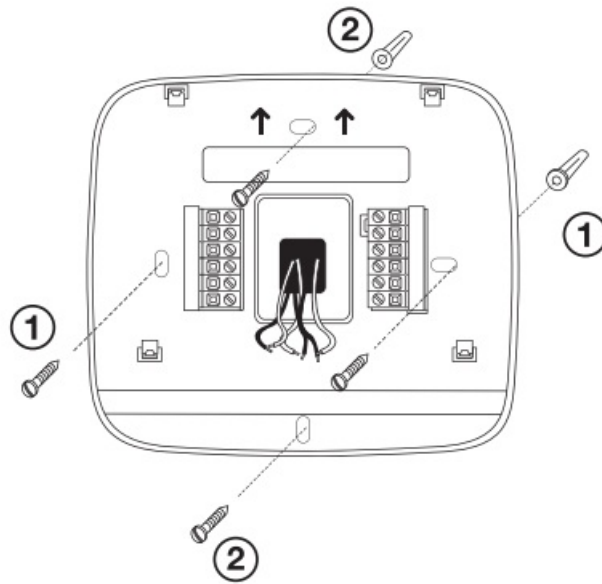

#### 1. Horizontal Mount

For horizontal mount put one screw on the left and one screw on the right.

#### 2. Vertical Mount

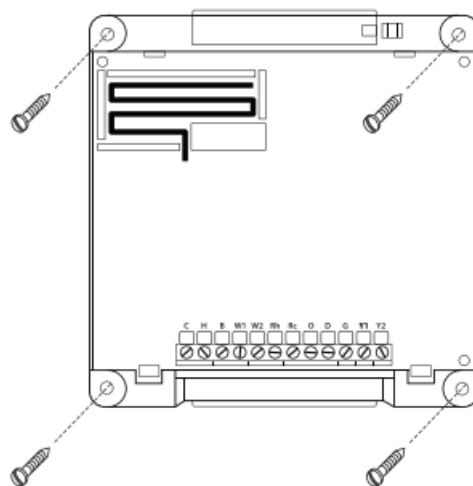
For vertical mount put one screw on the top and one screw on the bottom.

#### Installation Tip: Electrical Hazard

Failure to disconnect the power before beginning to install this product can cause electrical shock or equipment damage.

**Mercury Notice** All of our products are mercury free. However, if the product you are replacing contains mercury, dispose of it properly. Your local waste management authority can give you instructions on recycling and proper disposal.

### Equipment Module Subbase Installation




For the equipment module mount 4 screws in each outer hole.

**Wiring Note** Wire the equipment module's subbase the same way you would wire a hardwired thermostat subbase.

**Note:** To connect the equipment module to the master thermostat, refer to the directions on page 11 of this manual.

**Note:** The base module must be hardwired (C and R terminals connected to 24V power.)


## Getting to know your thermostat

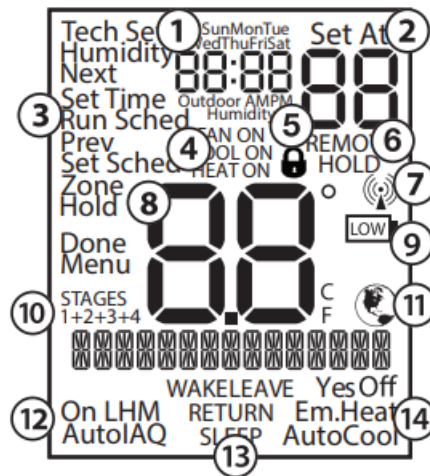

1. Time and day of the week
2. Setpoint: Displays the selected setpoint temperature.
3. Menu Options: Shows different options.
4. System Operation Indicators:  
The COOL ON, HEAT ON, or FAN ON will display when the COOL, HEAT, or FAN is on. The compressor delay feature is active if these are flashing.
5. Keypad Lockout: Indicates keypad lockout state is "Locked".
6. Hold is displayed when the thermostat program is permanently overridden.
7. Radio Antenna: This icon blinks when the thermostat receives a message from the equipment module.
8. Indicates the current room temperature
9. Low Battery Indicator: Replace batteries when this indicator is shown.
10. Stages: 1 will appear in the display when the first stage of heat or cool is on, +2 will appear for the second stage, +3 for third stage and +4 for fourth stage.
11. Globe: Globe is displayed if an energy efficient temperature has been selected.
12. Fan Mode: Indicates current air handler fan mode of operation.
13. Program Time Periods: This thermostat has 4 programmable time periods per day.
14. System: Indicates current mode of operation.

**Important** The low battery indicator is displayed when the AA battery power is low. Replace the batteries when the indicator appears. If the system is in the low battery state for an extended period, the system will operate with reduced temperature control. If battery power is lost, the system will cease operation even if the equipment module is still connected.

## Wireless Communication Setup

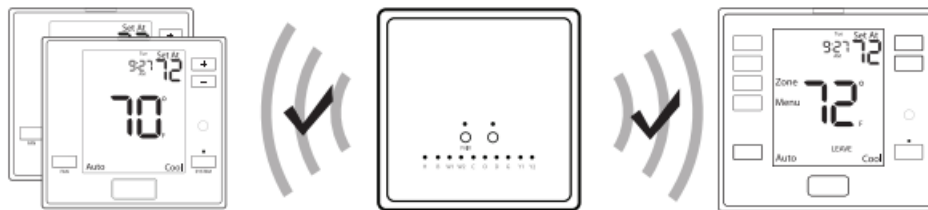

Follow these steps to setup the PROsync Wireless System

1. Choose the equipment module location.
2. Remove the front cover and attach the equipment module to the wall.
3. Wire the equipment module to the air handler.
4. Snap the cover back on. The C terminal light should be illuminated indicating the equipment module is powered.
5. Install batteries in the main thermostat and ensure it is communicating with the equipment module. Any changes to the main thermostat that create a call will now be displayed at the equipment module in the LEDs associated with the terminals.
6. Choose the install location for the T755WHO. In the tech settings, check the “Signal Strength” tech setting and ensure the value is greater than zero.
7. Remove the subbase and attach it to the wall using screws and anchors in the box.
8. If you want to hardwire the thermostat, connect the R and C wires.
9. Snap the thermostat onto the subbase. Make sure the connection is secure and the display is illuminated.
10. Add any additional remote sensors as desired.


**Note** Each time a message goes back and forth between the remote thermostat and the equipment module, the light on the equipment module will blink blue twice, and the antenna icon on the remote will blink twice.

## Private Label Badge
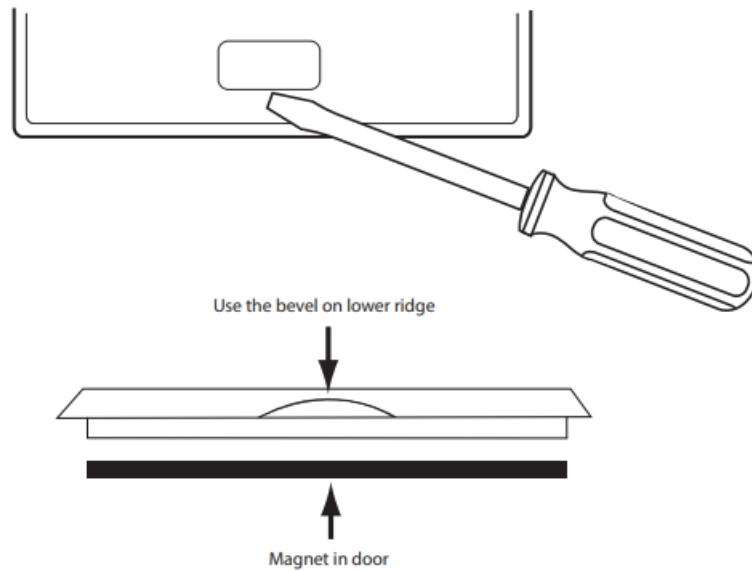
### About The Badge


All of our thermostats use the same universal magnetic badge. Visit the company website to learn more about our free private label program.





Gently slide a screwdriver into the bottom edge of the badge. Gently turn the screwdriver counter clockwise. The badge is held on by a magnet in the well of the battery door. The badge should pry off easily. **DO NOT USE FORCE.**

### Getting to know your thermostat

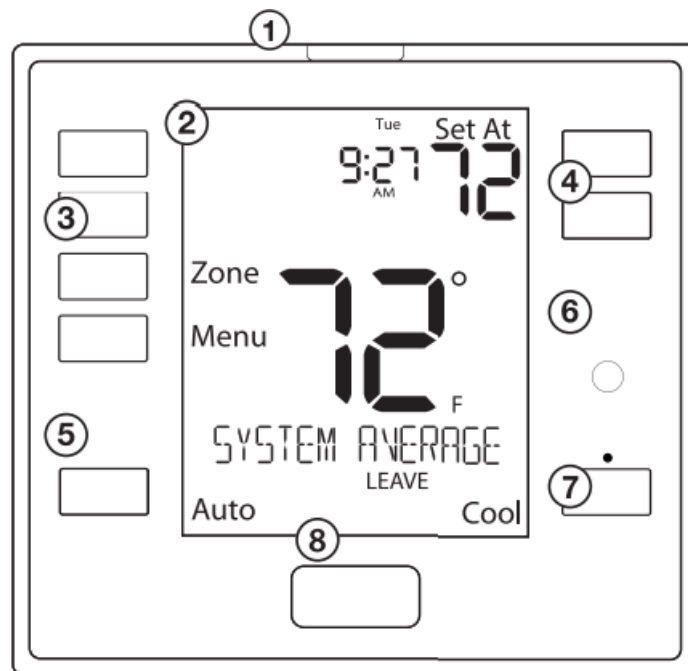

1. Glow in the dark light button
2. LCD Display
3. User Buttons
4. Temperature Setpoint Buttons
5. Fan Button
6. Occupancy Sensor
7. System Button
8. Private Label Badge

## Adding A Remote Sensor

Establishing communication between a remote sensor and the equipment module

The main thermostat and equipment module in this package are linked at our factory. Upon power up, they will automatically begin to communicate. If you wish to add additional remote sensors, follow the instructions on this page.

### How To Pair

1. Press the PAIR button on the equipment module. The equipment module will begin double blinking pink for 2 minutes while it listens for a new remote.
2. Press and hold the light button on the unpaired remote sensor to be added. The remote sensor will show "PAIRING" on the main screen.
3. When the remote sensor is successfully paired to the equipment module, the LCD will display "PAIRED" and the equipment module Pair button LED will blink green.
4. Repeat the process for additional remote sensors.

### Network Troubleshooting

For any of the conditions listed below, please visit our website for troubleshooting instructions at [www.pro1iaq.com/prosync](http://www.pro1iaq.com/prosync)

If your remote shows "NO COMM TO BASE" in the text field, this indicates the remote thermostat cannot communicate with the equipment module.

### Equipment Module Troubleshooting

Light Color	Blinking Type	Description
White	Single Blink (slow)	Equipment module network reset – no remotes paired or connected. Equipment module will not energize the heating and cooling system.
Green	Single Blink	All remote thermostats are connected to the equipment module, network is healthy.
Yellow	Double Blink	One or more remote thermostats are disconnected from the equipment module.
Red	Triple Blink	All remote thermostats are disconnected. Equipment module will not energize the heating and cooling system.

## Wiring For The Equipment Module

### Caution: Electrical Hazard

Failure to disconnect the power before beginning to install this product can cause electrical shock or equipment damage.

### Warning:

All components of the control system and the thermostat installation must conform to Class II circuits per the NEC Code.

### Wiring

1. If you are replacing a thermostat, make note of the terminal connections on the thermostat that is being replaced. In some cases the wiring connections will not be color coded. For example, the green wire may not be connected to the G terminal.
2. Loosen the terminal block screws. Insert wires then retighten the terminal block screws.
3. Place non flammable insulation into the wall opening to prevent drafts.

**Installation Tip**

Do not overtighten terminal block screws, as this can damage the terminal block. A damaged terminal block can keep the thermostat from fitting on the subbase correctly or cause system operation issues. Max Torque = 6in-lbs.

**Wiring Tips****C Terminal**

The C (common wire) terminal does not have to be connected when the thermostat is powered by batteries.

**Wire Specifications**

Use shielded or non-shielded 18-22 gauge thermostat wire.

**Note:** In many heat pump systems with no emergency heat relay, a jumper can be installed between W1 and W2 to turn thermostat into a single stage control for Emergency Heat Operation.

**Wiring****Terminal Designations on the Equipment Module**

This thermostat is shipped from the factory to operate a conventional heating and cooling system. This thermostat may also be configured for a heat pump system. See the “heat pump” configuration step on page 16 of this manual to configure the thermostat for heat pump applications.

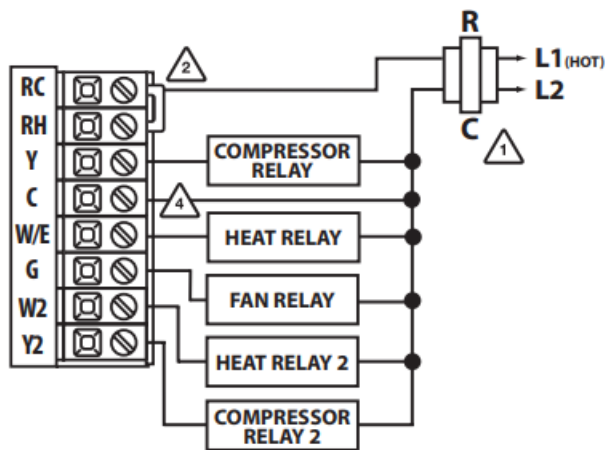
Terminal	2 Heat 2 Cool Conventional System	2 Heat 2 Cool Heat Pump System	4 Heat 2 Cool Heat Pump System
RC	Transformer power (cooling)	Transformer power (cooling)	Transformer power (cooling)
RH	Transformer power (heating)	Transformer power (heating)	Transformer power (heating)
C	Transformer common	Transformer common	Transformer common
B	Energized in heating	Heat pump changeover valve energized in heating	Heat pump changeover valve energized in heating
O	Energized in cooling	Heat pump changeover valve energized in cooling	Heat pump changeover valve energized in cooling
G	Fan relay	Fan relay	Fan relay
W1	First stage of heat	First stage of emergency heat	First stage of emergency heat , third stage of heat
Y	First stage of cool	First stage of heat & cool	First stage of heat & cool
Y2	Second stage of cool	Second stage of cool	Second stage of cool & second stage of heat
W2	Second stage of heat	Auxiliary heat relay, second stage of heat	Auxiliary heat relay, fourth stage of emergency heat
H	Humidify	Humidify	Humidify
D	Dehumidify	Dehumidify	Dehumidify

#### Terminal Designations on the Master Thermostat

Terminal	2 Heat 2 Cool Conventional System	2 Heat 2 Cool Heat Pump System	4 Heat 2 Cool Heat Pump System
R	24 VAC transformer power	24 VAC transformer power	24 VAC transformer power
C	transformer common	transformer common	transformer common

1. Power supply
2. Factory – installed jumper. Remove only when installing on a 2 transformer systems.
3. Use either O or B terminals for changeover valve.
4. Optional 24 VAC common connection when thermostat is used in battery power mode.

---




When using remote sensing, this system can be configured four separate ways to maximize comfort for homeowner and cater to each of their unique lifestyles.

System Averaging will average all remotes together to provide a more accurate temperature of the entire home. Adjusting the temperature from any remote will temporarily put that room in control of the system. If the upstairs thermostat reads 80 while the basement reads 70 the system will condition the home to a 75 ambient.




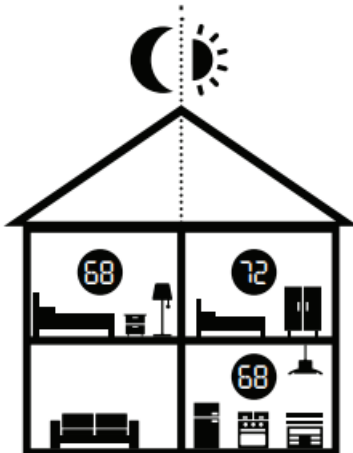With scheduling the system you can make different rooms in control for each part of the day. For homeowners with predictable schedules, this ensures each room will be the target temperature when scheduled to be used. Making the kitchen in control in the morning, your home office during the day, your living room in the evening, and your master bedroom at night is a great hands-free approach to maximize comfort. To turn Scheduling on or off, see the instructions for the “Program Mode” tech setting in this manual on page 22.




This is the perfect solution for homes with a single occupant with less predictable schedules, using the built-in

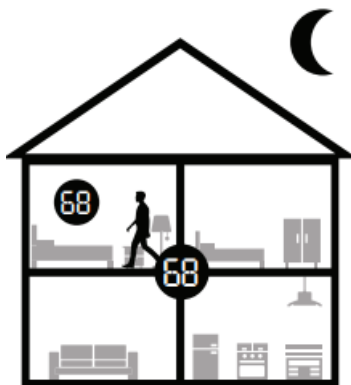occupancy sensors moves the comfort around the home without the need for scheduling. As soon as someone enters a room, it takes control of the system. To turn Last Seen Occupancy Sensing on, see the instructions for “Occupancy Mode” tech setting in this manual on page 31.



### **Occupancy Sensing (System Average Mode)**

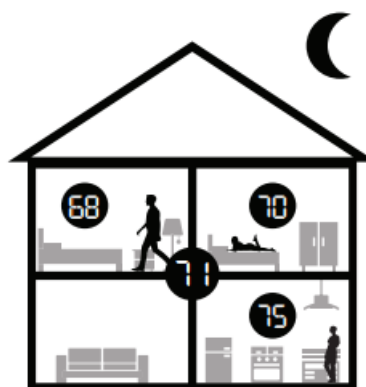
This is an excellent solution for a home with multiple occupants. Each time a remote senses occupancy, it starts an automatic, internal timer. The system is controlled using the average of the temperatures from only the remotes with active timers. When a remote’s timer expires, the system removes that remote from the average. To turn System Average Occupancy Sensing on, see the instructions for “Occupancy Mode” tech setting in this manual on page 31.




**Note:** This thermostat is hardwire powered when the 24V transformer is connected to the R and C terminals of the thermostat.

**Note:** In many systems with no emergency heat relay a jumper can be used between W1 and W2.


### Typical Cool-Only System With Fan

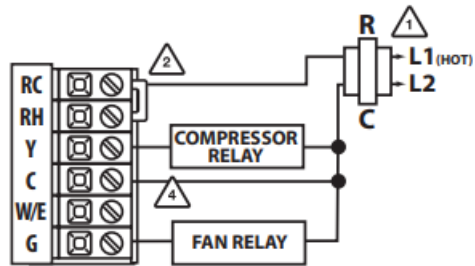


### Typical Heat Only System With Fan

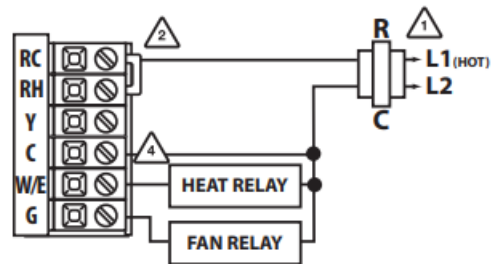

### Typical 2H/2C System: 2 Transformer

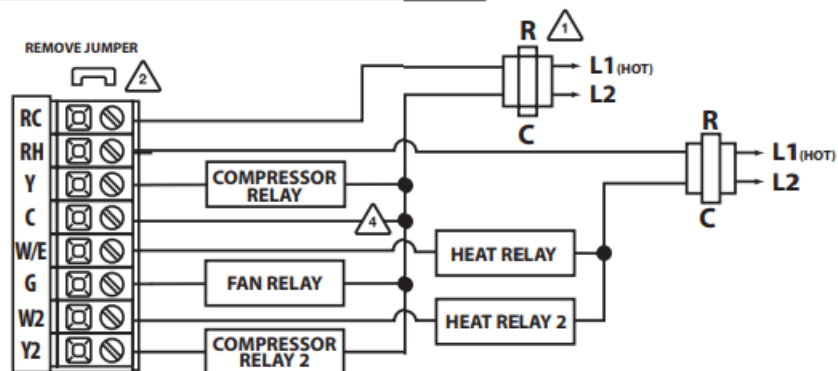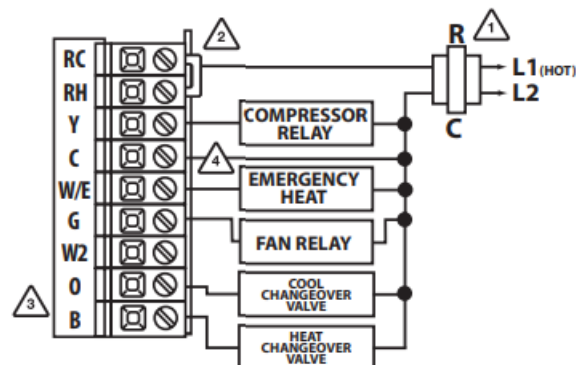
 


### Typical 2H/1C Heat Pump System



This thermostat has a technician setup menu for easy installer configuration. To set up the thermostat for your particular application:

 
 
 
 
 
 
 
 

 
1. Press the MENU button.
2. Press and hold the technician setup button for 3 seconds. This 3 second delay is designed so that homeowners do not accidentally access the installer settings.
3. Configure the installer options as desired using the table below.

Use the  or  keys to change settings and the NEXT step or PREVIOUS step key to move from one step to another. Note: Only press the DONE key when you want to exit the Technician Setup options.

4. Press the DONE key to exit.






Tech Setup Steps		LCD Will Show	Adjustment Options	Default
Filter Change Reminder	This feature will flash a reminder after the elapsed run time to remind the user to change the filter. A setting of "OFF" will disable this feature.	OFF FILTER 0	You can adjust the filter change reminder from "OFF" to 2000 hours of fan runtime in 50 hour increments.	OFF
Room Temperature Calibration	This feature allows the installer to change the calibration of the room temperature display. For example, if the thermostat reads 70° and you would like it to read 72° then select +2.	0 CALIBRATE	You can adjust the room temperature display to read up to 4° above or below the factory calibrated reading.	0°F
Cooling Swing	The swing setting often called "cycle rate", "differential" or "anticipation" is adjustable. A smaller swing setting will cause more frequent cycles and a larger swing setting will cause fewer cycles.	0.5 COOL SWING	The cooling swing setting is adjustable from 0.2° to 2°. For example: A swing setting of 0.5° will turn the cooling on at approximately 0.5° above the setpoint and turn the cooling off at approximately 0.5° below the setpoint.	0.5°
Heating Swing	The swing setting often called "cycle rate", "differential", or "anticipation" is adjustable. A smaller swing setting will cause more frequent cycles and a larger swing setting will cause fewer cycles.	0.8 HEAT SWING	The heating swing setting is adjustable from 0.2° to 2°. For example: A swing setting of 0.5° will turn the heating on at approximately 0.5° below the setpoint and turn the heating off at 0.5° above the setpoint.	0.8°


 

 

 




 


 
 

 
 

 
 

 
 
Tech Setup Steps		LCD Will Show	Adjustment Options	Default
PTAC Mode	This setting allows the thermostat to operate a PTAC. This will allow for multiple fan speeds selectable in the next two tech settings.	OF PTAC MODE	Use the  and  buttons to select ON/OFF.	OFF
PTAC Fan Speeds <small>(Only displayed if PTAC mode is set to "ON")</small>	This setting allows you to choose the number of fan speeds the thermostat will control.  G = Low Speed Fan B/O = Medium Speed Fan Y2 = High Speed Fan	2 PTAC FAN SPEEDS	Use the  and  buttons to select , 2 or 3.  1. Speeds: ON, Auto 2. Speeds: Low, High, Auto 3. Speeds: Low, Med, High, Auto	2
PTAC Medium Fan Speed Terminal <small>(Only displayed if PTAC mode is set to "ON" and PTAC fan speeds is set to "3")</small>	This setting will select the terminal for medium fan speed operations. The selected terminal cannot be used for reversing valve operations when heat pump is enabled.	0 M FAN TERMINAL	Use the  and  buttons to select O/B terminals.	0
Heat Pump	When turned on the thermostat will operate a heat pump. EM. Heat will show as an option in the system switch tech setting. Use the  and  button to adjust.	OF HEAT PUMP	OFF configures the thermostat for conventional systems.  ON configures the thermostat for heat pump systems.	OFF
System Set	You can configure the system switch for the particular application. Heat - Off - Cool, Heat - Off, Cool - Off, Heat - Off - Cool - Auto. Note: Emergency Heat is available in heat pump mode only.	SYSTEM SET Off Heat Cool	Use the  or  buttons until the desired application is flashing. AUTO = (Auto Changeover)	Heat Off Cool









#### A Note About Auto Changeover:

 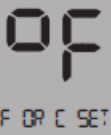

 



 
 
In Auto you have the ability to switch between Auto Heat or Auto Cool by pressing the system key. This can be done once the current mode has reached its setpoint. For example: if in Auto Heat, the heat setpoint must be satisfied before the thermostat will allow you to switch to Auto Cool. You can switch out of Auto by holding down the SYSTEM key. To get back into Auto, you must toggle the system key to Auto.


 
 






Tech Setup Steps		LCD Will Show	Adjustment Options	Default
<b>Dual Fuel Auxiliary For Heat Pump</b>  (Only displayed if heat pump is set to "ON")	This setting allows the system to run Gas, Oil, Propane or any other types of auxiliary heat. The thermostat will default to electric auxiliary heat in heat pump applications.		Use the <b>[+]</b> and <b>[-]</b> buttons to select ON/OFF.	OFF
<b>Electric or Gas Fan Operation</b>	Select GAS to have the system control the fan during a call for heat, select Electric to have the thermostat control the fan during a call for heat.  Note: If heat pump is set to "ON" this step will not show, and will default to ELECTRIC.		Use <b>[+]</b> and <b>[-]</b> buttons to change the setting.	GAS
<b>System Stages</b>	This setting allows you to select the number of heat and cool stages.		Use the <b>[+]</b> and <b>[-]</b> buttons to select 1H/1C, 1H/2C, 2H/1C, 2H/2C, 3H/1C, 3H/2C, 4H/2C.  Note: Heat and cool choices are limited based on conventional, heat pump, or PTAC system configuration.	2H
<b>Satisfy Setpoint Staging</b>  (Only displayed if there are more than one stage of heat or cool)	This feature allows the thermostat to keep multiple stages of heat or cool energized until the setpoint is satisfied.		Use the <b>[+]</b> or <b>[-]</b> buttons to turn on or off.	OFF
<b>Staging Delay</b>  (Only displayed if there are more than one stage of heat or cool)	This feature allows a delay to occur if an additional stage is needed. This allows the previous stage extra time to satisfy the setpoint.		Use the <b>[+]</b> or <b>[-]</b> key to select OFF, 5, 10, 15, 30, 45, 60, or 90 minutes.	OFF

Tech Setup Steps		LCD Will Show	Adjustment Options	Default
Minimum Compressor On Time	This feature allows the installer to select the minimum run time for the compressor. For example, a setting of 4 will force the compressor to run for at least 4 minutes every time the compressor turns on, regardless of the room temperature.	OF MINIMUM COMP ON	You can set the minimum compressor run time to "OFF", "3", "4", or "5" minutes. If 3, 4 or 5 is selected, the compressor will run for at least the selected time before turning off. Use the  and  buttons to change the setting.	OFF
Compressor Short Cycle Delay	The compressor short cycle delay protects the compressor from "short cycling". This feature will not allow the compressor to be turned on for 5 minutes after it was last turned off.	ON COMP DELAY	Selecting "ON" will not allow the compressor to be turned on for 5 minutes after the last time the compressor was on. Select "OFF" to remove this delay. Use the  and  buttons to change the setting.	ON
Cooling Fan Delay	The cooling fan delay setting will delay the fan from coming on in cool mode and keep it running after the compressor shuts off for a short time to save energy in some systems.	OF COOL FAN DELAY	You can set the cooling fan delay to OFF, 10, 30, 60 or 90 seconds. If 10, 30, 60, or 90 is selected the fan will not turn on for that many seconds when there is a call for cool and will run for that many seconds after satisfying a call for cool.	OFF
Program Options	<p>You can configure this thermostat to have a 7 day program, a 5+1+1 program or No program.</p> <p>Note: If 7d is selected, in set schedule you will program all seven days individually.</p> <p>If 5d is selected, in set schedule you will program Monday – Friday together and Saturday and Sunday individually.</p> <p>If 0d is selected the thermostat becomes non-programmable and the Set Schedule button goes away in Menu.</p>	5d PROGRAM	Use the  and  button to select 7d for 7 day, 5d for 5+1+1, or 0d for non-programmable.	5d


 
 


 
 

 
 
Tech Setup Steps		LCD Will Show	Adjustment Options	Default
IAQ Mode Cycle	<p>This feature will configure the fan to run a selected number of cycles per hour. Note: This mode can be enabled or disabled at anytime during normal operation by selecting IAQ mode with the fan key. Turning this feature on shows IAQ option in fan key.</p> <p>Notes: This programmable/selectable mode will operate the fan 1-4 cycles per hour, 1-45 minutes per cycle. Once programmed in tech setup, to enable this mode select "IAQ" with the fan key. Disable this mode by selecting "ON" or "AUTO" with the fan key.</p>	  IAQ MODE CYCLE	Select OFF, 1, 2, 3 or 4 with the  or  buttons. This sets the number of cycles per hour that the IAQ fan mode will operate.	0
IAQ Minutes Per Cycle  (Only displayed if "IAQ Mode Cycle" is greater than 0)	<p>This allows you to select the minimum number of minutes that the fan will run per IAQ mode cycle. The thermostat will keep track of fan runtime from normal heat and cool operation. If additional fan runtime is needed, the thermostat will run the fan to satisfy the IAQ mode minutes.</p> <p>Notes: This programmable/selectable mode will operate the fan 1-4 cycles per hour, 1-45 minutes per cycle. Once programmed in tech setup, to enable this mode select "IAQ" with the fan key. Disable this mode by selecting "ON" or "AUTO" with the fan key.</p>	  IAQ MODE MINUTE	Select 1, 5, 10, 15, 20, 30 or 45 minutes. When IAQ fan mode is enabled, it will ensure the fan runs at least the selected number of minutes per IAQ Mode Cycle. This step will not appear if previous step is set to "OFF".	1
Tech Setup Steps		LCD Will Show	Adjustment Options	Default
Fresh Air Mode  (This setting cannot be used with PTAC)	This feature allows fresh air into a unit for a selectable amount of time. When Fresh Air Mode is enabled, the fan and the fresh air damper terminal will energize simultaneously.	  FRESH AIR MODE	<p>Use the  and  buttons to select OFF, OC ON or ON.</p> <p>OFF: Thermostat does not enable Fresh Air Mode.</p> <p>OC ON: Fresh Air Mode is enabled during the OCCUPIED, WAKE, RETURN, and SLEEP time periods (It will not bring in fresh air during UNOCCUPIED and LEAVE time periods).</p> <p>ON: Thermostat will enable Fresh Air Mode for every time periods.</p>	OFF
Fresh Air Terminal  (Only displayed if fresh air mode is turned ON. This setting cannot be used with PTAC, three stages of cool, or economizer turned ON)	This setting provides the option to select a terminal for Fresh Air damper functions. The selected terminal cannot be used for reversing valve operations when the heat pump setting is turned on.	  FRESH AIR TERM	Use the  and  buttons to select 0/B.	0
Fresh Air Minutes	This setting selects the minimum number of minutes that the fresh air damper will be energized.	  FRESH AIR MIN	Use the  and  buttons to select 5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 55 or 60 minutes.	5
Free Cooling  (Only displayed if an outdoor remote sensor is paired to the equipment module)	This feature will bring in outside air for first stage cooling operations, if the outdoor temperature is 5 (or more) degrees lower than the setpoint temperature. This setting can only be enabled if the thermostat is in cooling mode.	  FREE COOLING	Use the  and  buttons to select ON/OFF.	OFF

Tech Setup Steps	LCD Will Show	Adjustment Options	Default
<b>Pro Recovery</b> (Only displayed if Program Option is set to "5D" or "7D" or if Occupancy Control is set to "ON")	This feature will start heating and cooling early to bring the building temperature to its programmed setpoint by the beginning of the WAKE and RETURN time periods.	Use the  or  key to select on or off.	ON
<b>Cycle Minimizer</b> (Only displayed if Program Option is set to "5D" or "7D" or if Occupancy Control is set to "ON")	This setting maximizes efficiency and equipment longevity by increasing the heating and cooling swing settings to 2° during the unoccupied and leave time periods. This will result in significantly fewer system cycles.	Use the  or  key to select on or off.	OFF
<b>Keypad Lockout</b>	Keypad lockout allows you to configure the thermostat so some or all of the keys don't function.  Note: Unlike other models, keypad lockout is always engaged if it is set to PARTIAL or FULL.	Use the + and - buttons to select OFF, BASIC, PART, FULL OF - OFF= keypad lockout has been disabled. BA - BASIC= locks out menu PA - PARTIAL= partial keypad lockout, which locks all the keys except the or setpoint keys. FL - FULL= full keypad lockout, which locks out all the keys.	OFF
<b>Heat Setpoint Limit</b>	This feature allows you to set a maximum heating setpoint limit. The setpoint temperature cannot be raised above this value.	Use the  or  key to select the maximum heat setpoint.	90°F
<b>Cool Setpoint Limit</b>	This feature allows you to set a minimum cooling setpoint limit. The setpoint temperature cannot be lowered below this value.	Use the  or  key to select the minimum cooling setpoint.	44°F












Tech Setup Steps		LCD Will Show	Adjustment Options	Default
°F or °C	This feature allows you to display temperatures in either Fahrenheit or Celsius.		°F for Fahrenheit °C for Celsius	°F
12 or 24 Hour Clock	You can select either a 12 or 24 hour clock setting.		Use the  or  key to select 12 or 24 hour clock.	12
<b>Display Light</b>  (This setting is only applied when the thermostat is hardwired)	The display light can be configured to stay on all the time or turn on when any key is pressed. There are LOW and HIGH selections for continuous ON selection.	  	Use the  and  buttons to select OFF, LOW, or HIGH.  OFF configures the display light to come on when the light key or any button is pressed.  LOW configures the display light to stay on at a low intensity constantly. When a button is pressed, the display light will transition to high intensity.  HIGH configures the display light to remain on at high intensity all the time.	<b>LO</b> When Hardwired

Tech Setup Steps		LCD Will Show	Adjustment Options	Default
<b>Free Cooling Terminal</b>  (Fresh air mode and free cooling can be used together. Free cooling cannot be used with PTAC mode, three stages of heat.)	This setting provides the option to select a terminal for Free Cooling functions. The selected terminal cannot be used for reversing valve operations when the heat pump setting is turned on.		Use the  and  buttons to select 0/B.	0
<b>Dual Fuel Balance Point</b>  (Only displayed if an outdoor remote sensor is paired to the equipment module, Heat Pump is "ON", and Dual Fuel Aux is "ON")	An outdoor temperature above balance point will cause the thermostat to energize the Y terminal(s) only in calls for heat. An outdoor temperature below balance point will cause the thermostat to energize the W2 terminal only in calls for heat.		Use the  and  buttons to select OFF, 10, 15, 20, 25, 30, 35, 40, 45, 50 degrees.	OFF
<b>Balance Point Electric AUX Cut In</b>  (Only displayed if an outdoor remote sensor is paired to the equipment module, Heat Pump is "ON", and Dual Fuel Aux is "OFF")	Balance point with electric auxiliary will optimize heat pump usage. When the outdoor temperature is above the AUX CUT OUT selection, the thermostat to only allow the Y terminal(s) to energize and lockout the W2 terminal. When the outdoor temperature falls below the AUX CUT OUT selection and sits above the AUX CUT IN selection, the thermostat to allow the Y terminal(s) and the W2 terminal to energize. When the outdoor temperature is below the AUX CUT IN selection, the thermostat will only energize the W2 terminal and lockout the Y terminal(s).		Use the  and  buttons to select 10, 15, 20, 25, 30, 35, 40, 45, 50 degrees.	OFF

 

  Tech Setup Steps		LCD Will Show	Adjustment Options	Default
<b>Balance Point Electric AUX Cut Out</b>  (Only displayed if an outdoor remote sensor is paired to the equipment module, Heat Pump is "ON", and Dual Fuel Aux is "OFF")	Balance point with electric auxiliary will optimize heat pump usage. When the outdoor temperature is above the AUX CUT OUT selection, the thermostat to only allow the Y terminal(s) will energize and lockout the W2 terminal. When the outdoor temperature falls below the AUX CUT OUT selection and sits above the AUX CUT IN selection, the thermostat will allow the Y terminal(s) and the W2 terminal to energize. When the outdoor temperature is below the AUX CUT IN selection, the thermostat will only energize the W2 terminal and lockout the Y terminal(s).		Use the  and  buttons to select 10, 15, 20, 25, 30, 35, 40, 45, 50 degrees.	OFF
<b>Balance Point Run Time</b>  (Only displayed if Dual Fuel Balance Point or Balance Point Electric Aux Cut In are set to an outdoor temperature.)	Balance point run time will allow the W2 auxiliary terminal to energize even if outdoor temperature is above selected balance point temperature. If enabled, auxiliary will energize for the current cycle after the balance point run time has expired.		Off, 15, 30, 45, 60, 75, 90	OFF
<b>Humidify</b>	This feature adds humidity when the system mode is in HEAT.		Use the  and  key to turn on or off. If ON is selected the humidity will be displayed on the main screen and H terminal will energize when the humidity setpoint is above the ambient humidity in Heat mode.	OFF
<b>Dehumidify</b>	This feature removes humidity when the system mode is in COOL.		Use the  and  key to turn on or off. If ON is selected the humidity will be displayed on the main screen and D terminal will energize when the humidity setpoint is below the ambient humidity in Cool mode.	OFF



Tech Setup Steps		LCD Will Show	Adjustment Options	Default
<b>Humidity Calibration</b>  (Only displayed if Humidify or Dehumidify is set to "ON")	This feature allows the installer to change the calibration of the ambient humidity displayed.		Use the left and right arrows to adjust the calibration +/-3. Each one unit of adjustment amounts to approximately 5%.	0
<b>Automatic Humidity Adjusting</b>  (Only displayed if an outdoor remote sensor is paired to the equipment module and Humidity is set to "ON")	This feature will adjust the indoor humidity as the outdoor temperature changes. When OFF is selected, the humidity setpoint is controlled by the user. When ON is selected, the humidity setpoint will fluctuate. When ON is selected, the indoor humidity will fluctuate based on outdoor temperature.		Use the  and  buttons to select OFF, ON 1 or ON 2. When ON 1 or ON 2 is selected and humidity level is adjusted, the thermostat will revert to the original humidity level after four hours. See Automatic Humidity Adjusting chart for humidity ranges.  Please see page 32 for chart.	OFF
<b>Dehumidify With AC</b>  (Only shows if dehumidify is displayed to "ON")	This feature forces the A/C to run longer to remove humidity when needed. The A/C will "over cool" the room a few degrees until humidity reaches the desired setpoint. The numbers below are the maximum number of degrees the thermostat will overcool to satisfy humidity. For example, If temperature set point is 70 and humidity set point is 50 and swing is 1 degree and "Dehumidify with AC" is set to 3 and the ambient is 68 and indoor humidity is 60 ... the thermostat will continue to run air conditioning until 67 degree to try to satisfy the humidity set point of 50		Use the  and  buttons to select On or Off.	OFF
<b>Over Cool Limit</b>  (Only displayed if Dehumidify with AC is set to "ON")	The amount of over cooling allowed when using A/C to remove humidity. This screen is only shown when ON is selected in the Dehumidify with AC tech setup step.		Use the and left and right arrows to select the maximum number of degrees of over cool.  Options are: 2,3,4,5	3
Tech Setup Steps		LCD Will Show	Adjustment Options	Default
<b>HUM Terminal</b>  (Only displayed if humidity is set to "ON")	Options for how the HUM terminal energizes.  See chart below		Use the left and right arrows to select one of the four options.  View the HUM terminal chart below for an explanation of these options.	1
<b>DHM Terminal</b>  (Only displayed if dehumidify is set to "ON")	Options for how the DHM terminal energizes.  See chart below		Use the left and right arrows to select one of the four options.  View the DHM terminal chart below for an explanation of these options.	1
<b>Dehumidify Relay</b>  (Only displayed if Dehumidify is set to "ON")	You can configure the D terminal as Normally-Open or Normally-Closed.  NO = Normally Open NC = Normally Closed		Use the or key to select NO or NC. If NO is selected D will energize to dehumidify. If NC is selected D will be normally energized. D will de-energize to dehumidify.	NO




## HUM Terminal

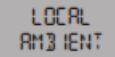OPTIONS	HUM terminal energizes when the ambient humidity is...
1	Below the humidity setpoint and heat or fan is energized.
2	Below the humidity setpoint and heat is energized.
3	Below the humidity setpoint. It will also energize the fan during a call for humidity.
4	Below the humidity setpoint.

## DHM Terminal

OPTIONS	DUM terminal energizes when the ambient humidity is...
1	Above the humidity setpoint and cool or fan is energized.
2	Above the humidity setpoint. It will also energize the fan during a call for dehumidity.
3	Above the humidity setpoint.
4	Above the humidity setpoint and the compressor is not running.

**Note:** When the dehumidify terminal is configured as normally-closed, the base module D terminal LED indicator will be lit when the relay is closed. When the thermostat calls for dehumidification, the D terminal LED indicator will turn off.

Tech Setup Steps		LCD Will Show	Adjustment Options	Default
<b>Unoccupied Heat Setting</b> <small>(Only displayed if Occupancy Control is set to ON)</small>	Set the heat temperature that you would like the system to be while the space is unoccupied.		Full temperature range defined by setpoint limits.  First adjust the temperature using the + and – buttons.	70°
<b>Occupancy Sensitivity Setting</b> <small>(Only displayed if Occupancy Control is set to ON)</small>	Set the level of sensitivity of the occupancy sensor. Lowering the sensitivity will cause the sensor to respond only to larger movements.		High Sensitivity(3): This is the most sensitive setting and will detect very slight motions. This is the recommended setting because it will work well for nearly all applications, and will detect any movement.  Medium Sensitivity(2): This is the medium sensitive setting. This is less likely set off by pets.  Low Sensitivity(1): This is the least sensitive setting and can be used in areas of heavy traffic. Pets, small children, or people more than 20' from the sensor location are least likely to trigger the sensor.	2
<b>Local Ambient Enable</b> <small>(Only displayed when using remote sensors)</small>	Remove this thermostat from "System Average" temperature calculation.  Note: The ambient temperature is not displayed on the main screen of the thermostat with "Local Ambient Enable" OF.		ON - Maintains the Main Thermostat as a control point to be used in system averaging and occupancy control.  OF - Disables the local ambient temperature sensor removing the Main Thermostat from the system temperature.	ON

Tech Setup Steps		LCD Will Show	Adjustment Options	Default
Freeze Protection	<p>Freeze protection provides some extra protection in case communication is lost between the thermostat (and remote sensors) and the Equipment module for any reason.</p> <p>Note: A thermostat is not a safety device and the building will need additional precautions if left unattended for long periods of time.</p>		<p>OF - Freeze protection defaults to OFF.</p> <p>ON - The Equipment Module will run the heat for 10 minutes every hour in heat mode or the cool for 20 minutes every hour in cool mode if the communication is lost.</p>	OFF
Device Name <small>(Only displayed when using remote sensors)</small>	Press the + and - buttons to choose the name of this device from a selection of common room names.			
Pairing	Use this setting to pair your thermostat to the equipment module. Press and hold  to join the network. This setting is only displayed when they have been unpaired for any reason.		N/A	P
Exit Network	Press and hold the  to remove this device from the network.		N/A	UP
Signal Strength	Displays the strength of the wireless signal and network status.		<p>NO - Disconnected</p> <p>LO - low signal strength</p> <p>HII - high signal strength</p>	
Network Info <small>(Only displayed when using remote sensors)</small>	This setting shows information about the devices on your network. Press the  and  buttons to check the number of total devices, active indoor, and active outdoor remotes.		N/A	1

Tech Setup Steps		LCD Will Show	Adjustment Options	Default
Occupancy Mode	<p>Two methods are available for using occupancy sensing to run the HVAC system providing flexibility to the homeowner based on their family and lifestyle.</p> <p>In both methods, once the Duration of Occupancy has expired for all remotes, the system will enter the Unoccupied Mode.</p> <p>NOTE: Enabling either type of occupancy control will enable the occupancy sensor on all remote sensors as well (if applicable). When no remote sensors are connected, available options are "OFF" and "ON" (System Average).</p>	<p>OF</p> <p>OCCUPANCY</p>	<p>OF=OFF The occupancy sensor is off and the thermostat defaults to a traditional programmable or nonprogrammable thermostat.</p> <p>LS = Last Seen This option only allows one sensor to be in control at a time. Any time a person enters a new room, the entire system will prioritize that remote's settings to condition the entire home until another remote takes control or the Duration of Occupancy expires, entering Unoccupied Mode. This is a great solution for a household with a <b>single occupant</b>.</p> <p>SA = System Average This option allows multiple sensors to be in control at a time. If multiple remotes sense occupancy simultaneously, the system will average all remotes currently in Occupied Mode together. Each remote will drop off individually as its Duration of Occupancy expires. This is a great option for a household with <b>multiple occupants</b>.</p>	OFF
Duration of Occupancy <small>(Only displayed if Occupancy Control is set to "ON")</small>	When the occupancy sensor is turned on you have the ability to set how long the thermostat will go into occupancy mode everytime a person is sensed.	<p>8</p> <p>OCC DURATION</p>	30 = 30 minutes, 1 = 1 hour, 2 = 2 hours, 3 = 3 hours, 4 = 4 hours, 5 = 5 hours, 6 = 6 hours, 7 = 7 hours, 8 = 8 hours, 9 = 9 hours, 10 = 10 hours, 11 = 11 hours, and 12 = 12 hours.	8
Tech Setup Steps		LCD Will Show	Adjustment Options	Default
Occupied Cool Setting <small>(Only displayed if Occupancy Control is set to "ON")</small>	Set the cooling temperature that you would like the system to be while the space is occupied.	<p>75</p> <p>CO</p> <p>OCC COOL</p>	<p>Full temperature range defined by setpoint limits.</p> <p>Adjust the temperature using the + and – buttons.</p>	75°
Occupied Heat Setting <small>(Only displayed if Occupancy Control is set to "ON")</small>	Set the heating temperature that you would like the system to be while the space is occupied.	<p>70</p> <p>HE</p> <p>OCC HEAT</p>	<p>Full temperature range defined by setpoint limits.</p> <p>Adjust the temperature using the + and – buttons.</p>	70°
Unoccupied Cool Setting <small>(Only displayed if Occupancy Control is set to "ON")</small>	Set the cool temperature that you would like the system to be while the space is unoccupied.	<p>75</p> <p>CO</p> <p>UNOCC COOL</p>	<p>Full temperature range defined by setpoint limits.</p> <p>Adjust the temperature using the + and – buttons.</p>	75°

### Force Unoccupied Setting

To set your system to the unoccupied temperature immediately, press and hold the Light and Minus buttons on any indoor sensor or the main thermostat. Your thermostat or sensor should say "Unoccupied". The system will ignore occupancy changes for 5 minutes to allow you time to leave.

Tech Setup Steps		LCD Will Show	Adjustment Options	Default
Humidity Pad Reminder	Enables a reminder for the user to change the humidity pad.	OFF  HUM PAD 0	Use the $\boxed{+}$ or $\boxed{-}$ key to select OFF, 500, 1000, 1500, or 2000. These represent hours of heat operation.	OFF
UV Lamp Reminder	Enables a reminder for the user to change the UV light bulb.	OFF  UV LAMP 0	Use the $\boxed{+}$ or $\boxed{-}$ key to select OFF, 1 YR, 2 YR	OFF
IAQ Cell Reminder	Enables a reminder for the user to change the IAQ Cell after 25,000 hrs.	OFF  IAQ CELL 0	Use the $\boxed{+}$ or $\boxed{-}$ buttons to select OFF, or 25 (stands for 25,000 hours).	OFF
FW Version	This displays the current firmware version installed on the Main Thermostat. This can be helpful for troubleshooting if you ever need to call customer service.	Fr	N/A	T755WHO-001

Automatic Humidity Adjusting Index		
When The Outdoor Temperature Is:	On 1	On 2
> +40°F	45%	50%
+30°F to 40°F	40%	45%
+20°F to 29°F	35%	40%
+10°F to 19°F	30%	35%
0°F to 9°F	25%	30%
-1°F to -10°F	20%	25%
-11°F to -20°F	15%	20%
<-20	10%	15%

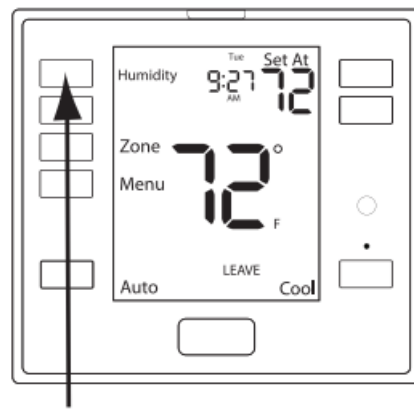
## Setting The Humidity

Follow the steps below to change your target humidity setpoint.


Press the humidity button. Use the  $\boxed{-}$  or  $\boxed{+}$  button to select the target humidity setpoint. Press Done when completed.

### Note:

Humidity is only energized during heat. Dehumidity is only energized during cool. HUMIDITY and DEHUMIDITY each have their own target setpoints.



**Humidity Key**

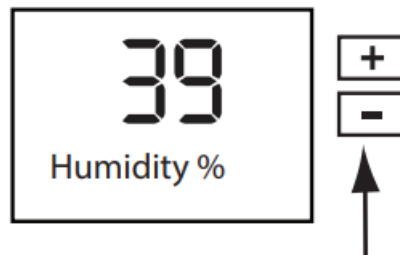

**Target humidity setpoint keys**

### Ambient Humidity Display

Ambient humidity will flash opposite the day and time, if the optional outdoor temperature sensor is installed the ambient outdoor temperature will also cycle in the display.



Ambient Humidity



Day & Time



Outdoor Temperature

### Increasing Humidity

The table on the right shows recommended indoor humidity levels in relation to outdoor temperatures during heating (adding humidity).

Consult your professional HVAC technician for recommended settings for your climate.

Outside Temperature (0°)	Recommended Relative Humidity
+20° and above	35% to 40%
+10°	30%
0°	25%
-10°	20%
-20°	15%

### Programming

#### Set Time (If using programming)

Follow the steps below to set the day of the week and current time:

1. Press the Menu button.
2. Press Set Time.

3. Day of the week is flashing. Use the  or  key to select the current day of the week.
4. Press Next.
5. The current hour is flashing. Use the  or  key to select the current hour. When using 12-hour time, make sure the correct a.m. or p.m. choice is selected.
6. Press Next.
7. Minutes are now flashing. Use the  or  key to select current minutes.
8. Press Done when completed.

All our programmable thermostats are shipped with an energy saving default program. You can customize this default program by following the instructions in the set program schedule section starting on page 38. Your thermostat can be programmed to have each day of the week programmed uniquely (7 days), all the weekdays the same with a separate program for Saturday and a separate program for Sunday (5+1+1), or non-programmable.

#### **A Note About Programmable Fan:**

The programmable fan feature will run the fan continuously during any time period it is programmed to be on. This is the best way to keep the air circulated and to eliminate hot and cold spots in your building.

#### **Default Programming**

#### **Factory Default Program**

Day of the Week	Events	Time	Setpoint Temperature (HEAT)	Setpoint Temperature (COOL)
Weekday	Wake	6 AM	70°F (21°C)	78°F (26°C)
	Leave	8 AM	62°F (17°C)	85°F (29°C)
	Return	6 PM	70°F (21°C)	78°F (26°C)
	Sleep	10 PM	62°F (17°C)	82°F (28°C)
Saturday	Wake	6 AM	70°F (21°C)	78°F (26°C)
	Leave	8 AM	62°F (17°C)	85°F (29°C)
	Return	6 PM	70°F (21°C)	78°F (26°C)
	Sleep	10 PM	62°F (17°C)	82°F (28°C)
Sunday	Wake	6 AM	70°F (21°C)	78°F (26°C)
	Leave	8 AM	62°F (17°C)	85°F (29°C)
	Return	6 PM	70°F (21°C)	78°F (26°C)
Sleep		10 PM	62°F (17°C)	82°F (28°C)

#### **Set Program Schedule For Four Time Periods**

#### **Saturday:**

Repeat steps 4 through 6 for the Saturday WAKE time period, LEAVE time period, RETURN time period, and for



 

the Saturday SLEEP time period.


 
### Sunday:

Repeat steps 4 through 6 for the Sunday WAKE time period, LEAVE time period, RETURN time period, and for the Sunday SLEEP time period.

## Temporary & Permanent Hold Feature

### Temporary Hold:

The thermostat will display HOLD and  Run Schedule on the bottom of the screen when you press the or  key. If you do nothing, the temperature will remain at this setpoint temporarily for 4 hours. The program setpoint will then replace the temporary setpoint.

Permanent Hold: With a temporary hold set, If you press the HOLD key at the bottom of your screen, you will see HOLD appear next to the setpoint temperature in the display. The thermostat will now permanently stay at this setpoint and can be adjusted using the  or  keys.

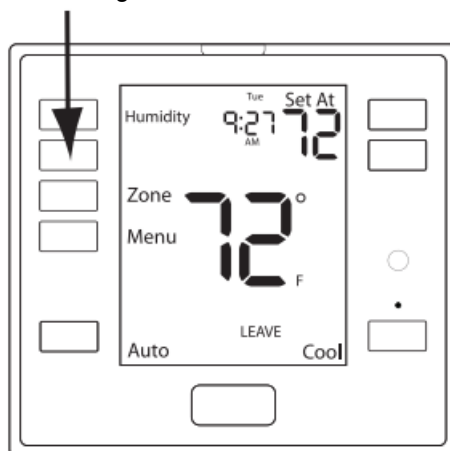
### To Return To Program

Press the Run Schedule key at the bottom of the screen to exit temporary and permanent holds.

### Filter Change Reminder

If your installing contractor has configured the thermostat to remind you when the air filter needs changed, you will see CHANGE FILTER in the display when your air filter needs changed. The reminder will be shown in the display after your system has run long enough to require an air filter change.

To reset the timers for Prosync, user must hold the “Run Schedule” button (2nd button down on the left) on either the main screen, or the related timer tech settings.



Custom Programming (Fill out before starting the process)



Custom Program				
Day of the Week	Events	Time	Setpoint Temperature (HEAT)	Setpoint Temperature (COOL)
Weekday	Wake			
	Leave			
	Return			
	Sleep			
Saturday	Wake			
	Leave			
	Return			
	Sleep			
Sunday	Wake			
	Leave			
	Return			
	Sleep			

### Set Program Schedule For Four Time Periods (WAKE, LEAVE, RETURN, SLEEP)

If you intend to use additional Remote Sensors in addition to the Main Thermostat you must install, link and name all of the remotes in the system before you begin the scheduling process.

To customize your 5+1+1 Program schedule, follow these steps:

#### Weekday:

1. Select HEAT or COOL with the System Key.

**Note:** You have to program heat and cool each separately.

2. Press the MENU button (If menu does not appear first, press RUN SCHED).
3. Press SET SCHEDULE. Note: Monday-Friday is displayed, and the WAKE icon is shown. You are now programming the WAKE time period for the weekday setting.

4. Time is flashing. Use the  or  key to make your time selection for the weekday WAKE time period.

**Note:** If you want the fan to run continuously during this time period, select ON with the FAN key. AUTO will cycle the fan when there is a call for heat or cool. IAQ will cycle the fan intermittently based on the IAQ tech settings.

5. Press Next.

6. The setpoint temperature is flashing. Use the  or  key to make your setpoint selection for the weekday WAKE period.

7. At any point use the ZONE button to select the remote you want to be in control for that time period. If you want the system to average all remotes, select System Average.

**Note:** This setting only applies if you are using multiple remote sensors.

8. Press Next.

9. Repeat steps 4 through 8 for the weekday LEAVE time period, for the weekday RETURN time period, and for

the weekday SLEEP time period.

## Specifications

- The display range of temperature ... 41°F to 95°F (5°C to 35°C)  
The control range of temperature.... 44°F to 90°F (7°C to 32°C)
- Load Rating..... 1 amp per terminal, 1.5 amp maximum all terminals combined
- Swing (cycle rate or differential) ..... Heating is adjustable from 0.2° to 2.0° Cooling is adjustable from 0.2° to 2.0°
- Power source .....18 to 30 VAC, NEC Class II, 50/60 Hz for hardwire  
Battery power from 2 AA Alkaline batteries
- Operating ambient ..... 32°F to +105°F (0°C to +41°C)
- Operating humidity ..... 90% non-condensing maximum
- Dimensions of thermostat ..... 4.7" W x 4.3" H x 1.1" D
- Frequency ..... 916 MHz

## Base module

- Load rating ..... 1 amp per terminal, 1.5 amp maximum all terminals combined
- Power source ..... 18 to 30 VAC, NEC class II, 50/60 Hz

## Specifications

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

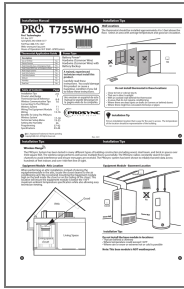
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## FCC RF Exposure Statement

The device shall be used in such a manner that the potential for human contact normal operation is minimized. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

---

## Documents / Resources



[PROSYNC T755WHO PROsync Digital Programmable Thermostat](#) [pdf] Instruction Manual  
T755WHO PROsync Digital Programmable Thermostat, T755WHO, PROsync Digital Program  
mable Thermostat, Digital Programmable Thermostat, Programmable Thermostat, Thermostat

## References

- [Pro1 IAQ Thermostats - Non Programmable | Programmable | Wireless](#)
- [PRO1 Technologies | PROsync Wireless System](#)

Manuals+.