



---

# ProtoArc EK04 Mini Ergonomic Keyboard User Manual

July 19,  
2025



## Contents [ [hide](#) ]

### 1 EK04 Mini

#### 1.1 Wireless Ergonomic Keyboard

#### 1.2 User Manual

##### 1.2.1 Packing List

##### 1.2.2 Product Features

##### 1.2.3 2.4G USB Connection

##### 1.2.4 Bluetooth Connection

##### 1.2.5 Mode Switch Method

##### 1.2.6 Charging Guide

##### 1.2.7 Multimedia Function Button

##### 1.2.8 Product Parameters

##### 1.2.9 How to Use Special Characters in British English

##### 1.2.10 Tips

##### 1.2.11 Sleep Mode

##### 1.2.12 Safety Warning

##### 1.2.13 EU Declaration of Conformity

### 2 Documents / Resources

#### 2.1 References

## EK04 Mini

### Wireless Ergonomic Keyboard

### User Manual

[www.protoarc.com](http://www.protoarc.com)

### US

[support@protoarc.com](mailto:support@protoarc.com)

 
(+1) [866-287-6188](tel:866-287-6188)

Mon-Sun: 9AM – 1PM; 2PM – 6PM PT (Eastern Time)


\*Closed during Holidays

### UK

Packing List

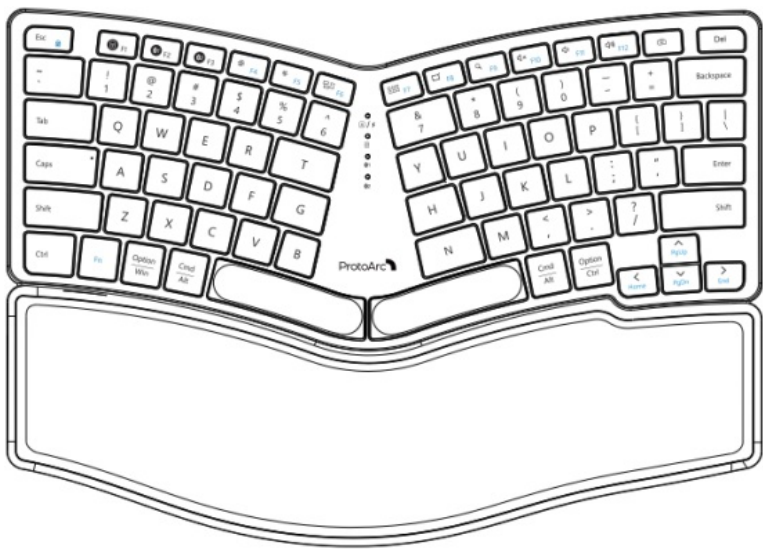


Keyboard\* 1

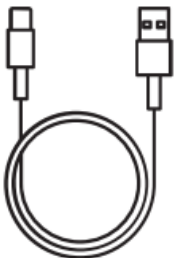 

Type-C Charging Cable\* 1




 User Manual\* 1

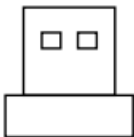


USB Receiver\* 1

 Product Features

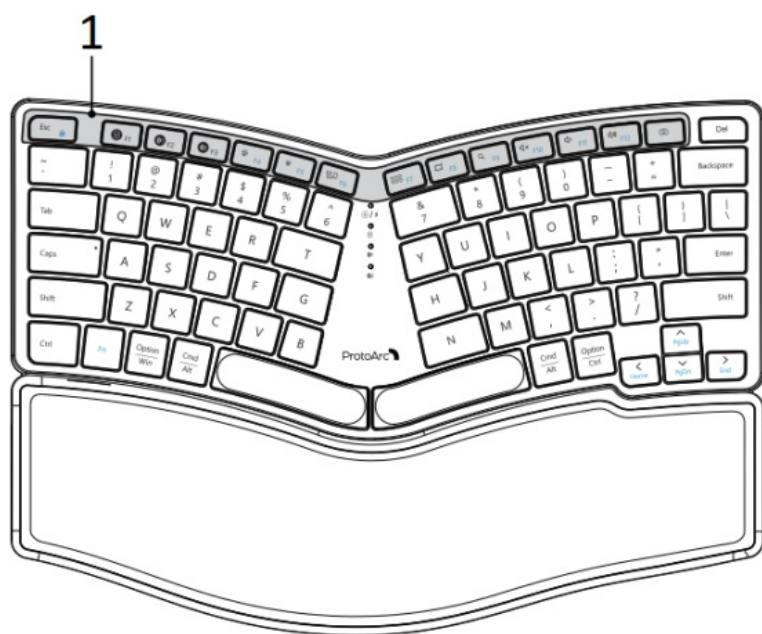

## 1. Multimedia Function Keys

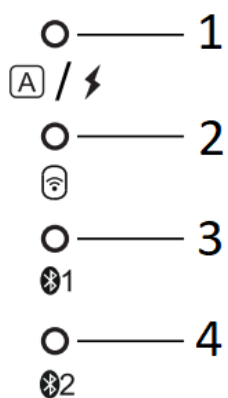 


1. Caps Lock / Low Power / Charging Indicator

2. 2.4G Indicator

3. BT1 Indicator

 
4. BT2 Indicator

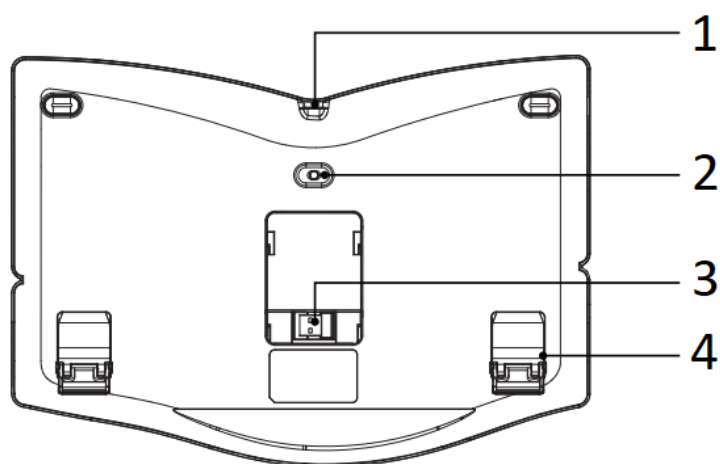

1. Type-C Charging Port
2. Power Switch
3. USB Receiver
4. Keyboard Tilt Legs


## 2.4G USB Connection

 
(1)

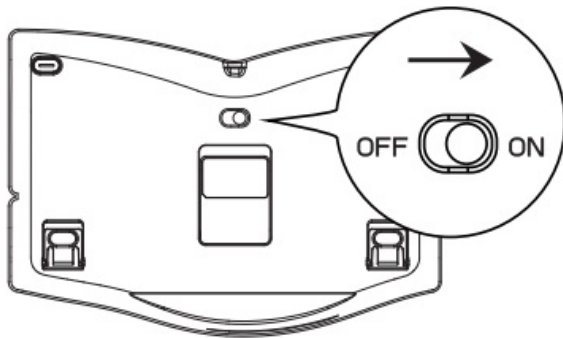


1. Turn the power switch to ON.

 (2)

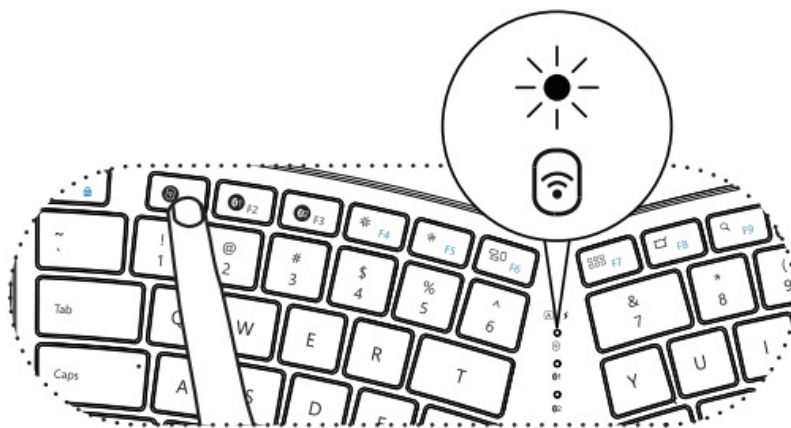

2. Press the  button until the 2.4G indicator lights up, and the keyboard enters 2.4G mode.

 (3)

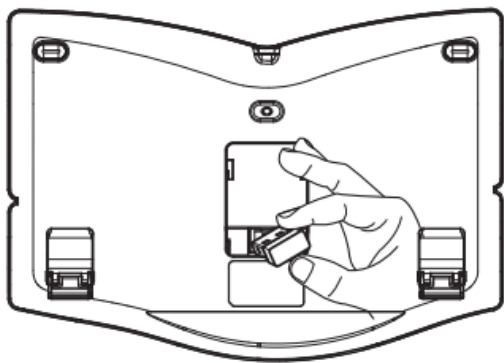

3. Take out the USB receiver from the bottom of the keyboard.


(4)



4. Plug the USB receiver into the USB port of the computer, then the keyboard can work normally.


### Bluetooth Connection

 (1)

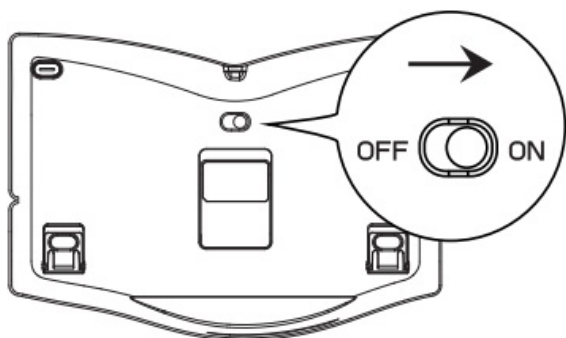

1. Turn the power switch to ON.

 
(2)

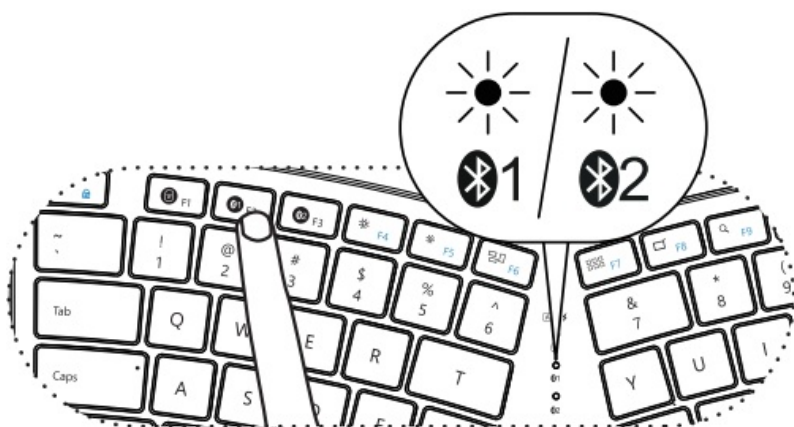

2. Press the channel switch button  /  until the corresponding channel indicator is on.

 
Long press the channel switch button for 3~5 seconds until the corresponding channel indicator flashes quickly, the keyboard enters Bluetooth pairing mode.

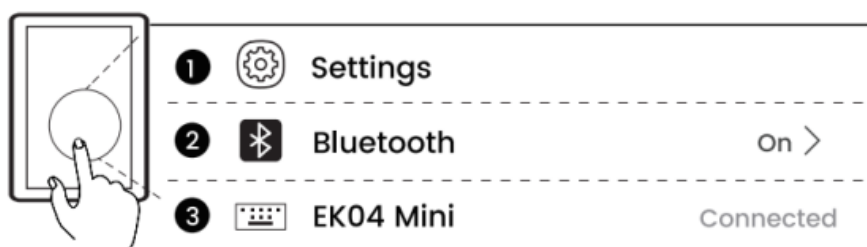


(3)



 3. Turn on the Bluetooth settings on your device, search or select “EK04 Mini” and start Bluetooth pairing until the connection is completed.
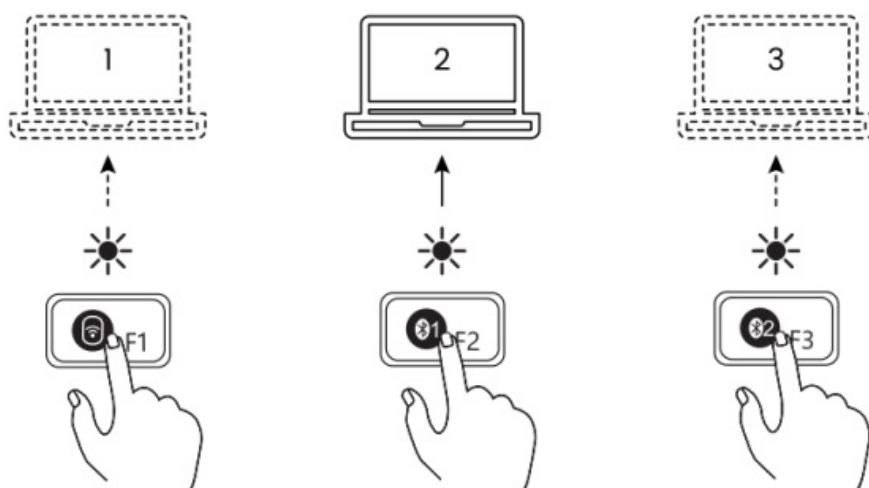
### Mode Switch Method



After channels  /  /  are all connected, press the corresponding channel


button to switch between multiple devices.

### Tips:

 FN lock is on: FN +  /  /  can also switch channels.

### Charging Guide

1. When the battery level is low, the indicator light will turn red and begin to flash until the keyboard is powered off.
2. To charge the device, insert the Type-C port into the keyboard and the USB-A port into the computer. The red indicator light stays on while charging.
3. A full charge typically requires 2 to 3 hours per cycle, and the indicator light will turn green when fully charged.

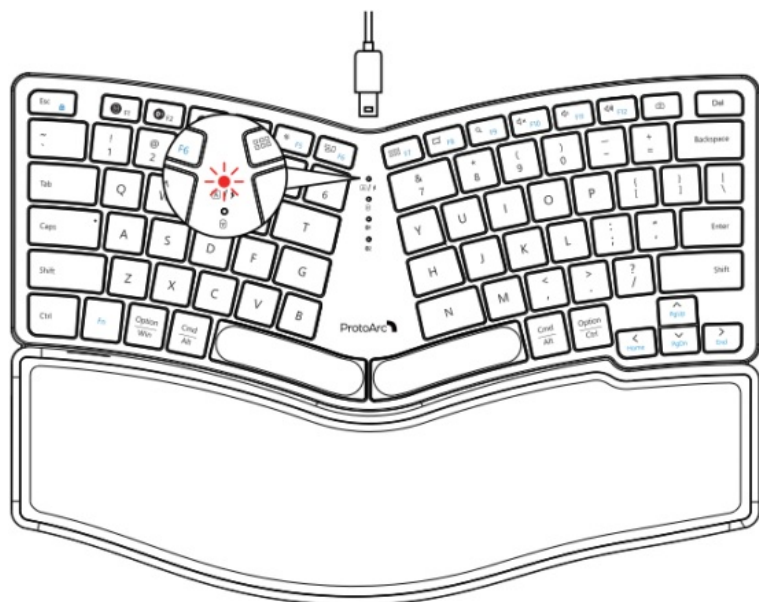















### Notice:

If the keyboard's low battery, there will be delays, freezes and other problems. Please connect to the power supply for charging in a timely manner to ensure that the keyboard has sufficient battery power to get normal performance.

### Multimedia Function Button

Buttons	Windows	Android	iPad	Mac OS
---------	---------	---------	------	--------



 F1	2.4G Channel	2.4G Channel	2.4G Channel	2.4G Channel
 F2	BT1 Channel	BT1 Channel	BT1 Channel	BT1 Channel
 F3	BT2 Channel	BT2 Channel	BT2 Channel	BT2 Channel
 F4	Increase brightness	Increase brightness	Increase brightness	Increase brightness
 F5	Decrease brightness	Decrease brightness	Decrease brightness	Decrease brightness
 F6	Window switching	Window switching	Task view	Multi-window preview
 F7	Task view	Task view	Window switching	Window switching
 F8	Show desktop	Go home	Go home	Show home
 F9	Search	Search	Search	Search
 F10	Mute	Mute	Mute	Mute
 F11	Volume down	Volume down	Volume down	Volume down
 F12	Volume up	Volume up	Volume up	Volume up
	Screenshot	Screenshot	Screenshot	Screenshot
Esc 	Press FN+ESC to turn ON / OFF the FN function			

**FN lock default is off:** Pressing directly will activate multimedia functions, and press FN + F1-F12 to activate the F key functions.

**FN lock is on:** Pressing directly will activate F1-F12 and press FN + F1-F12 to activate multimedia functions.



When the Fn lock is turned on/off, the corresponding channel light will light up for 3s (white light) and then turn off.







Product Parameters












Battery capacity	280mAh
Working voltage	3.7V
Working current	≤2mA
Sleeping current	≤0.03mA
Standby time	200 Days
Working time	140 Hours
Charging time	2-3 Hours
Wake up way	Press any key
Dimensions	332 x 230 x 32 mm / 13.1 x 9.1 x 1.3 in
System Compatibility	2.4G: Windows System Bluetooth: Windows 7 to 11, MacOS 10.10 or later, iPadOS 7 or later , Android 4.4 or higher.




How to Use Special Characters in British English

On MacOS/iPadOS/iOS system:

Press the key and you can type the symbol shows in the right square frame.			
	\$		2





			
			






Press and hold  , then press the corresponding key, you can type the symbol shows in the right square frame.			
			
			
			




Press and hold the key  , then press the corresponding key, you can type the symbol shows in the right square frame	
	

**On Android/Windows:**

Press the key and you can type the symbol shows in the right square frame.

	,		2
	#		,
	\		

Press and hold the key “  ”, then press the corresponding key, you can type the symbol shows in the right square frame.			
	`		“
	~		@
			

Press and hold the key “  ”, (the key on the right side of the keyboard), then press the corresponding key, you can type the symbol “ ” and ” €”.			
			€

Tips


1. If the Bluetooth connection is not working properly, turn off and turn on the keyboard or to restart the device's Bluetooth and attempt to reconnect. Or delete the extra Bluetooth option name in the Bluetooth connection list of the device and reconnect.
2. To switch to a successfully connected channel, press the channel button and wait for 3 seconds before continuing to use.
3. The keyboard has a memory function. When it connected on a specific channel, turn off the keyboard and turn on again, they will automatically connect to the default channel and this channel indicator is on.
4. For UK users, Why is the keyboard English US (QWERTY) layout when typing?  
Before using the keyboard, please set the keyboard language to English (UK) first:  
(Samsung tablet for example) Settings > General management > Samsung Keyboard settings > Languages and types > Manage input languages > Choose English (UK)  
(OPPO mobile phones for example) Setting > More setting > Language & input > Physical Keyboard > EK04 Mini > Set keyboard layouts > Choose English (UK)


### **Sleep Mode**


1. When the keyboard is not used for more than 60 minutes, it will automatically enter into sleep mode and the indicator light will turn off.
2. When using the keyboard again, just press any key, the keyboard will wake up within 3 seconds, and the lights come back on and keyboard starts working.


### **Safety Warning**


**IMPORTANT: To reduce risk of fire, electric shock, or injury, follow these safety instructions.**


 **Charging safely:** Use only the provided cable. Charge in a well-ventilated, dry area away from inflammable materials.


 **Battery Handling:** Do not attempt to replace the item's lithium battery. Battery replacement should be conducted by qualified personnel to prevent hazards.


 **Heat Exposure:** Avoid leaving the item in high-temperature environments or in direct sunlight, which could result in a fire hazard.

 **Liquid Exposure:** Keep the item away from water and liquids. Do not use if wet until thoroughly dried.

 **Damage and Leakage:** Cease usage and consult customer service if the item is damaged or the battery leaks.

 **Correct Disposal:** Follow local regulations for disposing of electronic devices and batteries. Do not dispose of with household waste.

 **Radio Frequency Interference:** This device may cause interference with other electronics. Keep a safe distance from sensitive devices.

 **child safety:** Keep the item and its components out of reach of children to avoid choking or battery ingestion hazards. Never allow children to handle the item unsupervised.

**CAUTION:** Non-compliance with the above warnings can lead to serious injury or property damage.

For further assistance or information, please contact our customer service.  
Emergency Contact: +1 [866-287-6188](tel:866-287-6188) (United States)

**EU Declaration of Conformity**

<b>Declared Object:</b>	Wireless Ergonomic Keyboard
<b>Model:</b>	EK04 Mini
<b>Rating:</b>	3.7V 10mA
<b>Input:</b>	5V 250mA
<b>Place of Production:</b>	Made in China
<b>Manufacturer:</b>	Shenzhen Hangshi Electronic Technology Co., LTD

<b>Email:</b>	<a href="mailto:chen.zhao@bow.cn">chen.zhao@bow.cn</a>
<b>Address:</b>	Floor 2 Building A, Zone , Democratic West Industrial Zone, Democratic Community, Shajing Street, Bao'an District, Shenzhen City, Guangdong Province, China, 518104
<b>European Representative:</b>	<div> <div>EC</div> <div>REP</div> </div> <p>Business name: g.L.L. GmbH Business address: Bauernvogtkoppel, 55c, 22393, Hamburg, Germany Email: <a href="mailto:g.L.L.DE@outlook.com">g.L.L.DE@outlook.com</a> Tel: +49 162 3305764</p> <div> <div>UK</div> <div>REP</div> </div> <p>Business name: AMANTO INTERNATIONAL TRADE LIMITED Business address: The Imperial, 31-33 St Stephens Gardens, Notting Hill, London, United Kingdom, W2 5NA Email: <a href="mailto:AmantoUK@outlook.com">AmantoUK@outlook.com</a> Tel: +44 7921 801 942</p>
<p><b>It is our sole responsibility to declare that the above products are in full compliance with Directive 2014/53/EU, 201/85/EU (as amended)</b></p>	
<b>Position:</b>	Managing Director
<b>signature:</b>	ZHAO CHEN
<b>Date of sign:</b>	2022.1.5
<b>EU agent name:</b>	Tong Jia

Date of sign:	2022.1.5
---------------	----------



## Documents / Resources

	<a href="#">ProtoArc EK04 Mini Ergonomic Keyboard [pdf]</a> User Manual EK04 Mini Ergonomic Keyboard, EK04, Mini Ergonomic Keyboard, Ergonomic Keyboard, Keyboard
--	--

## References

- [User Manual](#)

ProtoArc

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website



☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.