



[Home](#) » [ProtoArc](#) » **ProtoArc EK04 Numeri Ergonomic Keyboard User Manual** 

Contents [[hide](#)]

 
- [1 ProtoArc EK04 Numeri Ergonomic Keyboard](#)
- [2 Packing List](#)
- [3 Product Features](#)
- [4 2.4G USB connection](#)
- [5 Bluetooth Connection](#)
- [6 Channel Switch Method](#)
- [7 Multimedia Functions](#)
- [8 Charging Guide](#)
- [9 Product Parameters](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)

ProtoArc 

ProtoArc EK04 Numeri Ergonomic Keyboard




Packing List

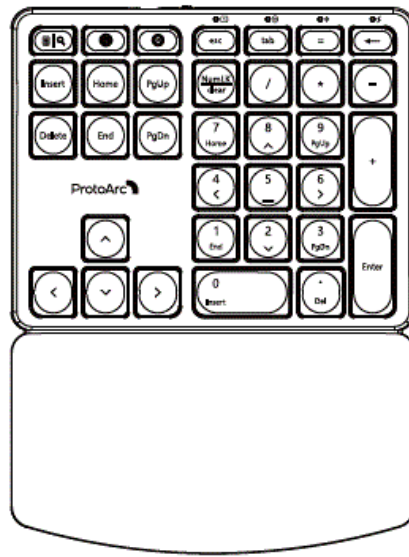


Number Pad* 1



 USB Receiver* 1

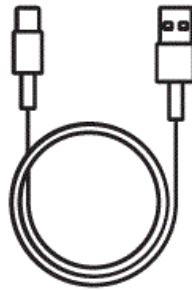


Type-C Charging Cable* 1

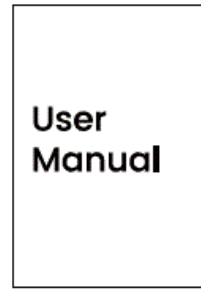 





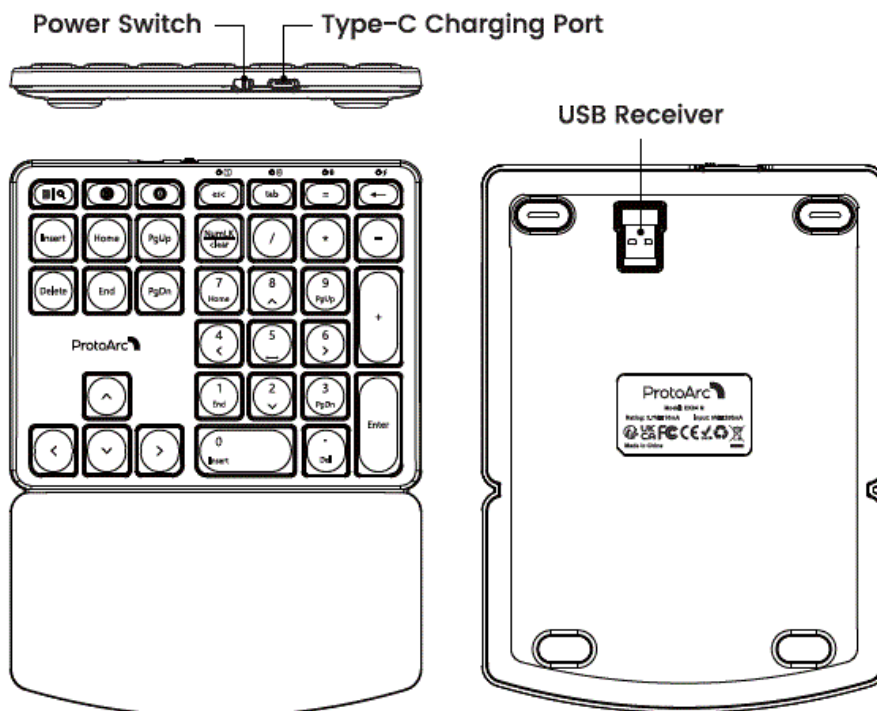 


User Manual* 1

Product Features

 



Indicator Lights Introduction:


-  Num LK White Indicator
-  2.4G Channel Switching White Indicator
-  Bluetooth Channel Switching White Indicator
-  Charging / Low Battery Indicator
 -  **Charging:** Red Light
 -  **Fully Charged:** Green Light
 -  **Low Battery.** Red Light Flashing

2.4G USB connection


1. Turn the power switch to ON.

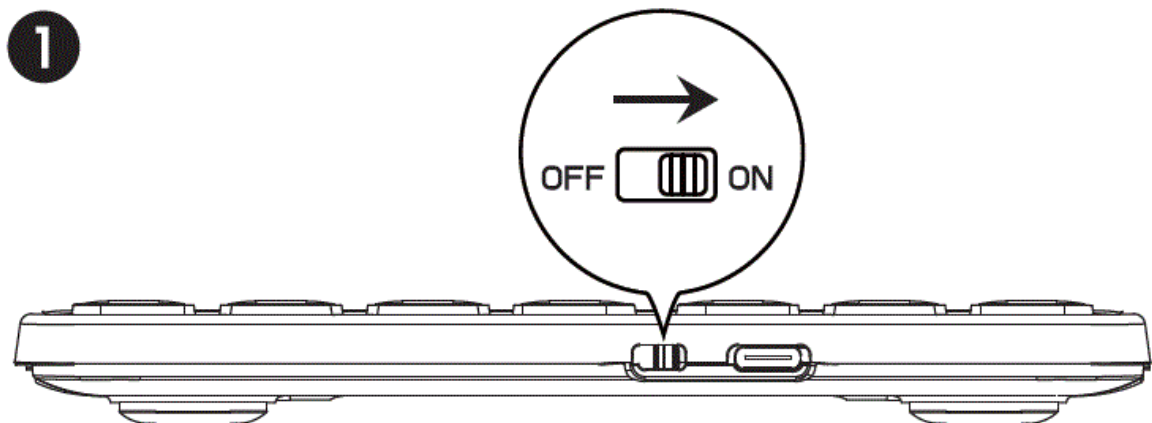

 2. Press , until the 2.4G indicator lights up to activate 2.4G mode.

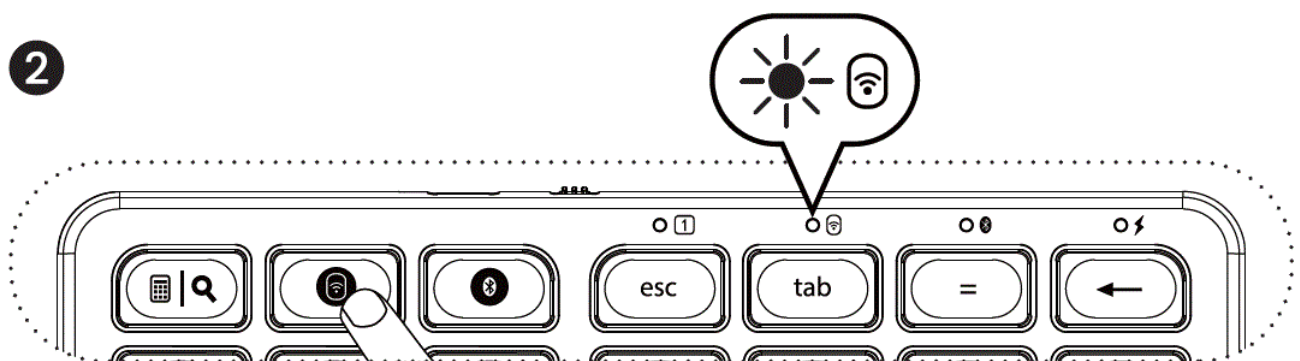


 
3. Take out the USB receiver from the bottom of the number pad.
4. Plug the USB receiver into your computer's USB port.

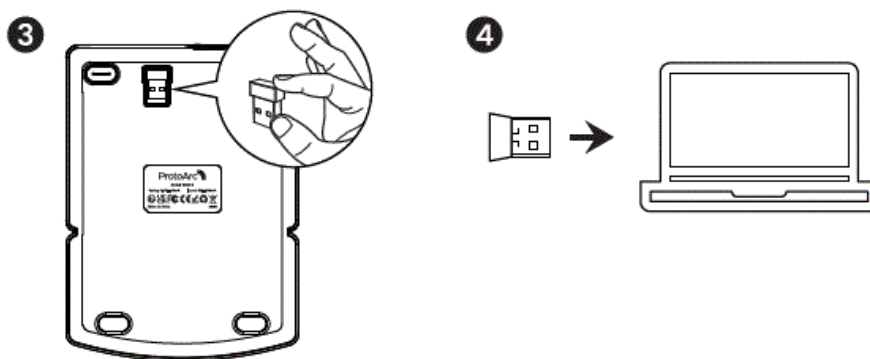


Bluetooth Connection

 
1. Turn the power switch to ON.

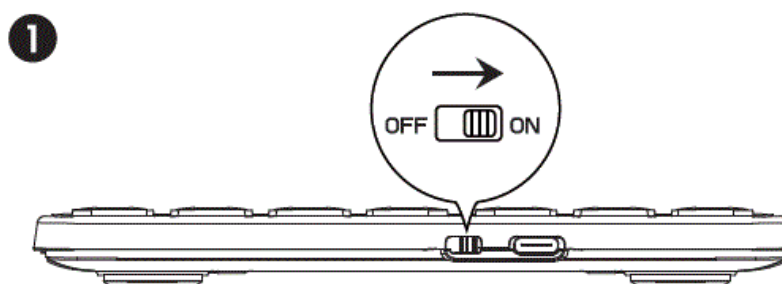

  
2. Press and hold  for 3—5 seconds until the bluetooth channel indicator flashes rapidly (Bluetooth pairing mode).

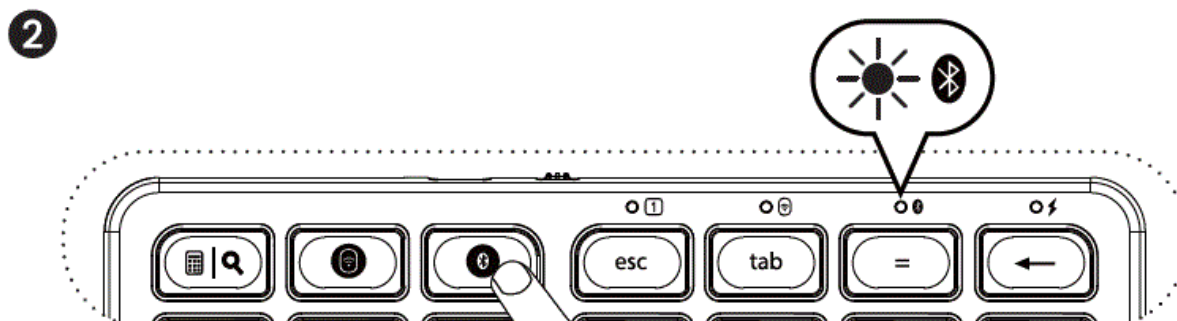

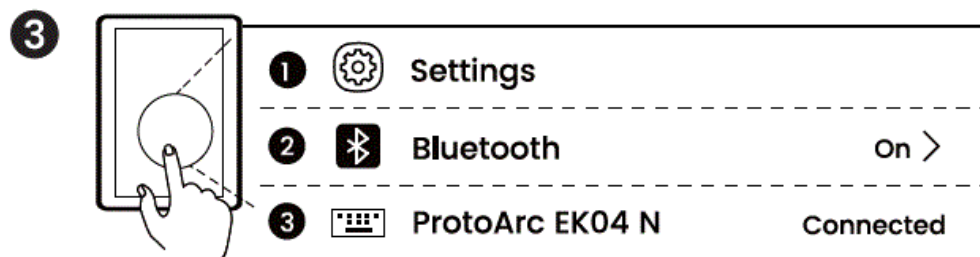

 3. Enable Bluetooth on your device, search for or select “ProtoArc EK04 N”, and complete pairing and connection.



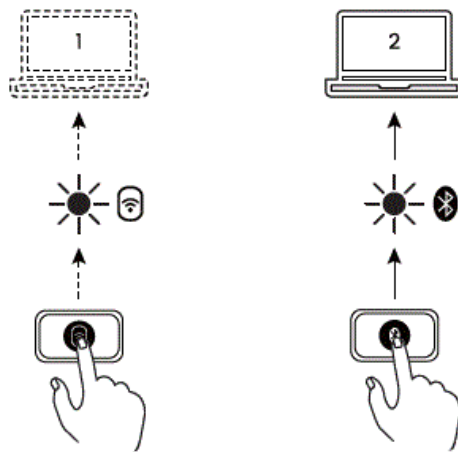



Channel Switch Method




After channels  /  are connected, press the corresponding channel button to switch between 2 devices.

Multimedia Functions

| Keys | Windows | Mac OS |
|---|-------------------|-------------------|
|  | 2.4G Channel | / |
|  | Bluetooth Channel | Bluetooth Channel |
|   | Calculator | Search |

Charging Guide

 1. When the battery is low, the Low Battery Red Indicator flashes until the number pad powers off.
2. To charge, insert the Type-C end into the number pad and the USB-A end into your computer's USB port. The red indicator remains solid during charging.
3. A full charge takes 2—3 hours. The indicator turns green when charging is complete.

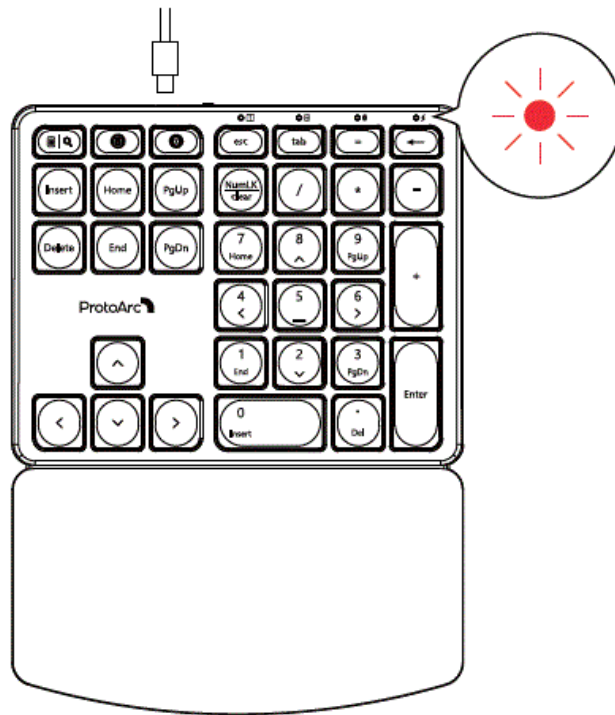

Product Parameters

| | |
|------------------------------|---------------------------------------|
| Battery Capacity | 280 mAh |
| Working Voltage | 3.7 V |
| Working Current | ≤2.5 mA |
| Sleeping Current | ≤0.03 mA |
| Standby Time | 100 Days |
| Working Time | 112 Hours |
| Charging Time | 2-3 Hours |
| Wake up Way | Press any key |
| Dimensions | 152*206*16.4 mm / 5.98*8.11*0.65 in |
| System Compatibility: | |
| 2.4G Channel | Windows 7 to 11 |
| Bluetooth Channel | MacOS 10.10 or later, Windows 7 to 11 |

Sleep Mode

1. When the number pad is not used for more than 60 minutes, it will automatically enter into sleep mode and the indicator light will turn off.
2. When using the number pad again, just press any key, the number pad will wake up

within 3 seconds, and the lights come back on and the number pad starts working.

Safety Warning

IMPORTANT: To reduce risk of fire, electric shock, or injury, follow these safety Instructions.

- **Charging Safely:** Use only the provided cable. Charge in a well-ventilated, dry area away from inflammable materials.
- **Battery Handling:** Do not attempt to replace the item's lithium battery. Battery replacement should be conducted by qualified personnel to prevent hazards.
- **Heat Exposure:** Avoid leaving the item in high-temperature environments or in direct sunlight. which could result in a fire hazard.
- **Liquid Exposure:** Keep the item away from water and liquids. Do not use if wet until thoroughly dried.
- **Damage and Leakage:** Cease usage and consult customer service if the item is damaged or the battery leaks.
- **Correct Disposal:** Follow local regulations for disposing of electronic devices and batteries. Do not dispose of with household waste.
- **A Radio Frequency Interference:** This device may cause interference with other electronics. Keep a safe distance from sensitive devices.
- **Child Safety:** Keep the item and its components out of reach of children to avoid choking or battery ingestion hazards. Never allow children to handle the item unsupervised.

CAUTION: Non-compliance with the above warnings can lead to serious injury or property damage.

- For further assistance or information, please contact our customer service.
- **Emergency contact:** +1 [866-287-6188](tel:866-287-6188) (United states)

EU Declaration of Conformity

- **Declared Object:** Ergonomic Numeric Keypad
- **Model:** EK04 N
- **Rating:** 3.7v=10mA

- **Input:** 5v=250mA
- **Place of Production:** Made in China
- **Manufacturer:** Shenzhen Hangshi Electronic Technology Co., LTD
- **Email:** chen.zhao@bow.cn
- **Address:** Floor 2, Building A1, Zone G, Democratic West Industrial Zone, Democratic Community. Shajing Street. Bao'an District, Shenzhen City, Guangdong Province, China, 518104

European Representative:

EC REP

- **Business name:** g.L.L. GmbH
- **Business address:** Bauernvogtkoppel, 55c, 22393, Hamburg, Germany
- **Email:** g.L.L.DE@outlook.com
- **Tel:** +49 162 3305764

UK REP

- **Business name:** AMANTO INTERNATIONAL TRADE LIMITED
- **Business address:** The Imperial, 31-33 St Stephens Gardens, Notting Hill, London, United Kingdom, W2 5NA
- **Email:** AmantoUK@outlook.com
- **Tel:** +44 7921 801 942

It is our sole responsibility to declare that the above products are in full compliance with

- **Position:** Managing Director

- **Signature:** ZHAO CHEN

- **Date of Sign:** 2022.1.5

- **EU agent name:** Tong Jia

- **Date of Sign:** 2022.1.5

- Directive 2014/53/EU, 2011/65/EU (as amended)

CONTACT US

www.protoarc.com


- **US**

- support@protoarc.com
- (+D [866-287-6188](tel:866-287-6188))
- Monday-Friday: 10am—1pm , 2pm -7pm (Eastern Time)
- Closed during Holidays

- **UK**

- support-uk@protoarc.com

Documents / Resources
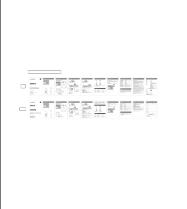
| | |
|--|--|
|  | ProtoArc EK04 Numeri Ergonomic Keyboard [pdf] User Manual EK04, EK04 Numeri Ergonomic Keyboard, EK04, Numeri Ergonomic Keyboard, Ergonomic Keyboard, Keyboard |
|--|--|

References

- [User Manual](#)

■ ProtoArc

◆ EK04, EK04 Numeri Ergonomic Keyboard, Ergonomic Keyboard, Keyboard, Numeri Ergonomic Keyboard, ProtoArc

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.