



## **Contents** [ [hide](#) ]

- [1 Prov rtec TF-01 Smart Tower Fan](#)
- [2 Product Information](#)
- [3 Important Safety Instructions](#)
- [4 Package Contents](#)
- [5 Specification](#)
- [6 Introduction](#)
- [7 Assembly Instructions](#)
- [8 Controls & Indicators](#)
- [9 Display Screen Instructions](#)
- [10 Cleaning & Maintenance](#)
- [11 App Download Instructions](#)
- [12 Troubleshooting](#)
- [13 FCC Statement](#)
- [14 Warranty](#)
- [15 Contact Us](#)
- [16 FAQ](#)
- [17 Documents / Resources](#)
  - [17.1 References](#)



**Prov rtec TF-01 Smart Tower Fan**



## Product Information

- The WindMaster Smart Tower Fan TF-01 comes with various components such as a control panel, front base, air inlet, power cord, display screen, carry handle, blade, rear base, and a remote control.
- Each part plays a crucial role in the functionality and operation of the tower fan.
- Do not connect the product to the power source until assembly is complete.
- Install the front base and the rear base properly.
- Attach the base to the fan and secure it by screwing the screw nut. Tighten the 4 base set screws in turn.
- Remove the screw nut on the bottom of the fan.
- Thread the power cord through the center hole of the installed base and insert it into the cord groove.
- After assembly, place the fan upright on the ground.

## Important Safety Instructions

- Read and save these safety instructions before use.

## **General Safety**

1. Please strictly follow the instructions in this user manual when using the product to avoid accidents such as fire, electric shock, or personal injury.
2. This product is suitable for individuals aged 12 and above. Children or individuals with sensory impairments or intellectual disabilities must be supervised by guardians when using this product.
3. The product is intended for indoor ventilation and should be placed on a flat floor. Do not use it outdoors or to discharge hazardous and explosive substances and vapors.

## **Operation Safety**

1. For your safety, make sure your hands are dry when using this product.
2. Do not cover or insert any foreign objects into the air inlet or the air outlet, as it may damage the product, resulting in an electric shock or fire.
3. To reduce the risk of fire or electric shock, do not use the product with any solid-state speed control device.

## **Electricity Safety**

1. The input voltage of the product is 120V AC, 60Hz. Make sure that the voltage meets the requirements before use.
2. The product has a polarized plug (one blade is wider than the other).  
To reduce the risk of electric shock, the plug can only be inserted into a polarized outlet in one way. If the plug does not fit completely into the outlet, please reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to damage this safety feature.
3. If the product is damaged or malfunctions during operation, please contact customer service or a qualified electrician for repair or replacement. Do not attempt to repair or replace the product yourself.

## **Warning**

1. INGESTION HAZARD: This product contains a button cell or coin battery.
2. DEATH or serious injury can occur if ingested.

3. A swallowed button cell or coin battery can cause Internal chemical Burns in as little as 2 hours.
4. KEEP new and used batteries OUT OF REACH of CHILDREN.
5. Seek immediate medical attention if a battery is suspected to be swallowed or inserted into any part of the body.

 
### **The Statement of Battery Warning**

1. Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
2. Even used batteries may cause severe injury or death.
3. Call a local poison control center for treatment information.
4. The battery model of the remote control is CR2025, and the rated voltage is 3V.
5. Non-rechargeable batteries are not to be recharged.
6. Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating), or incinerate. Doing so may result in injury due to venting, leakage, or explosion, resulting in chemical burns.
7. Ensure the batteries are installed correctly according to polarity (+ and -).
8. Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
9. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
10. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

### **Package Contents**




Tower Fan x1

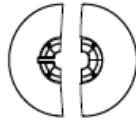


Fan Base x2



 Plastic Screw Nut x1  
(pre-install at the  
bottom of the fan)



Remote Control  
(with battery) x1

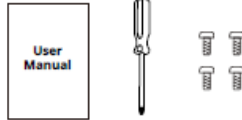 


User Manual & Tool Kit  
(base set screw x4,  
screwdriver x1)

## Specification

 Product	WindMaster Smart Tower Fan
Model No.	TF-01
Input	120V~ 60Hz
Rated Power	50W
Dimensions	931.5*315*315mm/36.6*12.4*12.4inch
Battery Type	CR2025 3V

## Introduction


a. Control Panel	b. Display Screen	c. Air Outlet
d. Front Base	e. Carry Handle	f. Set Screw
g. Air Inlet	h. Blade (built-in)	i. Rear Base
j. Power Cord (with plug)	k. Plastic Screw Nut	l. Remote Control

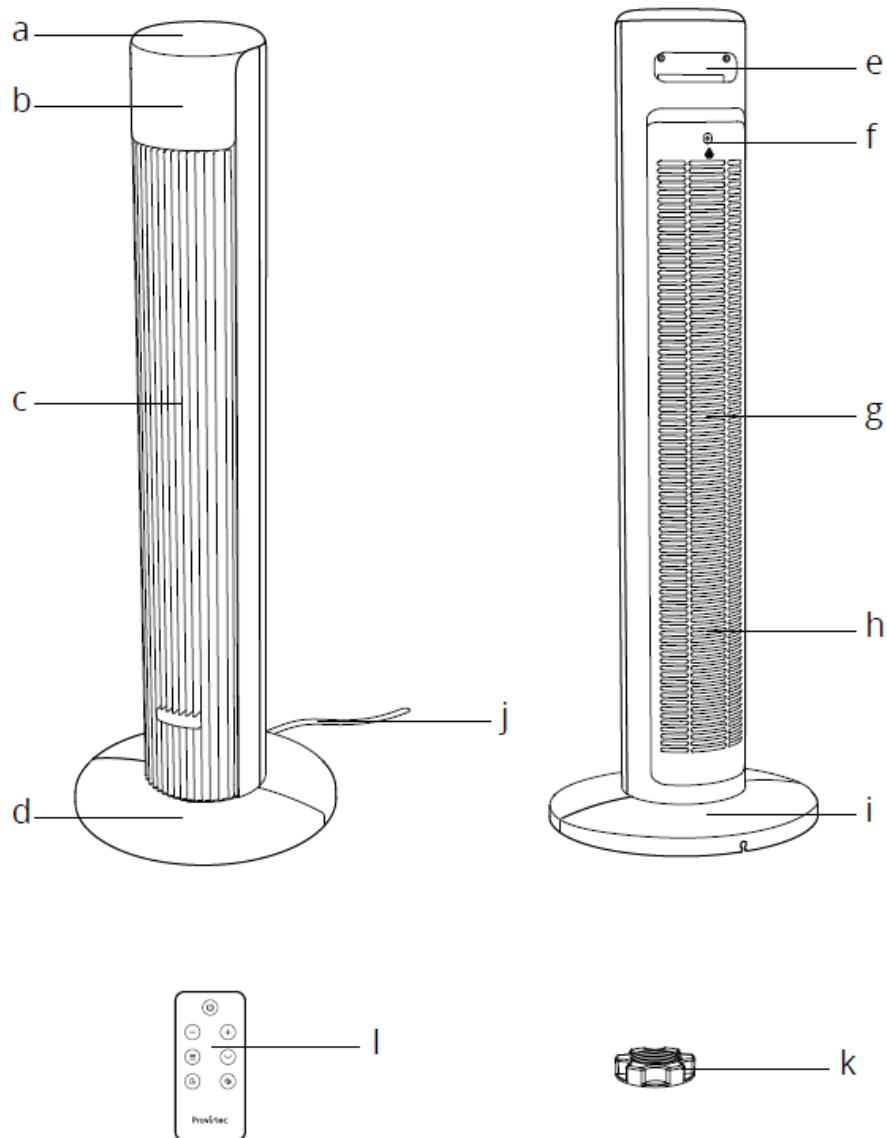


## Assembly Instructions

Do not connect the product to the power source until assembly is complete.

 
1. Install the front base and the rear base properly.

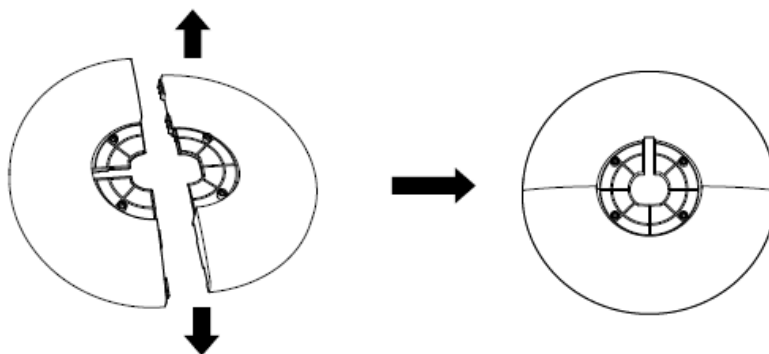

 
2. Remove the screw nut on the bottom of the fan.
3. Thread the power cord through the center hole of the installed base.

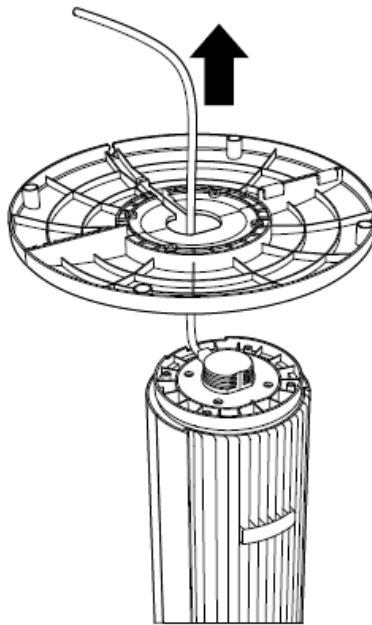

4. Attach the base to the fan and secure by screwing the screw nut.  
Then tighten the 4 base set screws in turn.

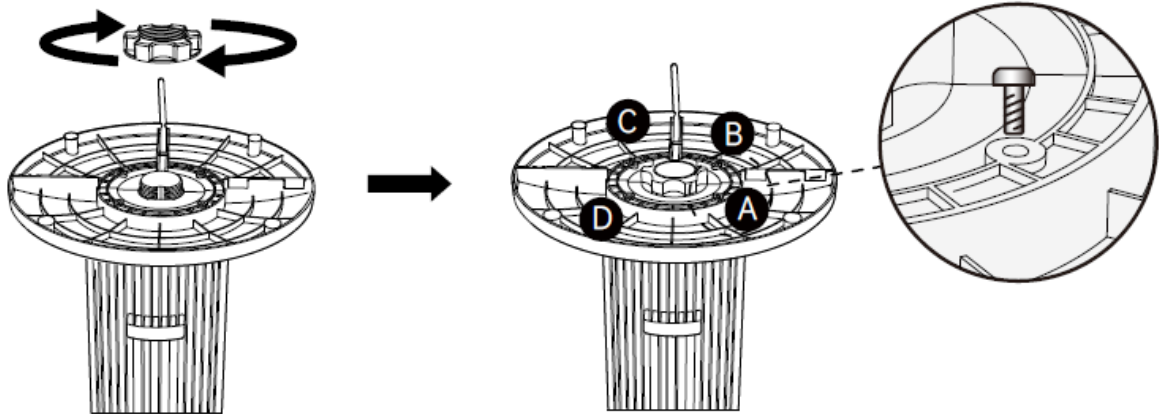 

 5. Insert the power cord into the cord groove..

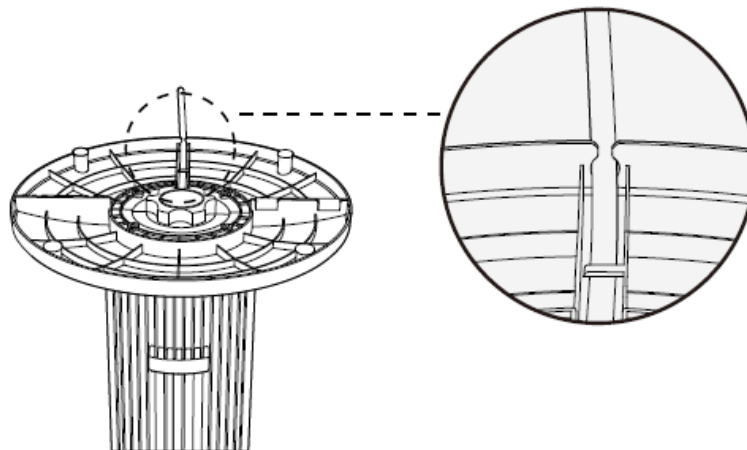


6. After assembly, place the fan upright on the ground.

## Controls & Indicators
 
### Touch Control Instructions

#### a. Control Panel

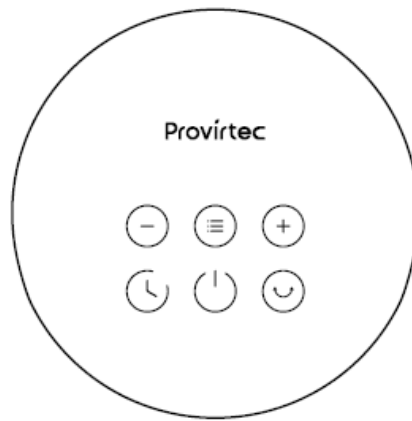

## b. Remote Control



### **On/Off**

- Press to turn on/off the fan.
- Long press for 3s to start network settings or reset the network (operate from the control panel only).

### **Mode**






- Press to cycle through Nature/Cool/Auto/Sleep mode.

### **Oscillation**



- Press to start/stop oscillating.

### **Timer**





- Press to set a timer (1-24h).
- When the timer is on, press  or  to increase or decrease the timer duration.
- Long press  or  to increase or decrease the timer duration quickly (operate from the control panel only).
- When the timer is on, long-press  for 3s to turn off the timer.





### **Increase fan speed**

- Press to increase fan speed (1-6 levels) in Nature/Cool/Sleep mode. Long press to increase fan speed quickly (operate from the control panel only).
- **Note:** When the fan is in Auto mode, it will run at the recommended fan speed and cannot be adjusted the fan speed by pressing  or .

 
### **Decrease fan speed**

- Press to decrease fan speed (1-6 levels) in Nature/Cool/Sleep mode.
- Long press to decrease fan speed quickly (operate from the control panel only).
- **Note:** When the fan is in Auto mode, it will run at the recommended fan speed and cannot be adjusted the fan speed by pressing  or .



### **Mute**



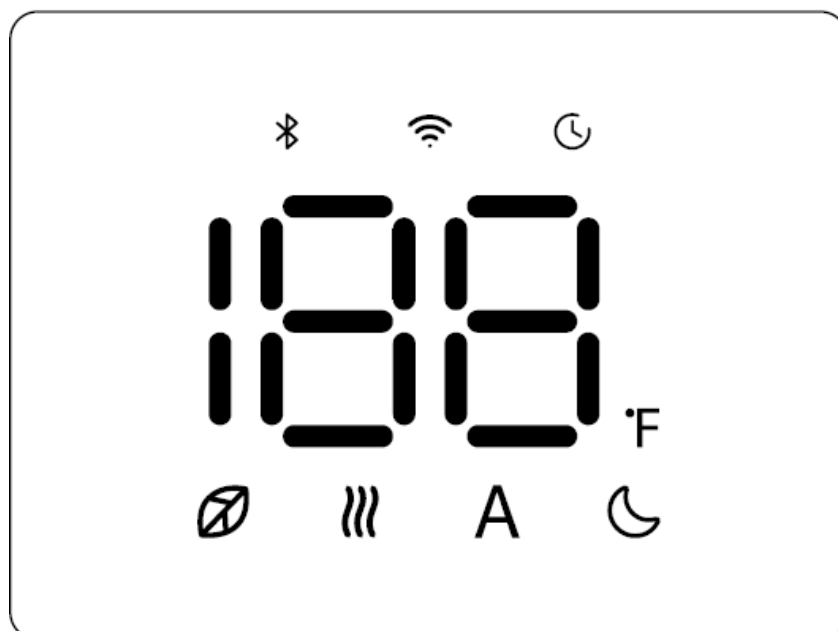


- Press to mute or unmute the sound.
-  +  Long-press On/Off and Timer for 3s at the same time to turn on/off the screen display (operate from the control panel only).
-  +  Long-press On/Off and Oscillation for 3s at the same time to turn on/off the child lock (operate from the control panel only).


## **Display Screen Instructions**




- If the fan is turned off or disconnected from power, it will run at the previous settings (except the timer setting) when it is turned on again.
- The following are the statements for different modes of the fan.

Icon	Statement	Display
	<b>Nature mode:</b>  The fan runs at speed 1 to circulate the air. You can change the fan speed using the control panel, remote control, or the app.	White light is always on.
	<b>Cool mode:</b>  The fan runs at speed 6 to circulate the air. You can change the fan speed using the control panel, remote control, or the app.	
Icon	Statement	Display

	<p><b>Auto mode:</b></p> <p>The fan speed adjusts to the indoor temperature. You cannot change the fan speed in Auto mode, but you can set different fan speeds for different temperatures using the app.</p>	
	<p><b>Sleep mode:</b></p> <p>The fan runs at a speed with lower noise to circulate the air. The screen display will turn off after 5 seconds when the Sleep mode is turned on. You can change the default fan speed by the control panel, remote control, or the app. You can set the adjustable fan speed range by the app. For more details, please refer to the app.</p>	<p>White light is always on.</p>
	<p>WiFi is connected.</p>	<p>White light is always on.</p>
	<p>Connecting to WiFi.</p>	<p>White light is flashing.</p>
	<p>BLE is connected.</p>	<p>White light is always on.</p>
	<p><b>Timer:</b></p> <p>You can set a timer to turn off the fan for your needs.</p>	<p>In the process of setting:</p> <p>White light is flashing.</p> <p>Finish setting:</p> <p>White light is always on.</p>

	<b>Indoor temperature:</b> Display the current indoor temperature in real time.	White light is always on.
---	---	---------------------------


Icon	Statement	Display
	<b>Fan speed:</b>  When you turn on Nature mode or Cool mode, you can set a fan speed (1-6 levels). In Sleep mode, the fan speed can be adjusted within the adjustable fan speed range present in the app. After setting, the display screen will show the indoor temperature.	White light on for 5s.
	<b>Timer duration:</b>  When the Timer is turned on, you can set a timer duration (1-24h). After setting, the display screen will show the indoor temperature.	

## Cleaning & Maintenance

**Caution:** Before performing any cleaning and maintenance, please turn off the fan and unplug it.

For optimal performance, it is recommended to clean the tower fan after a long period of operation or when it is not in use for an extended period before storing it.

 1. Do not immerse the fan in water or allow water to enter the interior of the fan.
2. Use a soft, damp cloth to clean the outer surface, air inlet, and outlet.
3. For cleaning the air inlet grille: use a screwdriver to remove the set screw on the air inlet. Gently lift the grille upwards to remove it for cleaning. For cleaning the fan blade: use a screwdriver to remove the screw located underneath the blade, and then lift the blade upwards to remove it for cleaning.

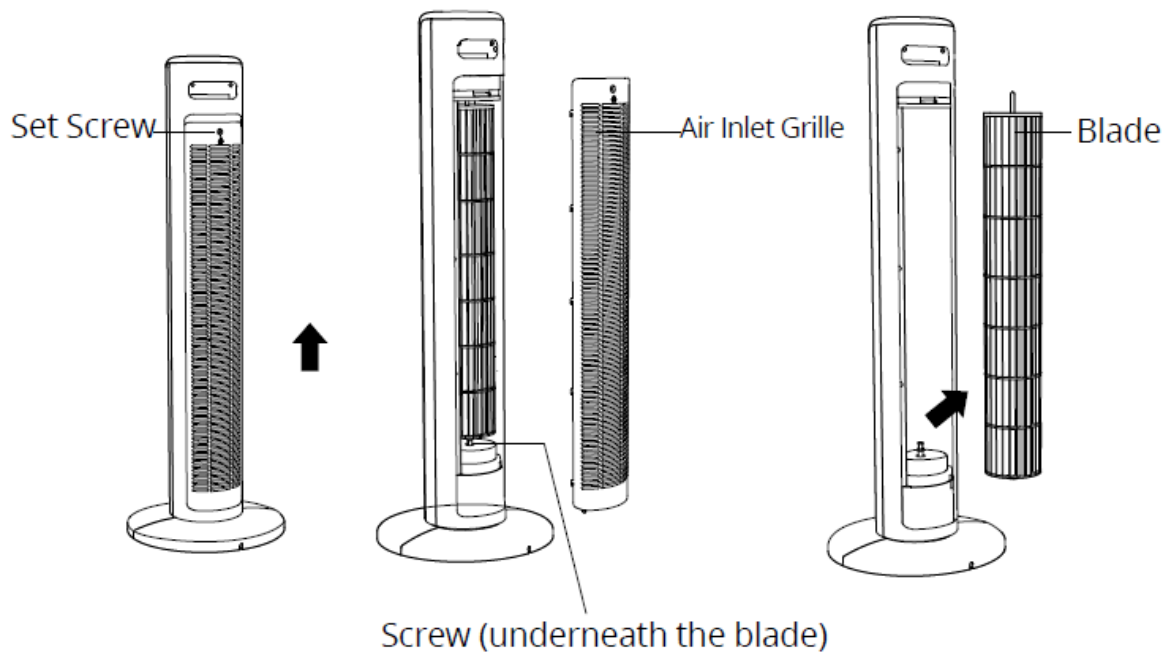

**Note:** After cleaning, allow the air inlet grille and fan blade to dry completely. Then, follow the reverse steps of the mentioned process to reinstall them, ensuring they are properly installed before resuming the use of the tower fan.

## App Download Instructions

- Download the Prodigytec app from the App Store (IOS device) or Google Play (Android device).



- Register your account via email. After registration is completed, enter “Home”, and select “Add device” – “Home Appliance” – “ WindMaster Smart Tower Fan TF-01”.
- Follow the on-screen instructions to add the tower fan.

## Troubleshooting

### Tower Fan Malfunction Instructions

 
Issues	Solutions
--------	-----------

The fan fails to turn on.	Please check if the power cord plug is inserted into the outlet and ensure that the plug is not loose.
	Please check if the power cord is damaged. If it is damaged, stop using the fan and contact our customer service.
	The fuse is blown. Refer to the Power Cord and Plug Repair Instructions.
	Please replace the outlet and try to turn on the fan again.
The fan has weak airflow.	The air inlet is too close to the wall, or the air inlet is blocked.
There is noise when the fan is operating.	If the fan is running at a high fan speed, it may make noise. Please decrease the fan speed.
The fan is shaking and wobbling.	The floor is uneven. Please place the fan on a flat, level surface.
	The fan base is not properly installed. Please install the base according to the assembly instructions.
Other malfunction.	If not for the reasons mentioned above, please contact customer service.

## Power Cord and Plug Repair Instructions


This product features a plug with a fuse for overload protection. If the fuse blows, it indicates that the product may be overloaded or short-circuited. Please unplug the product immediately and follow the repair instructions below.

- Slide the fuse cover at the top of the plug in the direction indicated by the arrow on the marker.

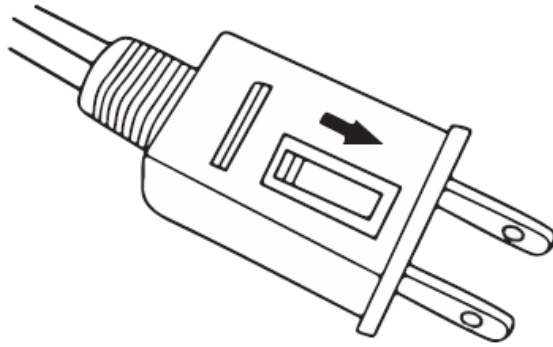

- Remove the damaged fuse carefully and replace it with a new fuse.

 Install the fuse in place, and slide the fuse cover at the top of the plug toward the power cord side.

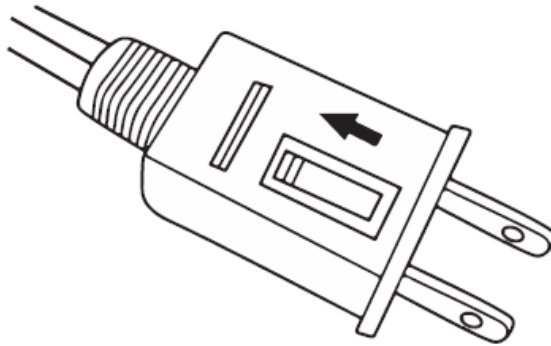

#### **Note:**

1. The damaged fuse should be placed in the corresponding waste bin.
2. If you cannot see the fuse when you open the fuse cover, please contact a qualified technician to replace the power cord. Otherwise, if the plug is damaged, please discard the product.
3. If you need more information on how to safely replace a fuse, please contact our customer service for assistance.

#### **FCC Statement**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for

compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, according to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used under the instructions, any cause of harmful interference will not occur in a particular installation. If this equipment does cause harmful interference with radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with a minimum 20cm distance between the radiator and your body: Use only the supplied antenna.

## Warranty

- 12-month warranty for the tower fan.
- 60-day money-back guarantee for quality issues.
- **Note:** Damages caused by the disregard of this user manual are not subject to warranty.

## Contact Us

- At Provirtec, we value your experience.
- If you have any questions about our product, please contact us through our store or app.
- Our dedicated team will respond promptly to provide you with the support you need.



- Thank you for choosing Provirtec, and we look forward to serving you.

## FAQ

- **Q: Can I use the tower fan with a solid-state speed control device?**
  - **A:** No, to reduce the risk of fire or electric shock, do not use the product with any solid-state speed control device.
- **Q: How do I ensure safety when using the tower fan?**
  - **A:** Make sure your hands are dry when using the product and avoid covering or inserting foreign objects into the air inlet or outlet.

## Documents / Resources

	<a href="#">Prov rtec TF-01 Smart Tower Fan [pdf]</a> User Manual TF01, 2BGYX-TF01, 2BGYXTF01, TF-01 Smart Tower Fan, TF-01, Smart Tower Fan, Tower Fan, Fan
---	---

## References

- [User Manual](#)

Prov rtec  
2BGYX-TF01 , 2BGYXTF01 , fan, Prov rtec, Smart Tower Fan, TF-01 , TF-01 Smart Tower Fan, TF01 , TOWER FAN

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.