

ProXtend X701 4K Web Camera User Manual

Home » proxtend » ProXtend X701 4K Web Camera User Manual

Contents

- 1 ProXtend X701 4K Web Camera
- **2 Product Information**
- **3 Product Usage Instructions**
- **4 PRODUCT OVERVIEW**
- **5 FEATURES**
- **6 PLACE YOUR WEBCAM**
- **7 CONNECT TO COMPUTER**
- **8 SYSTEM REQUIREMENTS**
- 9 SPECIFICATIONS
- **10 CAPTURE VIDEO AND**

PHOTOS

- 11 SAFETY WARNINGS
- **12 DISCLAIMER**
- **13 WARRANTY**
- 14 Documents / Resources
 - 14.1 References
- 15 Related Posts



ProXtend X701 4K Web Camera



Product Information

Specifications

• Image Sensor: 1/2.7 inch CMOS image sensor

• Megapixels: 8

• Max Resolution: 3840×2160

Video Resolution: 3840×2160/2592×1944/2048×1536/1920×1080/1280×720/640×480

• Video Decoding Format: YUY2/MJPG

Max FPS: 30 frames per second
Exposure Mode: Auto/Manual
White Balance: Auto/Manual

• Gain: Adjustable

Low Light Compensation: Yes
Viewing Angle: Not specified
Lens Focal Length: Not specified

• Focus Type: Autofocus

• Microphone: Omni-directional microphone

• Audio Sampling Rate: Not specified

· Audio Format: Not specified

• Interface: USB

Cable Length: Not specifiedCompatible OS: Not specified

Product Overview

The X701 is a 4K webcam with an 8 Megapixel 1/2.7 optical sensor and an omnidirectional microphone. It is designed to provide outstanding image quality for online meetings and video conferencing applications. The webcam ensures that everyone in the room is captured in the picture.

Features

- · HD sensor for high-quality image capture
- · Omni-directional microphone for clear audio
- · Mini-tripod attachment for flexible placement
- · Flexible clip/base for easy mounting on a computer monitor
- Autofocus for sharp and clear images

Product Usage Instructions

Place Your Webcam

You can place the webcam in three different ways:

- 1. On a computer monitor: Unfold the flexible clip and place the webcam to grip the edge of the screen with the foldable flexible clip.
- 2. On a mini-tripod: Attach the webcam to the mini-tripod using the provided attachment.
- 3. On a table: Simply place the webcam on a flat surface.

Connect to Computer

To connect the webcam to your computer:

1. Plug the USB cable into your PC's USB port.

Capture Video and Photos

To capture video and photos using the webcam:

- 1. Open the Microsoft Camera application from the Windows start menu.
- 2. Record video directly from the webcam to your local hard drive using the app.
- 3. Adjust the video settings of the webcam within the app.

Frequently Asked Questions (FAQ)

Q: What should I do if the webcam becomes hot after prolonged use?

A: We recommend disconnecting the webcam from the USB port if it becomes hot after working for a long time.

· Q: How should I clean the webcam?

A: Avoid touching the lens with your hands or any sharp or coarse items. Use a clean and soft cloth for cleaning.

· Q: What precautions should I take to avoid damage to the webcam?

A: Avoid knocks and bumps as impacts may cause damage to the lens, malfunction, or scratches to the surface.


· Q: Is there a warranty for the webcam?

A: Yes, we offer a 7-year warranty for products purchased from authorized distributors.

PRODUCT OVERVIEW

- 1. HD sensor
- 2. Omni-directional microphone

- 3. Mini-tripod attachment
- 4. Flexible clip/base
- 5. Autofocus

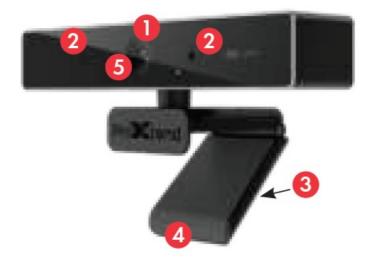

With its 4K 8 Megapixel 1/2.7" optical sensor, combined with an omnidirectional microphone, the X701 provides outstanding image quality, ensuring everyone in the room is in the picture. This webcam is the optimal choice for online meetings and video conferencing applications.

At ProXtend we understand that megapixels are not everything when it comes to image quality. That's why we focus on the hardware that really matters, ensuring that you are 'seen and not just heard'!

FEATURES


- 1/2.7" CMOS image sensor
- Megapixels: 8
- Resolution: 3840x2160p
- Autofocus
- · Omni-directional microphone
- · Universal mounting clip

PLACE YOUR WEBCAM

Place the webcam where you want it on a computer monitor, flat surface or tripod. On a monitor, unfold the flexible clip and place the webcam to grip the edge of the screen with the foldable flexible clip. Plug the USB cable into your PC's USB port.



CONNECT TO COMPUTER

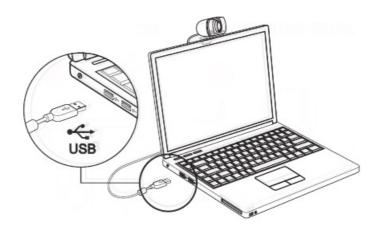

SYSTEM REQUIREMENTS

- IBM PC or compatible PC or laptop with USB port
- Pentium 1 GHz or higher CPU
- Minimum 500MB free hard disk space
- Minimum 256MB memory
- · Minimum Direct X9.O supported graphics card
- Windows XP/Vista/7/8/10

SPECIFICATIONS

- Image Sensor 1/2.7" CMOS Image Sensor
- Megapixels 8
- Max Resolution 3840×2160
- Video Resolution 3840×2160/2592×1944/2048×1536/1920×1080/1280×720/640×480
- Video Decoding Format YUY2/MJPG
- Max FPS 30 fps
- Exposure Mode Auto/Manual
- White Balance Auto/Manual
- · Gain Auto
- Low Light Compensation Auto
- Viewing Angle 90°

- · Lens Focal Length 10 cm to infinity
- · Focus Type Auto
- Microphone Omni-Directional
- Audio Sampling Rate 1 Channel 16bit 16K 32K 44.1K 48K
- Audio Format PCM, compatible UAC 1.0
- Interface USB
- · Cable Length 2 m
- Compatible OS Windows XP, Windows 7 (32bit/64bit) Windows 8. Windows 10. Android V5.0 or higher OS.
 MAC OS 10.6 or higher.

Features and specifications are subject to change without prior notice.


Once inside the app you can record video

CAPTURE VIDEO AND PHOTOS

- Video and photos can be taken with the web camera via the Microsoft Camera application, available from the Windows start menu.
- Once inside the app you can record video directly from the web camera to your local hard drive and adjust the video settings of the web camera.
- If using any other 3rd party camera or instant messaging software, please consult the publisher's user manual.

Video and photos can be taken with the web camera via the Microsoft Camera application, available from the Windows start menu.



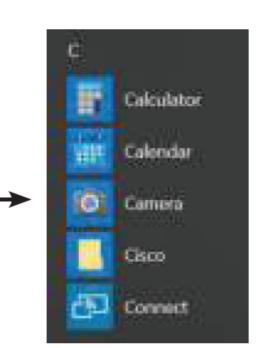

If using any other 3rd party camera or instant messaging software, please consult the publisher's user manual.

SAFETY WARNINGS

- Please do not place the webcam in extremely damp or dusty locations.
- Please do not place the webcam in places subject to extremely high temperatures, such as in a closed vehicle or in direct sunlight.
- Please do not attempt to modify this webcam or remove the webcam casing. Internal inspection and repairs should be carried out by an authorized service facility.
- Do not expose the product to fire, water, direct sunlight, or physical shock.
- If your webcam has been dropped or the casing has been damaged, disconnect it from your computer and contact your local dealer or an authorized service facility. Do not continue to use the camera.

CAUTIONS

If the webcam is hot after working for a long time, we suggest you disconnect it from the USB port. Avoid touching the lens with your hands and sharp or coarse items; use a clean and soft cloth for cleaning. Avoid knocks and bumps; impacts may cause damage to the lens, malfunction, or scratches to the surface.

DISCLAIMER

Every effort has been made to ensure that the information and procedures in this guide are accurate and complete, no liability can be accepted for any errors or omissions and we reserve the right to make product changes without further notice.

WARRANTY

We warrant that products purchased from authorized distributors will meet the applicable product specifications with no defects in design, assembly, materials or workmanship. We offer a 7-year warranty.

Documents / Resources



<u>ProXtend X701 4K Web Camera</u> [pdf] User Manual X701 4K Web Camera, X701, 4K Web Camera, Web Camera, Camera

References

- X ProXtend | Profitable Business Opportunities
- User Manual

Manuals+, Privacy Policy