



## Contents [ [hide](#) ]

- [1 PS4 CUHYA-0100 Dual Shock 4 Back Button Attachment](#)
- [2 Precautions](#)
- [3 Part names](#)
- [4 Getting started](#)
- [5 Powering up](#)
- [6 Creating profiles](#)
- [7 Starting over](#)
- [8 Specifications](#)
- [9 GUARANTEE](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)

PS4®

## PS4 CUHYA-0100 Dual Shock 4 Back Button Attachment



## Precautions

Before using this product, carefully read this manual and any manuals for compatible hardware. Retain instructions for future reference. For assistance with this product, visit [playstation.com/get-help/](https://playstation.com/get-help/).

## **Safety**

Keep this product out of the reach of small children. Small children may swallow small parts, which may cause injury or damage the product.

- Do not touch the product with wet hands.
- Check that there is no dust or foreign object on the connectors when connecting this product to your wireless controller.

 
## **Use and handling**

- Use this product only with a DUALSHOCK®4 wireless controller.
- Do not let any other metal items come in contact with the connectors.
- Do not place any objects on top of the product. Do not stand on the product.
- Do not throw or drop the product, or otherwise expose it to strong physical impact.
- Do not place the product on surfaces that are unstable, tilted or subject to vibration.
- Never disassemble or modify the product.
- Follow the instructions below to help prevent the product exterior from deteriorating or becoming discoloured.
  - Wipe with a soft, dry cloth.
  - Do not place any rubber or vinyl materials on the product exterior for an extended period of time.
  - Do not use solvents or other chemicals. Do not wipe with a chemically treated cleaning cloth.

## **Storage conditions**

- Do not expose the product to dust, smoke or steam.
- Do not expose the product to high temperatures, high humidity or direct sunlight.
- Do not allow liquid or small particles to get into the product.

## **Part names**

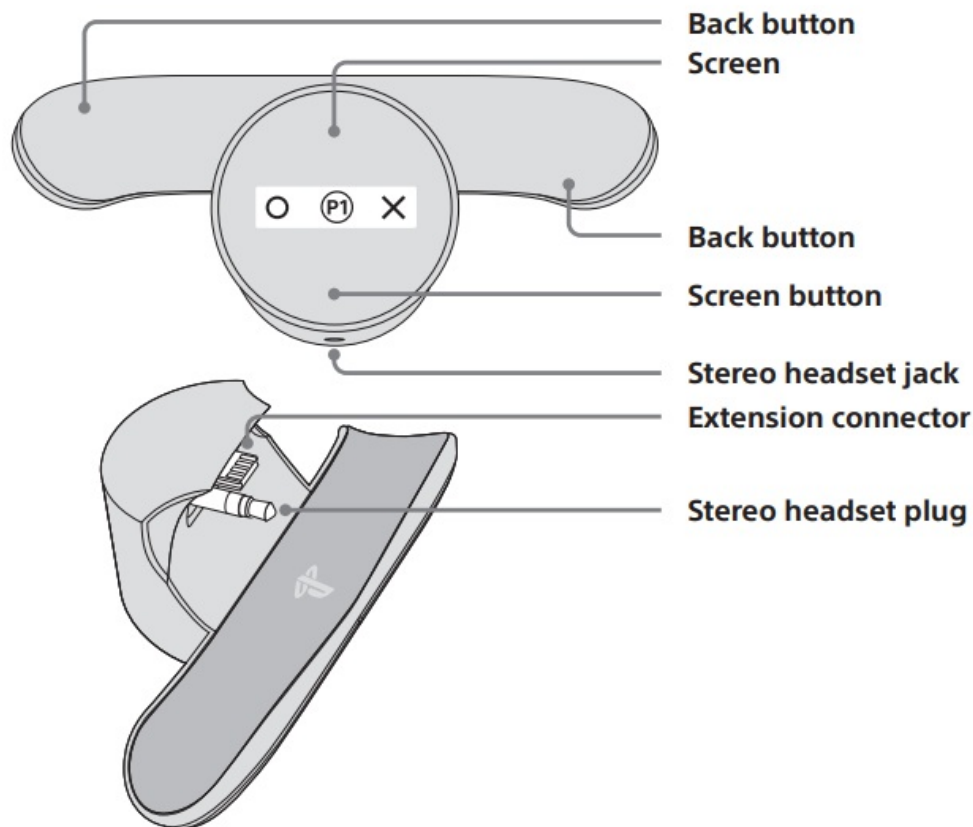

## Getting started

 
The DUALSHOCK®4 back button attachment adds two extra buttons to the back of your DUALSHOCK®4 wireless controller, allowing unused fingers to get into the game. You can program these extra buttons, allowing you to customise your set-up and get the edge with important controls at your fingertips. Each saved assignment is called a profile.

### Before connecting:


Follow these instructions carefully to avoid damaging the connectors on the DUALSHOCK®4 back button attachment and DUALSHOCK®4 wireless controller.

- Turn off your PlayStation®4 system or put it in rest mode before connecting the attachment to your DUALSHOCK®4 wireless controller. If you leave your system on, your controller might not connect properly to the back button attachment.
- Also, your controller must already be paired with your PS4™ system.


1. Hold the back button attachment with your thumb behind the stereo headset plug.

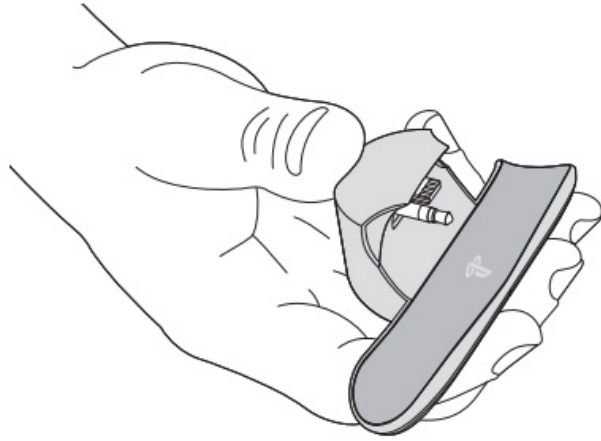


 2. With the attachment's stereo headset plug and the controller's stereo headset jack aligned, firmly push the attachment toward the controller to insert.

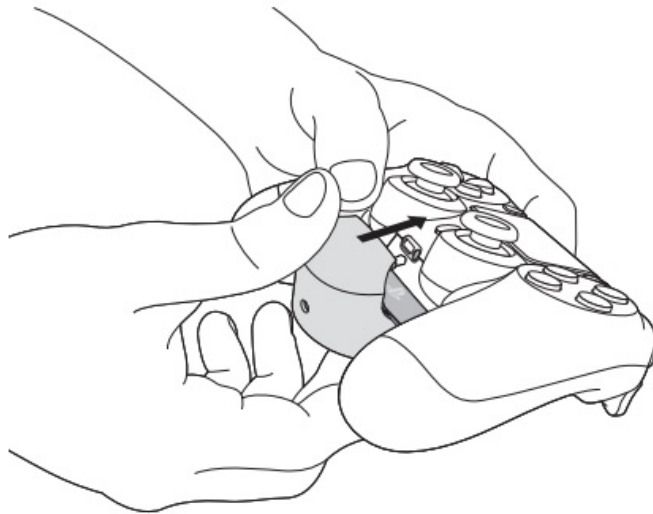

## Powering up

 
1. Press the  (PS) button to turn on your controller.
2. Click the screen button on the attachment. The default profile (P1) appears on the screen.

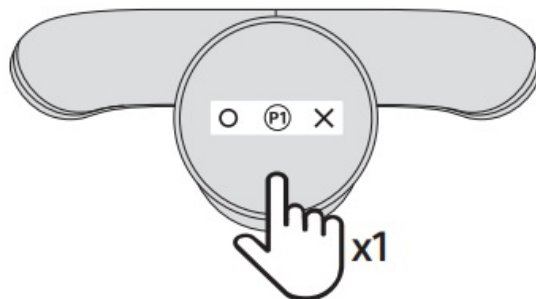

## Creating profiles

You can save up to 3 different profiles (button assignments). The default profiles are as follows:

 
## Default profiles

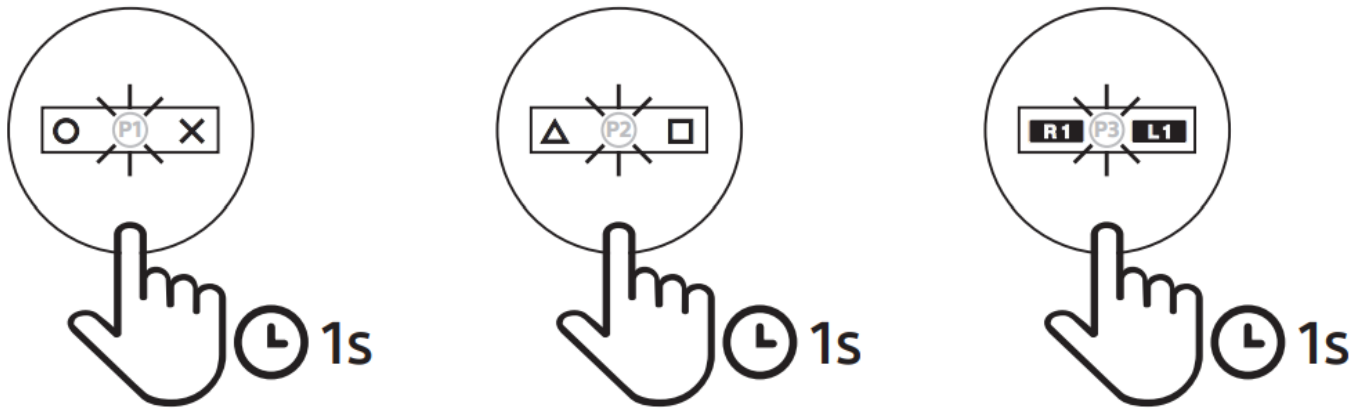

## Customise a profile


Hold the screen button down for 1 second to enter programming mode.

 The profile number in the centre of the screen flashes to let you know you're in programming mode.

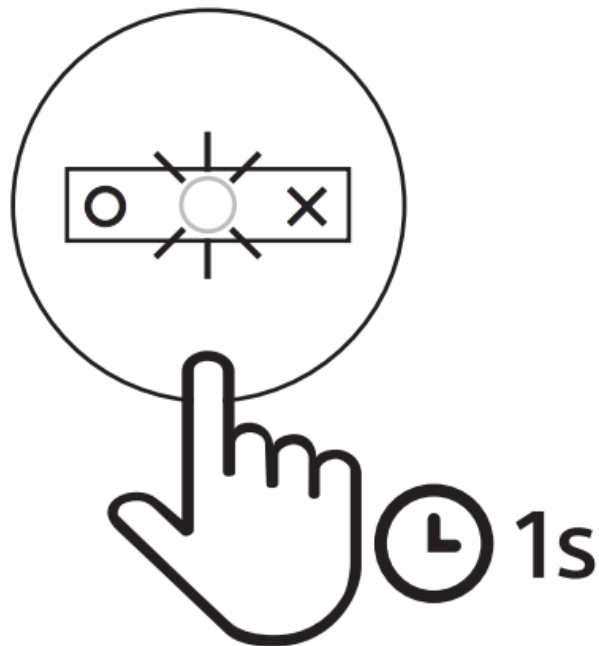


Press the back buttons to select from among the available button assignments.

 Press and hold a back button to scroll through the possible assignments for that back button.

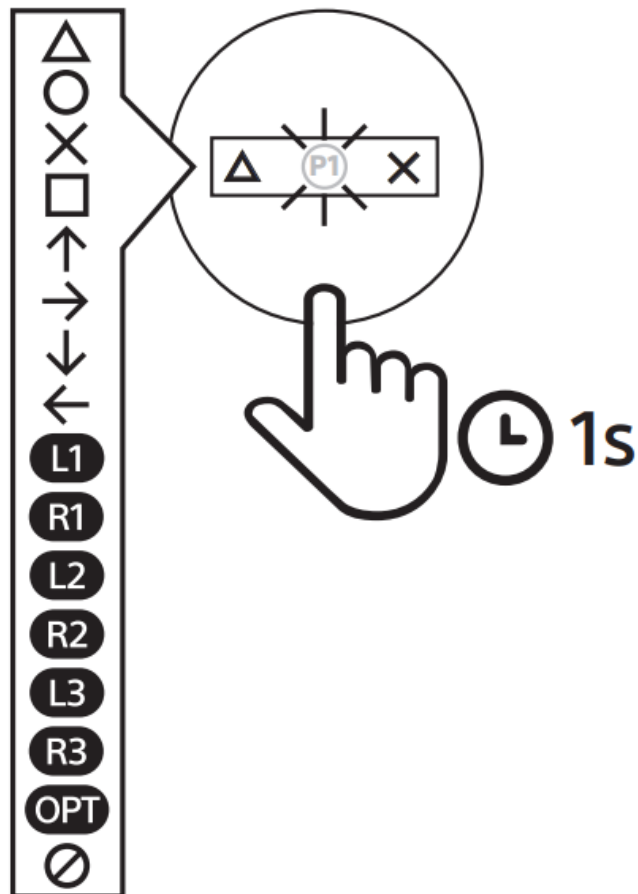

 
Click the screen button once to exit programming mode and save your profile.

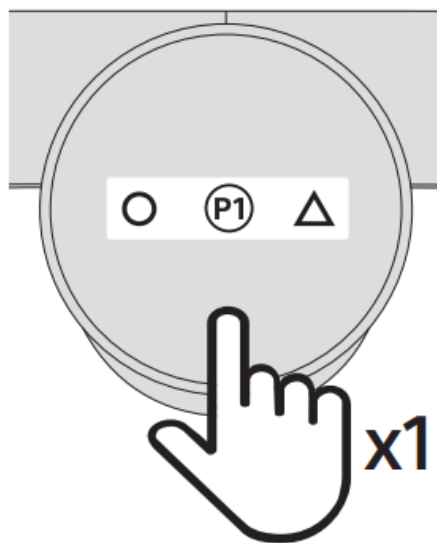



If you want to create another profile, click the screen button once to enter programming mode again, and then click twice to program the next profile.


### Hints

 - In programming mode, the screen turns itself off after 10 seconds of inactivity. When not in programming mode, the screen turns itself off after 3 seconds of inactivity.
- Any customised button assignments made within PS4™ system settings also apply to the attachment.
-  indicates that no button is assigned. When you assign both back buttons in a profile


to , that profile is hidden when not in programming mode.

## Starting over

If you want to reset your attachment to the factory default profiles, press and hold the left back button, right back button, and screen button at the same time. Once the reset  icon appears on the screen, continue to hold for 5 seconds. When  appears, the reset is done.

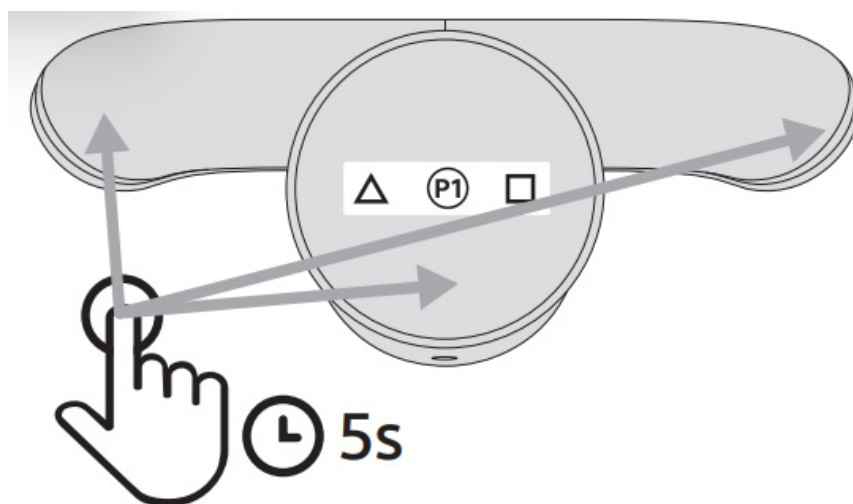

## Specifications

- Input power rating 3.2 V  100 mA
- External dimensions Approx. 101.2 x 4.5 x 39.4 mm
- (excluding projecting parts) (width x height x depth)
- Weight Approx. 26.2 g
- Screen 4,096 pixel OLED display
- Operating temperature 5 °C to 35 °C

Design and specifications are subject to change without notice.


## GUARANTEE

This product is covered for 12 months from date of purchase by the manufacturer's guarantee. Please refer to the guarantee supplied in the PS4™ package for full details.

This product is manufactured for Sony Interactive Entertainment LLC, 2207 Bridgepointe Parkway, San Mateo, CA 94404, United States of America.


Made in China.

“PlayStation”, “DUALSHOCK” and “PlayStation Shapes Logo” are registered trademarks or trademarks of Sony Interactive Entertainment Inc.

 is a registered trademark of Sony Corporation.

© 2019 Sony Interactive Entertainment Europe Limited. All rights reserved.

## Documents / Resources

 <small>PS4</small> <small>Document - DualShock 4 Back Button Attachment</small>  <small>CUHYA-0100</small>	<a href="#">PS4 CUHYA-0100 Dual Shock 4 Back Button Attachment [pdf]</a> Instruction Manual CUHYA-0100, CUHYA-0100 Dual Shock 4 Back Button Attachment, CUHYA-0100, Dual Shock 4 Back Button Attachment, 4 Back Button Attachment, Button Attachment
--	---

## References

- [User Manual](#)

PS4  
4 Back Button Attachment, Button Attachment, CUHYA-0100, CUHYA-0100 Dual Shock 4 Back Button Attachment, Dual Shock 4 Back Button Attachment, PS4

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name



Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.