



PSA WGCS01 Arcade Game Console User Manual

[Home](#) » [PSA](#) » PSA WGCS01 Arcade Game Console User Manual 

PSA WGCS01 Arcade Game Console User Manual



Dear customers:

Thank you sincerely for choosing the legendary Pandora home motherboard!

Contents

- 1 Interface Specification
- 2 Pandora SAGA 40P Connected to Family TV
- 3 40P Connector Instruction
- 4 Mainboard Specification
- 5 Pandora SAGA 78P Connected to Family TV
- 6 28P Connector Instruction
- 7 Mainboard Specification
- 8 Resolution Settings
 - 8.1 Set Menu Instructions
 - 8.2 System Configuration:
 - 8.3 Enter the game settings:
 - 8.4 Currency Management
- 9 Documents / Resources
 - 9.1 References
- 10 Related Posts

Interface Specification



Pandora SAGA 40P Connected to Family TV



40P Connector Instruction

Pandora Box	2P	1P	Pandora Box
N/C	1	1	N/C
N/C	2	2	N/C
N/C	3	3	N/C
2P-H	4	4	1P-H
2P-G	5	5	1P-G
2P-F	6	6	1P-F
2P-E	7	7	1P-E
2P-D	8	8	1P-D
2P-C	9	9	1P-C
2P-B	10	10	1P-B
2P-A	11	11	1P-A
2P-RIGHT	12	12	1P-RIGHT
2P-LEFT	13	13	1P-LEFT
2P-DOWN	14	14	1P-DOWN
2P-UP	15	15	1P-UP
2P-START	16	16	1P-START
PAUSE	17	17	COIN
GND	18	18	GND
N/C	19	19	N/C
N/C	20	20	N/C

Mainboard Specification

CPU: Quad-core Cortex-A7 1.3GHz	Video port: 1*HDMI/1*VGA/2*RGB
GPU: Mali-450MP2	Audio Port: 1*3.5mmAUX port 1*2P Speaker output
RAM: 2GB DDR3/1866MHz	Control interface: 1*40Pin Connector
System Storage: MicroSD(TF) Storage 32GB System Storage: MicroSD(TF)	Power Input: DC 12V/3A
Resolution: 1280*720(720P)/640*480	Work Environment: Humidity 30%-90%
Soundcard: 5.1 surround sound	Product Size: 39CM*26CM*20CM
Joystick Input: 2*USB2.0	Net Weight: 4.5 kg

Pandora SAGA 78P Connected to Family TV



28P Connector Instruction

2P TABLE(Solder Side)		1P TABLE(Parts Side)	
GROUND	A	1	GROUND
GROUND	B	2	GROUND
+5V	C	3	+5V
+5V	D	4	+5V
N/C	E	5	N/C
+12V	F	6	+12V
N/C	H	7	N/C
N/C	J	8	N/C
N/C	K	9	N/C
GROUND	L	10	GROUND
N/C	M	11	N/C
VIDEO GREEN	N	12	VIDEO GREEN
VIDEO SYNC	P	13	VIDEO SYNC
N/C	R	14	N/C
N/C	S	15	N/C
Pause button	T	16	Pause button
1P START	U	17	1P START
1P UP	V	18	1P UP
1P DOWN	W	19	1P DOWN
1P LEFT	X	20	1P LEFT
1P RIGHT	Y	21	1P RIGHT
1P BUTTONAA	Z	22	1P BUTTONAA
1P BUTTONAB	a	23	1P BUTTONAB
1P BUTTONAC	b	24	1P BUTTONAC
1P BUTTONAD	c	25	1P BUTTONAD
1P BUTTONAE	d	26	1P BUTTONAE
1P BUTTONAF	e	27	1P BUTTONAF
GROUND	f	28	GROUND

Mainboard Specification

CPU: Quad-core Cortex-A7 1.3GHz	Video port: 1*HDMI/1*VGA/1*CRT 15KHz
GPU: Mali-450MP2	Audio Port: 1*3.5mmAUX port 1*2P Speaker output
RAM: 2GB DDR3/1866MHz	Control interface: 1*40Pin Connector
System Storage MicroSD (TF) 1Gb System Storage/3 2GB	Power Input: DC 12V/3A
Resolution: 1280*720(720P)/640*480	Work Environment: Temperature5°C-45°C Humidity 30%-90%
Soundcard: 5.1 surround sound	Product Size: 39CM*26CM*20CM
Joystick Input: 2*USB2.0	Net Weight: 4.5 kgProduct Characteristics

Product basic function

- The main board contains classic retro arcade games and home games, everything, the game has been optimized by a number of hardware and software technology developers And through the super high level of enthusiast player test to ensure the original flavor of the game, and strengthen the operation of the fast and accurate, let you in seconds Must fight at the same time to play incisively and vividly.
- The product has the function of picture quality optimization and opening, which can more adapt to the picture quality requirements of the high-definition era.
- Support for HDMI HD digital output 720P to mainstream display devices, as well as downward compatible VGA output to older display devices, and once again Don't worry about a home TV or monitor supporting only one interface and buying an extra video converter.
- **Support language:** Simplified Chinese/Traditional Chinese/English/Korean/Spanish and other languages, customers can choose the language version they want.
- Supports HDM audio AUX audio output and motherboard speaker independent output (which can be turned off through the background settings).
- Support arcade rocker button and handle button custom function, support any handle access suppor: collection of 99 like game top arrangement.
- Support in the game pause, if the game needs to leave for a while but do not want to terminate the game, press the [PAUSE] pause button on the console, the pause menu will pop up in the screen, when the game is suspended, and has been looking forward to your return.

The new model is newer than the older model

- Support the game archiving function, if the game needs to leave for a long time, you can archive the game progress, and turn off the device departure, looking forward to your return loading progress to continue to war at any time. Support the automatic saving of the highest points of the game charts.
- Press the 1P start button in the main menu interface to pop up the nine palace function selection interface in the top right corner, which supports the rapid start to play games, selection of people acid of people plain

(Picture 6) (Picture 7) 3D game classification selection, classification people playing games, and game



classification retrieval.



- 3D games increased to 34, you can download the game copy into the U disk designated path to add games (**note:** the main board basic storage is 32GB, the remaining 2GB of space reserved game archive, please try not to occupy, if you need to add more games, please replace the larger capacity of the U disk, thank you for cooperation!
- It supports 3 or 4 people to play games at the same time, supports single-handed control access to USB control games, and 3-person 4 games to reach more than 100.

Resolution Settings

The motherboard has HDMI and VGA video interface output, HDMI supports default output resolution 1280X720, VGA supports output 1280×720 and 640×480, for example, currently use VGA output, output resolution of 1280×720, if necessary to switch the resolution For 640×480, press the motherboard setting button and power, 3 seconds, the resolution will be switched, the same operation can be switched back to 1280×720. Set the buttons such as **(Picture 2)**

Set Menu Instructions

In the main menu or in the game, press the Settings button to enter the Settings menu.

10 Test:

This option is the test table of the coin pad, the rocker and keys connection is normal



Keys Custom:

Picture 8 This option allows the player to customize the preferred key layout

1. **console key customization:** This option is the arcade console key definition of the 40P access of the main board. If there are no custom changes to the arcade console, this interface defaults to the factory key correspondence. To start a custom key bit, press the 1P or 2P start key for 3 seconds, respectively. For the respective custom states, define the A-H key in the game according to the prompts, and press the start key of 1P to complete the customization. If there is no need to define all the individual keys, then after defining the individual keys, press the 1P start button to complete the customization Other undefined keys are automatically assigned. Press the 1P Start key again to save back to the previous level. **(Picture 9)**




2. gamepad button customization: Motherboard USB can access the standard gamepad, support 90% of the universal gamepad on the market, the custom method is the same as above.
3. recovery default settings: This option has two options, the recovery console button for factory settings. and the recovery handle button for factory settings! Move up and down the selection, the 1P start button confirmation. **(Picture 10)**



System Configuration:

com investment setting

[Free play) is home mode, when the pause button (PAUSE) is opened by default, locted to the pause menu to exit the game. (**Picture 11**)

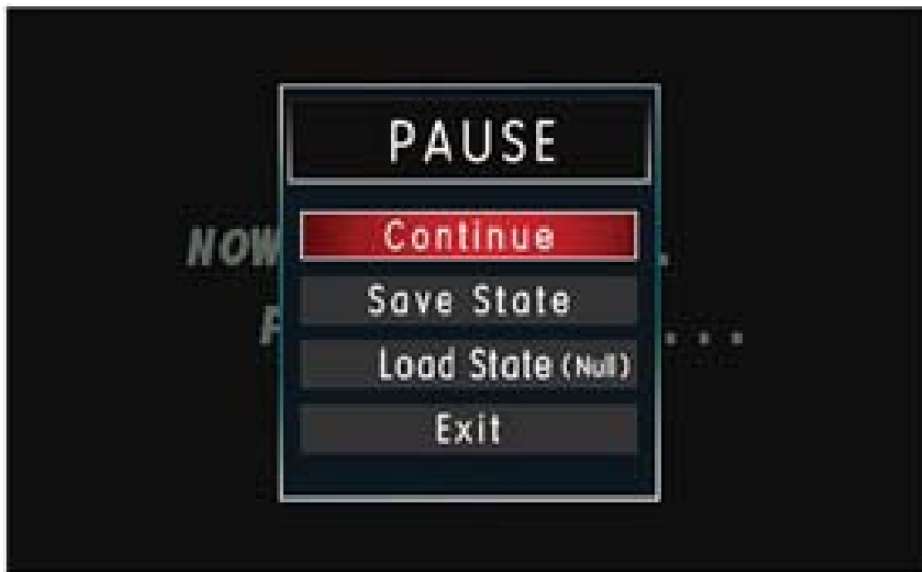

. [1:1 Currency, and 2:1 currency, 911 Money], [1:2 Money 1:9 Currency). This is set as commercial mode to set the cores ponding number of coins or scanning code Payment can only start the game.

exit mode:

This option is designed for commercial mode as an exit mode set in the game to the game menu. It can be set to use [menu exit), (start key coin drop), (hold down the TP startbutton for 3 seconds to exit). [Menu exit Press the 1F start button in the game for 3 seconds, pop-up menu opt out (**Picture 12**),



in this way, the central manager records and saves the number of coins, that is, the number of coins invested in the game, the remaining and not coin in the game can be carried back to the game menu, and can choose to enter other gamesagain. You can also cooperate with the item 3 “pause menu: open”, use the pause button to quickly pop up the menu to opt out. [Start button coin casting) After holding down the 1P sart button: in the game, put the coin into the coin throwing, and you can exit to the game mens. The currently invested 1 coin can be selected to enter other games again. You can also cooperate with item 3 pause menu: open”, use the pause button to quickly pop up the menu i opt out [Hold down the IP start button for 3 seconds Exit! Holst down the IP start key for 3 seconds and exit directly to the game menu. This option does not record any number of coins saved and cannot be carned back to the game menu. You can also cooperate with item a “pause menu: open”, use the pause button to quickly pop up the menu to opt out.

pause menu

[Open] [Close], cooperate with nem 2 “exit mode” for convenient and quick exit.

automatically exth

If the player no longer continues to play the game, the game is idle, after 3 minutes, it will automatically exit the game and go back to the menu interface. Can be set B minutes after the exit)/(close).

preference pattern:

This option is set under the menu interface whether the player needs to invest the game currency to allow the roctick to select the game. This option is not set for free play. Menu exit or Start key coin) mode can set labways allowed) or (allowed when currency only)

painting quality enhancement:

Open/Close, this product opens the picture quality enhancement optimization algorithm by default, and (close), the game uses the original picture quality. After the unanimous recognition of players with more than 20 years of arcade game experience, each generation of products have been continuously optimized and strengthened again, greatly improving the visual effect and meeting the picture standards of the new era.

scanning line

[Open]/[Close] to meet the visual effect of players in the image tube arcade era. it the classic image tube picture reappear.

timing mode:

Home game timing only)/[Full timing), set to be home game timing only, namely arcade games to play games with coins, and home games to use time to play games if setio full timing, arcade games and home games use timed.

playtime

The game is in timing mode, how long a game currency can play games, 1-60 minutes can be set. 10)

handle setting



This mode opens 1P and 2P arcade rocker keys 2 gamepads, can play 4 people at the same time.



This mode opens 1P arcade rocker button +1 handle to play the jame, can play 3 people at the same time.



This made only opens 2 gamepads to play, without 1P and 2P anade rocker keys

Enter the game settings:

1. sets the difficulty and life count:

If you need to set the game difficulty and life number, under the [game set] interface (**Picture 13**)



press key A to enter the set difficulty and life set interface (**Picture 14**),




mobile lever choose the game to set, press key A to set the game difficulty parameters, press B key to set the game life number, no life set will not show the number in the life bar. If the difficulty and life number of a certain game are set, and other games are also set according to the game parameters, please press the C key to open [currently unified setting]. If some games do not have the same difficulty and life number options as the game, it will not change to press the IP start key to return to the previous level interface of the game setting.

2. Edit a list of games:

To hide or display certain games (factory set default all game on), press B to enter [Edit Game List] (**Figure 15**),




pull the rocker to select the game to set, and press A to [Show/hide] this game. The logo  will appear before the hidden game. To open all hidden game menus, press B to match for the [Show all games) option. If you need to run a game, select this game, press the C key, all the other games are hidden, after each boot will automatically enter the game run. Press the 1P startup key to return to the previous level setting interface. –

3. Edit the Favorites List:

If you like playing a game, but its number is low in the list, welcome to use favorites. Under the [Game Settings] interface, press B to enter [Edit Collection List] (**Picture 16**),



pull the rocker to select the game you need to collect, press A, the game will appear 

4. before, indicating that it has been set to collection. Collected games will be displayed at the top of the main menu, the default game menu will be ranked successively after the collection of games, so that it is convenient and fast to start the favorite game. The upper number of collection games is 99. Press C key to cancel all collections and press 1P startup key to return to the previous level.

Currency Management

The product has an account checking function to record the total revenue numbe and display it in the [total game currency record) below the currency management setting. If you need to clear the currency number, you will be prompted to enter the password on the left of the currency management setting (**Picture 17**),



the initial value is 55555555 to change the number, left and right. Enter the currency zero or change the password after determined in A (**Picture 18**).



When you select a modified password, you need to enter the original password confirmation before entering a new password.

Note: If you modify the password, please keep the password properly, so as to avoid unnecessary loss. For help, please contact the.

Built-in speakers

When the user chooses to output sound using the HDMI or AUX3.5mm headphone interface, the option is to turn off the built-in speaker to play sound..

Language

Product support displays (Simplified Chinese)/[Traditional Chinese) in two languages.

Boot Video

Product support [on]/[off] boot up the demo video.

Save Settings

If the above 8 changes need to be saved or do not need to save, please choose the [Save Settings] option, press the button A will pop up the save setting confirmation box, confirm save, please choose, do not save exit, do not lose power, the host will automatically restart and enter the game menu.

Restore The Default Setting

To restore to factory settings, select the [Restore Default Settings] option, press the button A to pop up the recovery setting confirmation box, confirm that please choose Yes, do not recover and exit please choose No. Do not lose power, the host will automatically restart and enter the game menu.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the

 
following measures

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement The device can be used in portable exposure condition without restriction



Documents / Resources



[PSA WGCS01 Arcade Game Console](#) [pdf] User Manual
WGCS01 Arcade Game Console, WGCS01, Arcade Game Console, Game Console, Console

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.